

## Ninja HB150EU

# Ninja Foodi Hot & Cold Blender and Soup Maker HB150EU User Manual

Model: HB150EU

[Important  
Safeguards](#)

[Setup](#)

[Operating  
Instructions](#)

[Care & Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &  
Support](#)

## IMPORTANT SAFEGUARDS

---

Please read all instructions carefully before using your Ninja Foodi Hot & Cold Blender and Soup Maker. Failure to follow these instructions may result in property damage, personal injury, or death.

- Always ensure the appliance is unplugged from the power outlet before assembly, disassembly, or cleaning.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Keep hands and utensils out of the pitcher while blending or cooking to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used only when the blender is not running.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Contact customer service for examination, repair, or adjustment.
- Do not use outdoors. This appliance is for household use only.
- Always operate the blender on a clean, dry, level surface.
- Do not allow the cord to hang over the edge of a table or counter or touch hot surfaces.
- Exercise extreme caution when blending hot liquids to avoid scalding. Always start with the lowest speed setting and gradually increase.
- The pitcher contains a heating element. Do not touch the bottom of the pitcher during or immediately after operation.
- Ensure the lid is securely locked in place before operating the appliance.

## SETUP AND FIRST USE

---

1. **Unpacking:** Carefully remove all parts from the packaging. Retain packaging materials for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the pitcher, lid, and tamper in warm, soapy water. Rinse thoroughly and dry all parts. Wipe the motor base with a clean, damp cloth.
3. **Assembly:**
  - Place the motor base on a clean, dry, level surface.
  - Align the pitcher with the motor base and lower it until it clicks into place. The pitcher handle should be aligned with the front of the motor base.
  - Add ingredients to the pitcher. Do not exceed the MAX FILL line for cold ingredients (1.7L) or the HOT MAX FILL line for hot ingredients (1.4L).
  - Secure the lid onto the pitcher, ensuring it is properly seated and locked.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The power button will illuminate.



Image: The Ninja Foodi Hot & Cold Blender and Soup Maker HB150EU fully assembled, showing the motor base, glass pitcher, and lid with control panel visible.

## OPERATING INSTRUCTIONS

---

The Ninja Foodi HB150EU features 10 Auto-iQ programs and manual settings for blending and cooking.

### Control Panel Overview



Image: A detailed view of the control panel, highlighting the Auto-iQ programs for blending and cooking, manual settings, and the digital display.

- **Power Button:** Turns the unit on/off.
- **Auto-iQ Programs:** Pre-set programs for specific tasks (e.g., SMOOTHIE, FROZEN DRINK, SMOOTH SOUP, CHUNKY SOUP, DESSERT, MILKSHAKE, JAM, SAUCE).
- **Manual Settings:**
  - **BLEND:** Manual blending control.
  - **COOK:** Manual cooking control.
  - **CHOP:** For chopping ingredients.
  - **SAUTE:** For sautéing ingredients before cooking.

- **PULSE:** For short bursts of blending.
- **LOW/MED/HIGH:** Speed settings for manual blending.
- **CLEAN:** Dedicated cleaning program.
- **Digital Display:** Shows remaining time or selected program.

## Using Auto-iQ Programs

1. Add ingredients to the pitcher, observing fill lines.
2. Secure the lid.
3. Select the desired Auto-iQ program (e.g., **SMOOTHIE** for cold blending, **SMOOTH SOUP** for hot cooking and blending). The program will automatically adjust blending and heating patterns.
4. The unit will beep when the program is complete.



Image: A user adding chopped vegetables and chickpeas into the blender pitcher, preparing for a recipe.



Image: A user pouring freshly made, smooth soup from the blender pitcher into a serving bowl, demonstrating the hot blending capability.

## Manual Blending and Cooking

1. Add ingredients and secure the lid.
2. For blending, press **BLEND** and select a speed (LOW, MED, HIGH). Press **PULSE** for short bursts.
3. For cooking, press **COOK**. You can also use **CHOP** or **SAUTE** before cooking to prepare ingredients.
4. Monitor the process and stop the appliance when desired consistency or cooking level is reached.

## CARE AND MAINTENANCE

---

Proper care ensures the longevity and optimal performance of your appliance.

### Cleaning

- **After Each Use:** Unplug the unit. Carefully remove the lid and pitcher.

- **Self-Clean Program:** For easy cleaning, add 700ml of water and two small drops of dish soap to the pitcher. Secure the lid and select the **CLEAN** program. This program will heat and blend to clean the pitcher. After the program finishes, rinse the pitcher thoroughly.
- **Manual Cleaning:** Wash the pitcher, lid, and tamper with warm, soapy water using the included cleaning brush. The pitcher is not dishwasher safe due to the integrated heating element. Do not immerse the motor base in water. Wipe the motor base with a damp cloth.
- **Stubborn Residue:** For baked-on food, fill the pitcher with warm soapy water and let it soak for 10-15 minutes before cleaning.
- Ensure all parts are completely dry before storing.



Image: The blender pitcher filled with water, ready for the self-cleaning function, demonstrating ease of maintenance.

## Storage

- Store the assembled blender in an upright position.
- Do not place anything on top of the blender.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Unit does not turn on.	Unit is not plugged in or power outlet is not active.	Ensure the power cord is securely plugged into a working electrical outlet.
Lid is not properly installed.	Ensure the lid is fully seated and locked onto the pitcher.	
Blender stops during operation.	Overheating due to excessive load or continuous operation.	Unplug the unit and allow it to cool for at least 15 minutes. Reduce ingredient quantity or liquid amount.
Ingredients are not blending smoothly.	Too little liquid or ingredients are too large.	Add more liquid or cut ingredients into smaller pieces. Use the tamper if necessary.
Soup is not hot enough.	Incorrect program selected or insufficient cooking time.	Ensure a "COOK" Auto-iQ program (e.g., SMOOTH SOUP, CHUNKY SOUP) was selected. For manual cooking, increase cooking time.

## PRODUCT SPECIFICATIONS

---

- **Model:** HB150EU
- **Brand:** Ninja
- **Power:** 1000 Watts
- **Voltage:** 220 Volts
- **Capacity (Cold):** 1.7 Liters
- **Capacity (Hot):** 1.4 Liters
- **Material:** Glass pitcher
- **Dimensions (L x W x H):** 42 x 38 x 20 cm (approximate)
- **Weight:** 2.6 Kilograms (approximate)
- **Special Features:** Integrated heating element, Hot and cold blending, 10 Auto-iQ programs, Cleaning program.

## WARRANTY AND SUPPORT

---

For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Ninja website. Do not attempt to repair the appliance yourself. Any servicing other than cleaning should be performed by an authorized service representative.

**Contact Information:** Please visit [www.ninjakitchen.com](http://www.ninjakitchen.com) for support and contact details specific to your region.

