

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CHAOFAN](#) /

› [CHAOFAN Table Tennis Robot Backpack User Manual](#)

**CHAOFAN 55813737**

# CHAOFAN Table Tennis Robot Backpack User Manual

Model: 55813737

## 1. INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your CHAOFAN Table Tennis Robot Backpack. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

## 2. PRODUCT OVERVIEW

The CHAOFAN Table Tennis Robot Backpack is designed for convenient transport and storage of various table tennis robot models. Its robust construction and thoughtful design ensure your equipment is protected and easily portable.



Image 1: The CHAOFAN Table Tennis Robot Backpack in red and black, showcasing its upright design and main zipper.

## Key Features:

- **Compatibility:** Designed to be compatible with popular table tennis robot models such as Hui Pong JT-A, S6, S8, H600, Le Ji master 2040/2050, and similar models.
- **Dimensions:** Backpack size is approximately 86 cm (height) x 34 cm (width) x 28 cm (depth).
- **Portability:** Facilitates convenient movement of your table tennis machine.
- **Lightweight:** Net weight of the backpack is 1.2 kg, with a gross weight of 1.5 kg.
- **Adjustable Straps:** Features adjustable shoulder straps for comfortable carrying.
- **Storage:** Includes a stash pocket for additional items.
- **Closure:** Secure zipper closure.

## 3. SETUP AND USAGE

Follow these steps to properly set up and use your table tennis robot backpack.

1. **Unpack the Backpack:** Carefully remove the backpack from its packaging.
2. **Prepare Your Robot:** Ensure your table tennis robot is folded or configured to its most compact state, suitable for transport. Refer to your robot's specific manual for folding instructions.
3. **Insert the Robot:** Open the main zipper of the backpack. Carefully slide your table tennis robot into the main compartment. Ensure it fits snugly and is centered to distribute weight evenly.
4. **Secure the Robot:** If your robot has any loose parts or nets, ensure they are secured within the backpack or the robot itself to prevent damage during transport.
5. **Close the Backpack:** Zip up the main compartment securely. Use the top buckles to further secure the opening.
6. **Adjust Straps:** Put on the backpack. Adjust the shoulder straps and any waist straps (if present) to ensure a comfortable and secure fit. The weight should be distributed across your shoulders and hips.
7. **Utilize Pockets:** Use the stash pocket for smaller accessories like power cords, remote controls, or extra ping

pong balls.



*Image 2: A folded table tennis robot positioned next to the CHAOFAN backpack, demonstrating its compact size for transport.*



*Image 3: The table tennis robot and the CHAOFAN backpack displayed side-by-side, illustrating their relative sizes.*



Image 4: A table tennis robot being partially inserted into the CHAOFAN backpack, showing the wide opening for easy loading.



Image 5: A person wearing the CHAOFAN backpack, demonstrating how it looks when carried with a table tennis robot inside.



Image 6: A side view of a person wearing the CHAOFAN backpack, highlighting its profile and fit.



Image 7: Detailed view of the backpack's features, including the waist buckle, mesh bottle pocket, and top securing buckle.

## 4. MAINTENANCE

Proper maintenance will extend the life of your CHAOFAN Table Tennis Robot Backpack.

- **Cleaning:** Wipe the exterior with a damp cloth and mild soap if necessary. Do not use harsh chemicals or abrasive cleaners.

- **Drying:** Allow the backpack to air dry completely before storing, especially if it has been exposed to moisture. Do not tumble dry.
- **Storage:** Store the backpack in a cool, dry place away from direct sunlight when not in use.
- **Zipper Care:** Periodically check zippers for smooth operation. If they become stiff, apply a small amount of zipper lubricant.
- **Strap Inspection:** Regularly inspect straps and buckles for any signs of wear or damage. Replace if necessary.

## 5. TROUBLESHOOTING

This section addresses common issues you might encounter with your backpack.

- **Issue:** Robot does not fit inside the backpack.  
**Solution:** Ensure your table tennis robot model is listed as compatible. Verify the robot is folded to its most compact dimensions. The backpack dimensions are 86x34x28 cm.
- **Issue:** Backpack feels uncomfortable or heavy when carried.  
**Solution:** Adjust both shoulder straps evenly. If available, utilize the waist strap to distribute weight to your hips. Ensure the robot is centered within the backpack.
- **Issue:** Zipper is stuck or difficult to move.  
**Solution:** Check for any fabric caught in the zipper teeth. Apply a small amount of zipper lubricant or wax to the teeth and try again.

## 6. SPECIFICATIONS

Feature	Detail
Brand	CHAOFAN
Manufacturer	Hui Pang
Model Number (Part Number)	55813737
UPC	782855813737
Dimensions (H x W x D)	86 cm x 34 cm x 28 cm
Net Weight	1.2 kg
Gross Weight	1.5 kg
Color	Red
Shell Type	Soft
Closure Type	Zipper
Strap Type	Adjustable
Pocket Description	Stash Pocket
Compatible Robot Models	Hui Pang JT-A, S6, S8, H600, Le Ji master 2040/2050, and similar

## 7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original purchase or contact the retailer where the product was acquired. As this is an accessory, its warranty may be tied to the retailer's return policy or the manufacturer's general accessory warranty.

For further assistance, you may also attempt to contact the manufacturer, Hui Pang, or the brand, CHAOFAN, directly through their official channels if available.

© 2024 CHAOFAN. All rights reserved.