

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Rowkin](#) /
- › [Rowkin Bit Charge True Wireless Earbuds User Manual](#)

Rowkin RKWSP8

Rowkin Bit Charge True Wireless Earbuds User Manual

Model: RKWSP8

INTRODUCTION

This user manual provides detailed instructions for the operation, maintenance, and troubleshooting of your Rowkin Bit Charge True Wireless Earbuds. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

The Rowkin Bit Charge earbuds are designed for a premium audio experience with true wireless freedom, featuring touch controls, a portable charging case, and noise reduction capabilities.

PRODUCT OVERVIEW

The Rowkin Bit Charge system includes two true wireless earbuds and a multi-functional portable charging case that also serves as a power bank.



Image: Rowkin Bit Charge True Wireless Earbuds and their portable charging case. The earbuds are small and black, shown next to a sleek, grey rectangular charging case with the Rowkin logo.

SUPERIOR SOUND QUALITY

All new dynamic driver produces
powerfull bass



Image: A close-up view of a single Rowkin Bit Charge earbud, highlighting its compact design and the textured ring details, representing superior sound quality.

Key features include:

- True Wireless Stereo (TWS) connectivity
- Bluetooth 5.0 for stable connection
- Capacitive touch controls
- Integrated microphone with noise reduction
- Portable charging case with power bank functionality
- IPX5 water resistance

SETUP AND FIRST USE

Charging the Case and Earbuds

Before first use, ensure both the charging case and earbuds are fully charged.

1. Connect the charging case to a USB power source using the provided cable. The charging indicator lights on the case will show charging status.
2. Place the earbuds into their respective slots in the charging case. Ensure they are properly seated for charging to begin. The earbuds will show an indicator light when charging.
3. Charging time for earbuds is approximately 90 minutes, and for the portable charging case, it is approximately 150 minutes.



Image: The Rowkin Bit Charge earbuds and charging case are shown alongside a smartphone, illustrating the charging case's ability to charge both the earbuds and act as a power bank for other devices.

Pairing with a Device

The earbuds are designed for easy auto-on pairing.

1. Remove both earbuds from the charging case. They will automatically power on and attempt to pair with each other.
2. Once paired with each other (indicated by a specific light pattern, refer to LED indicator section), open the Bluetooth settings on your smartphone or device.
3. Look for "Rowkin Bit Charge" or a similar name in the list of available devices and select it to connect.
4. Once connected, a voice prompt will confirm the successful pairing.



MULTI-PURPOSE BATTERY

Charge your phone and give your earbuds up to 50+ hours of play time

15x Full Charges
50+ hr
Total music play time



Powerbank
1
full charge
for your smartphone


Image: A pair of Rowkin Bit Charge earbuds, clearly showing the 'L' and 'R' indicators, emphasizing their true wireless nature and readiness for connection.

OPERATING INSTRUCTIONS

Touch Controls

The Rowkin Bit Charge earbuds feature intuitive touch controls on their outer surface.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call or active call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.
- **Activate Voice Assistant (Siri/Google Assistant):** Triple tap on either earbud.

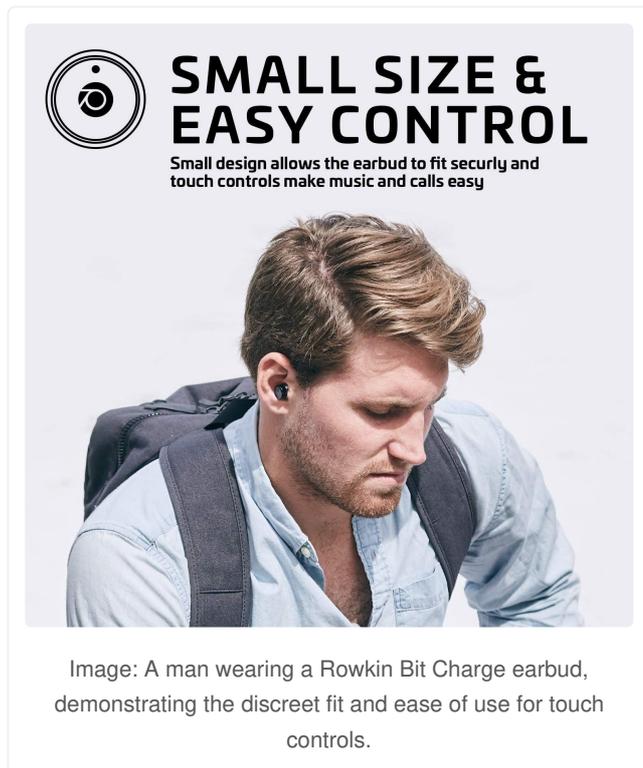

Power On/Off

- **Power On:** Remove earbuds from the charging case. They will automatically power on.
- **Power Off:** Place earbuds back into the charging case. They will automatically power off and begin charging.
- **Manual Power Off:** Press and hold the touch area on both earbuds for approximately 5 seconds until the indicator light turns red and then off.
- **Manual Power On:** Press and hold the touch area on both earbuds for approximately 3 seconds until the indicator light turns blue.

Using the Charging Case as a Power Bank

The portable charging case has a 2100 mAh battery and can be used to charge other USB-powered devices.

1. Connect your device (e.g., smartphone) to the USB output port on the charging case using your device's charging cable.
2. The charging case will automatically begin charging your device.
3. The case can provide approximately one full charge for most smartphones.



TRUE WIRELESS CONNECTION

Strongest and most stable true wireless connection on the market



Image: The Rowkin Bit Charge charging case is depicted with a cable connected, illustrating its function as a power bank for external devices, alongside the earbuds.

MAINTENANCE AND CARE

Proper care ensures the longevity and optimal performance of your earbuds.

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earbuds and charging case. Do not use abrasive cleaners, alcohol, or chemical solvents.
- **Water Resistance:** The earbuds are IPX5 water resistant, meaning they can withstand splashes and light rain. Do not submerge them in water or expose them to strong jets of water. Dry them thoroughly before placing them back in the charging case if they get wet.
- **Storage:** Store the earbuds in their charging case when not in use to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Battery Care:** To preserve battery life, fully charge the earbuds and case at least once every three months if not used regularly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing with each other.	Interference, out of sync.	Place both earbuds back into the charging case, close the lid for 5 seconds, then remove them again. Ensure no other Bluetooth devices are interfering.
Earbuds not connecting to device.	Bluetooth off, earbuds not in pairing mode, device already connected to another Bluetooth accessory.	<ul style="list-style-type: none">• Ensure Bluetooth is enabled on your device.• Forget "Rowkin Bit Charge" from your device's Bluetooth list and re-pair.• Ensure earbuds are fully charged.• Restart your device.

Problem	Possible Cause	Solution
No sound or low volume.	Volume too low, earbud placement, dirty ear tips.	<ul style="list-style-type: none"> • Increase volume on both your device and the earbuds. • Ensure earbuds are properly seated in your ears. • Clean ear tips and speaker mesh.
Charging case not charging.	Faulty cable/adapter, dirty charging port.	<ul style="list-style-type: none"> • Try a different USB cable and power adapter. • Clean the charging port on the case.

SPECIFICATIONS

Feature	Detail
Model Number	RKWSP8
Bluetooth Version	5.0
Earbud Battery Capacity	55 mAh (each)
Charging Case Battery Capacity	2100 mAh
Music/Talk Time	Up to 3 hours (earbuds), 50+ hours with charging case
Charging Time (Earbud)	≤90 minutes
Charging Time (Case)	≤150 minutes
Frequency Response	20Hz-20kHz
Water Resistance Rating	IPX5
Dimensions (Earbud)	14mm (D) x 21mm (L)
Dimensions (Charging Case)	91mm (L) x 41mm (W) x 23.5mm (H)
Weight (Earbud)	0.18 oz (5.2g) each
Weight (Charging Case)	2.93 oz (83g)
Audio Enhancements	Noise reduction and echo cancellation

WARRANTY AND SUPPORT

Warranty Information

The Rowkin Bit Charge True Wireless Earbuds come with a **6-month warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

Customer Support

For technical support, warranty claims, or general inquiries, please contact Rowkin customer service. Visit the official Rowkin website for the most up-to-date contact information.

You can also visit the [Rowkin Store on Amazon](#) for additional product information and support resources.



© 2024 Rowkin. All rights reserved.

Information in this manual is subject to change without notice.