

[Manuals.plus](#) /

› [SOL REPUBLIC](#) /

› SOL REPUBLIC Soundtrack Pro ANC Headphones User Manual

SOL REPUBLIC SOL-HP1410BK

SOL REPUBLIC Soundtrack Pro ANC Headphones User Manual

Model: SOL-HP1410BK

INTRODUCTION

The SOL REPUBLIC Soundtrack Pro ANC Headphones are designed to provide a high-quality audio experience with active noise cancellation. These headphones feature a comfortable over-ear design, long battery life, and intuitive controls for music and calls.



Image: Front view of the SOL REPUBLIC Soundtrack Pro ANC Headphones, showcasing the over-ear design and branding.

SETUP

1. Charging the Headphones

Before initial use, fully charge your Soundtrack Pro ANC headphones. Connect the provided USB-C charging cable to the headphone's charging port and the other end to a compatible USB power source. The LED indicators on the headphone will show the charging status. A full charge provides up to 32 hours of playtime.



Image: Side view of the headphones highlighting the charging port location and control buttons. The image also points out the foldable design, active noise cancellation, and 4-button controls with a microphone.

2. Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the power button until the LED indicator flashes, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "SOL REPUBLIC Soundtrack Pro" from the list of devices.
5. Once connected, the LED indicator will show a solid light or change color, depending on the model.

The headphones have a Bluetooth range of up to 10 meters (33 feet).

OPERATING INSTRUCTIONS

Power On/Off

- To power on, press and hold the power button until the LED indicator lights up.
- To power off, press and hold the power button until the LED indicator turns off.

Music Playback and Volume Control

- **Play/Pause:** Press the multi-function button once.
- **Next Track:** Press the "+" button.
- **Previous Track:** Press the "-" button.
- **Volume Up:** Press and hold the "+" button.
- **Volume Down:** Press and hold the "-" button.

Active Noise Cancellation (ANC)

The Soundtrack Pro headphones feature Active Noise Cancellation to reduce ambient noise. Locate the ANC button on the earcup. Press it once to activate ANC. Press it again to deactivate ANC. The LED indicator will confirm ANC status.

Phone Calls

- **Answer/End Call:** Press the multi-function button once.
- **Reject Call:** Press and hold the multi-function button for 2 seconds.
- **Voice Assistant:** Double-press the multi-function button to activate your device's voice assistant.

Foldable Design

The headphones are designed to fold for compact storage and travel. Carefully fold the earcups inwards towards the headband. This design helps protect the headphones when not in use.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place away from direct sunlight and extreme temperatures. Utilize the foldable design for safe storage.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the headphones regularly, even if not in use for extended periods.
- **Water Exposure:** These headphones are not waterproof. Avoid exposure to water or excessive moisture.

TROUBLESHOOTING

No Power

- Ensure the headphones are fully charged. Connect to a power source and check the charging indicator.
- Verify the charging cable and power adapter are functioning correctly.

Cannot Pair via Bluetooth

- Ensure the headphones are in pairing mode (flashing LED).
- Make sure Bluetooth is enabled on your device and it is within 10 meters of the headphones.
- Forget "SOL REPUBLIC Soundtrack Pro" from your device's Bluetooth list and attempt to pair again.
- Restart both the headphones and your device.

No Sound or Low Volume

- Check the volume levels on both the headphones and your connected device.
- Ensure the headphones are properly connected via Bluetooth.
- If using a wired connection, ensure the 3.5mm audio cable is fully inserted into both the headphones and the audio source.

Active Noise Cancellation Not Working Effectively

- Ensure the ANC feature is activated (check the ANC LED indicator).
- Ensure the earcups are properly sealed around your ears. Adjust the fit for optimal performance.

SPECIFICATIONS

Brand	SOL REPUBLIC
Model Number	SOL-HP1410BK
Color	Black
Ear Placement	Over Ear
Noise Control	Active Noise Cancellation
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Range	10 meters
Battery Average Life	32 hours
Item Weight	0.29 kg
Additional Features	Foldable, Microphone Included, Noise Cancellation

SIZE COMPARISON TO IPHONE 8



Image: Visual comparison of the headphone dimensions against an iPhone 8, showing height and width measurements.

WARRANTY INFORMATION

SOL REPUBLIC products are covered by a limited warranty. Please refer to the warranty card included with your product or visit the official SOL REPUBLIC website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or product inquiries, please visit the official SOL REPUBLIC support page or contact their customer service. Contact information can typically be found on the manufacturer's website or in the product packaging.

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video: An official product overview of the SOL REPUBLIC Soundtrack Pro ANC Headphones, demonstrating key features and design. This video is provided by Amazon Videos.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question