

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal NE105838 Meat Grinder User Manual

Tefal NE1058

Tefal NE105838 Meat Grinder User Manual

Model: NE1058

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

1.1 General Safety

- Always ensure the appliance is unplugged before assembly, disassembly, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Avoid contact with moving parts.
- Never feed food by hand. Always use the food pusher provided.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.

1.2 Electrical Safety

- Ensure your mains voltage corresponds to the voltage stated on the rating plate of the appliance.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Unplug from outlet when not in use and before cleaning.

2. PRODUCT OVERVIEW

The Tefal NE105838 is a powerful 1400W electric meat grinder designed for efficient food processing. It comes with various accessories for different grinding needs.



Image: The Tefal NE105838 meat grinder, showcasing the main unit, grinding head, hopper, food pusher, two grinding plates, and a sausage stuffing attachment.

2.1 Components

1. Motor Unit
2. Grinding Head (includes auger, cutting blade, grinding plate, locking ring)
3. Hopper Tray
4. Food Pusher
5. Grinding Plates (fine, medium, coarse)
6. Sausage Stuffing Attachment
7. On/Off/Reverse Switch

3. SETUP AND ASSEMBLY

Before first use, wash all parts that will come into contact with food in warm soapy water, rinse thoroughly, and dry immediately. The motor unit should only be wiped with a damp cloth.

3.1 Assembling the Grinding Head

1. Insert the auger into the grinding head.

2. Place the cutting blade onto the square shaft of the auger, ensuring the sharp edges face outwards towards the grinding plate.
3. Select the desired grinding plate (fine, medium, or coarse) and place it over the cutting blade, aligning the notch on the plate with the pin on the grinding head.
4. Screw the locking ring onto the grinding head clockwise until it is securely tightened. Do not overtighten.

3.2 Attaching the Grinding Head to the Motor Unit

1. Align the assembled grinding head with the opening on the front of the motor unit.
2. Insert the grinding head and turn it counter-clockwise until it locks securely into place.
3. Place the hopper tray onto the top of the grinding head.



Image: The assembled Tefal NE105838 meat grinder with the sausage stuffing attachments placed next to it, illustrating the complete setup.

4. OPERATION

4.1 Preparing Ingredients

- Cut meat into pieces approximately 2-3 cm (1 inch) in size. Remove bones, gristle, and excessive fat.
- For best results, chill meat slightly before grinding.

4.2 Grinding Meat

1. Ensure the appliance is properly assembled and plugged into a suitable power outlet.

2. Place a bowl or container under the grinding head to collect the ground meat.
3. Turn the On/Off/Reverse switch to the 'On' (I) position.
4. Place the prepared meat pieces into the hopper tray.
5. Use the food pusher to gently guide the meat into the grinding head. **Never use your fingers or any other utensil.**
6. After grinding, turn the switch to the 'Off' (O) position and unplug the appliance.



Image: The Tefal NE105838 meat grinder actively processing meat, with ground meat visible at the output and a bowl ready to collect it.

4.3 Using the Reverse Function (R)

If the grinding head becomes clogged, turn the switch to the 'Reverse' (R) position. This will rotate the auger in the opposite direction to clear blockages. Once cleared, return the switch to 'Off' (O) before resuming normal operation.



Image: A close-up view of the control switch on the Tefal NE105838 meat grinder, showing the 'On' (I), 'Off' (O), and 'Reverse' (R) settings.

4.4 Sausage Making (Optional)

To make sausages, replace the grinding plate and cutting blade with the sausage stuffing attachment. Follow the assembly instructions for the grinding head, then attach the sausage cone. Prepare your sausage mixture and feed it into the hopper, using the food pusher to guide it through the cone into sausage casings.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your appliance.

5.1 Disassembly for Cleaning

1. Ensure the appliance is unplugged.
2. Remove the hopper tray.
3. Turn the grinding head clockwise to unlock and remove it from the motor unit.

4. Unscrew the locking ring, remove the grinding plate, cutting blade, and auger from the grinding head.

5.2 Cleaning Instructions

- **Motor Unit:** Wipe the exterior of the motor unit with a soft, damp cloth. Do not immerse in water or rinse under running water.
- **Metal Parts (Grinding Head, Auger, Cutting Blade, Grinding Plates, Locking Ring):** Wash immediately after use in warm soapy water. Rinse thoroughly and dry completely with a soft cloth to prevent rust. These parts are not dishwasher safe.
- **Plastic Parts (Hopper Tray, Food Pusher, Sausage Attachments):** Wash in warm soapy water. Rinse thoroughly and dry. These parts may be dishwasher safe on the top rack, but hand washing is recommended for longevity.

5.3 Storage

Store the clean and dry appliance and its accessories in a cool, dry place, away from direct sunlight and moisture.

6. TROUBLESHOOTING

If you encounter issues with your meat grinder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Motor stops during operation.	Overload or blockage.	Turn off the appliance, unplug it, and clear any blockages. Use the reverse function if necessary. Allow the motor to cool down if it was overloaded.
Meat is not grinding properly or comes out mushy.	Dull cutting blade, incorrect assembly, or meat not chilled.	Check if the cutting blade is installed correctly (sharp edge facing outwards). Ensure the meat is properly chilled and cut into appropriate sizes. The cutting blade may need replacement if it is dull.
Loud noise during operation.	Improper assembly or foreign object.	Ensure all parts are correctly assembled and securely locked. Check for any foreign objects in the grinding head.
Appliance does not turn on.	Not plugged in, power outage, or faulty switch.	Check if the power cord is securely plugged into a working outlet. Verify power supply. If the issue persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	NE1058
Power	1400 W
Color	Black
Product Dimensions (L x W x H)	1.1" x 9.7" x 6.5"
Voltage	230 Volts (AC)

Feature	Detail
Item Weight	6.16 pounds
Recommended Uses	Meat grinding, sausage making, fruit and vegetable processing

8. WARRANTY AND SUPPORT

Tefal products are manufactured to high quality standards. This product is covered by a manufacturer's warranty, subject to the terms and conditions provided at the time of purchase. Please retain your proof of purchase for any warranty claims.

For technical assistance, spare parts, or service, please contact your local Tefal authorized service center or visit the official Tefal website for support information.

© 2024 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0817675FK>

More documents and user manuals: <https://manuals.plus/>