

[manuals.plus](#) /› [Dyson](#) /› [Dyson V11 Animal Cordless Vacuum Cleaner User Manual](#)

## Dyson V11 Animal

# Dyson V11 Animal Cordless Vacuum Cleaner User Manual

Model: V11 Animal

## INTRODUCTION

The Dyson V11 Animal is a powerful and versatile cord-free vacuum cleaner designed for deep cleaning across various floor types and surfaces. Featuring advanced Dyson Digital motor V11 technology, it delivers strong suction and whole-machine filtration to capture microscopic dust and allergens. Its intelligent High Torque cleaner head adapts suction power automatically, ensuring efficient cleaning. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Dyson V11 Animal vacuum.





Figure 1: Dyson V11 Animal Cordless Vacuum Cleaner, showcasing its sleek design and purple wand.

## WHAT'S IN THE BOX

---

Your Dyson V11 Animal vacuum comes with the following components:

- High Torque cleaner head
- Mini-motorized tool
- Crevice tool
- Stubborn dirt brush
- Combination tool
- Wand storage clip
- Docking station
- Charger

## SETUP

---

### 1. Assembly

Assemble the main body of the vacuum with the wand and desired cleaner head. Ensure all connections click securely into place.

### 2. Charging the Battery

Before first use, fully charge the battery. The docking station can be mounted on a wall for convenient storage and charging. Connect the charger to the docking station and plug it into a power outlet.



Figure 2: The Dyson V11 Animal charging on its wall-mounted docking station.

The LCD screen on the vacuum will display the battery level and charging status.

## OPERATING INSTRUCTIONS

---

### 1. Power Modes

The Dyson V11 Animal features multiple power modes to suit different cleaning tasks and maximize runtime:

- **Eco Mode:** Provides the longest runtime for everyday cleaning on all floor types.
- **Auto Mode:** Intelligently adapts suction power between carpets and hard floors for optimal cleaning and runtime.
- **Boost Mode:** Delivers maximum suction for intensive spot cleaning of ground-in dirt. This mode reduces runtime.

Use the mode selection button on the LCD screen to switch between modes.

## 2. Cleaning Surfaces

The High Torque cleaner head is designed for deep cleaning carpets and hard floors. For delicate surfaces or tight spaces, detach the wand and use the appropriate accessory tool.





Figure 3: The Dyson V11 Animal effectively cleaning both carpeted and hard floor surfaces.

The mini-motorized tool is ideal for removing pet hair and dirt from upholstery and stairs, featuring an anti-tangle screw design.



Figure 4: The Dyson V11 Animal efficiently removing pet hair from carpet.

## MAINTENANCE

---

### 1. Emptying the Bin

Empty the bin as soon as the dirt reaches the MAX level. To empty, hold the vacuum over a trash can, push the red lever down, and the bin will open, releasing the dirt hygienically.



Figure 5: Demonstrating the hygienic 'point and shoot' bin emptying mechanism of the Dyson V11 Animal.

## 2. Washing the Filter

The whole-machine filtration system is washable. Remove the filter by twisting the purple top section. Wash the filter under cold water until the water runs clear. Allow it to air dry completely for at least 24 hours before reinserting.

## 3. Cleaning the Brush Bar

Periodically check the cleaner head's brush bar for tangled hair or debris. The anti-tangle screw design minimizes tangles, but occasional cleaning may be necessary. Remove the brush bar as per the instructions in the full manual (not provided here) and clear any obstructions.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No power/Vacuum not turning on	Battery not charged; Charger not connected properly.	Ensure vacuum is fully charged. Check charger connection to docking station and power outlet.
Reduced suction power	Bin is full; Filter needs washing; Blockage in cleaner head or wand.	Empty the bin. Wash and thoroughly dry the filter. Check for and clear any blockages.
Brush bar not spinning	Obstruction in brush bar; Cleaner head not properly attached.	Remove any tangled hair or debris from the brush bar. Ensure the cleaner head is securely attached.
Short runtime	Using Boost mode excessively; Battery degradation.	Use Eco or Auto mode for longer cleaning sessions. If battery life significantly degrades, consider battery replacement.

## SPECIFICATIONS

Feature	Detail
Brand	Dyson
Model	V11 Animal
Special Feature	Bagless
Filter Type	Disk (Washable)
Is Cordless?	Yes
Runtime	Up to 60 minutes (varies by power mode/attachments)
Charging Time	4.5 Hours
Form Factor	Handheld / Stick
Color	Purple
Battery Type	Lithium-Ion
Dimensions (L x W x H)	36 x 6 x 11 inches
Item Weight	6.68 pounds
Number of Power Levels	3 (Eco, Auto, Boost)
Filtration	Whole-machine filtration captures 99.97% of microscopic dust particles as small as 0.3 microns.

## WARRANTY AND SUPPORT

The Dyson V11 Animal (Renewed) typically comes with a 90-day limited warranty. For specific warranty details, product support, or to purchase replacement parts, please refer to the official Dyson website or contact Dyson customer service. For additional support, you may also refer to the [Amazon Renewed Store](#) for information regarding renewed products and their guarantee.

© 2023 Dyson. All rights reserved.