

## Cuchen CJE-A0305

# Cuchen Electric Mini Rice Cooker CJE-A0305 User Manual

**Brand:** Cuchen

**Model:** CJE-A0305

## 1. IMPORTANT SAFEGUARDS

---

Please read all instructions carefully before using your Cuchen Electric Mini Rice Cooker. Retain this manual for future reference. Improper use can result in damage to the appliance or personal injury.

- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage rating of the appliance matches your local power supply. This appliance operates on 220V.
- Keep out of reach of children.
- Always unplug the rice cooker from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Use only accessories recommended by the manufacturer.
- Avoid touching hot surfaces. Use handles or knobs.

## 2. PRODUCT OVERVIEW

---

The Cuchen Electric Mini Rice Cooker CJE-A0305 is designed for efficient and convenient rice cooking for small households. It features a compact design, an intuitive LCD display, and easy-to-clean components.



Figure 2.1: Cuchen Electric Mini Rice Cooker CJE-A0305 shown with a bowl of cooked rice.



Figure 2.2: Top-down view of the Cuchen Electric Mini Rice Cooker, highlighting its compact design.

### Key Features:

- **Compact Size:** Designed to cook up to 3.5 rice bowls, ideal for 3 people.
- **Versatile Cooking:** Capable of preparing various dishes including steamed foods, multi-grain rice, baby food, and porridge.
- **Automatic Steam Cleaning:** Ensures hygienic maintenance and prevents nozzle blockage.
- **Separable Clean Inner Cover:** Allows for easy removal and thorough cleaning.
- **LCD Display:** Provides clear information for easy checking of cooking status and menu selection.



Figure 2.3: The CJE-A0305 is a compact rice cooker, suitable for approximately 3.5 rice bowls.



Figure 2.4: The Cuchen rice cooker supports various cooking modes for different types of meals.

### 3. SETUP AND BEFORE FIRST USE

#### 3.1 Unpacking

Carefully remove all packaging materials from the rice cooker. Check for any damage during transit. Ensure all components, including the inner pot and power cord, are present.

#### 3.2 Initial Cleaning

Before first use, wash the inner pot and the separable inner cover with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.

#### 3.3 Power Connection

This appliance operates on **220 Volts**. It is equipped with a Korean plug type C or F (EU) with two round pins. If your region uses 110V (e.g., USA, Canada), a step-up voltage converter is required. A plug adapter may also be needed but does not convert voltage.

## **\*\*Note!**

**You're buying electronic goods of 220V.  
You may need a step up voltage converter  
for 110V(ex. USA, Canada).**



**Korean plug type is C or F (EU) with two round pins.  
A plug adapter can be added on demand.  
Please leave a comment when you checkout.**

**✘ Plug adapter cannot convert voltage.**



Figure 3.1: Important notice regarding the 220V power requirement and the necessity of a step-up voltage converter for 110V regions. Plug adapters do not convert voltage.

Connect the power cord to the rice cooker and then plug it into a suitable 220V wall outlet or a properly rated step-up voltage converter.

## **4. OPERATING INSTRUCTIONS**

### **4.1 Basic Rice Cooking**

1. Measure the desired amount of rice using the provided measuring cup. Rinse the rice thoroughly.
2. Place the rinsed rice into the inner pot.
3. Add water according to the markings inside the inner pot or your preference. For optimal results, refer to the rice-to-water ratio guidelines for your specific rice type.
4. Place the inner pot into the main unit and close the lid securely.
5. Plug in the rice cooker. The LCD display will illuminate.
6. Select the desired cooking mode (e.g., White Rice, Multi-Grain) using the control panel buttons.

7. Press the 'Start' button to begin cooking. The cooker will automatically switch to 'Keep Warm' mode once cooking is complete.

## 4.2 Using the LCD Display

The LCD display provides real-time information about the cooking process, selected menu, and remaining time. Use the navigation buttons around the display to select different cooking functions or adjust settings.



Figure 4.1: The LCD display allows for easy monitoring and selection of cooking functions.

## 4.3 Specialized Cooking Modes

This rice cooker offers various modes for different food preparations:

- **Multi-Grain:** Optimized for cooking various mixed grains.
- **Baby Food:** Prepares soft and easily digestible food for infants.
- **Porridge:** Ideal for creamy and consistent porridge.
- **Steamed Cooked Foods:** Use for steaming vegetables or other items.

Refer to the specific recipes or the detailed instructions in the full manual for precise water levels and cooking times for each mode.

## 5. CARE AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your rice cooker.

### 5.1 Cleaning the Inner Pot and Inner Cover

After each use, unplug the rice cooker and allow it to cool completely. Remove the inner pot and the separable inner cover. Wash them with warm, soapy water and a soft sponge. Rinse thoroughly and dry completely before reassembling.



Figure 5.1: The separable inner cover can be easily detached for thorough cleaning, promoting hygienic use.

## 5.2 Automatic Steam Cleaning

The rice cooker features an automatic steam cleaning function to prevent blockage of the steam nozzle and maintain hygiene. To use this function, ensure the inner pot is empty or contains only water for cleaning, then select the 'Steam Clean' option on the control panel and start the cycle.



Figure 5.2: The automatic steam cleaning function helps maintain internal hygiene and prevents nozzle blockages.

## 5.3 Exterior Cleaning

Wipe the exterior of the rice cooker with a soft, damp cloth. Do not use abrasive cleaners or scourers. Ensure

no water enters the electrical components.

## 6. TROUBLESHOOTING

---

If you encounter any issues with your rice cooker, please refer to the following common problems and solutions:

- **Cooker does not turn on:**
  - Check if the power cord is securely plugged into both the cooker and the wall outlet/converter.
  - Ensure the power outlet is functional.
  - Verify that the correct voltage (220V) is being supplied, especially if using a converter.
- **Rice is undercooked or overcooked:**
  - Ensure the correct rice-to-water ratio was used.
  - Check that the lid is properly closed during cooking.
  - Confirm the correct cooking mode was selected for the type of rice.
- **Steam leakage from the lid:**
  - Check if the inner cover and lid gasket are properly installed and clean.
  - Ensure there is no food debris obstructing the lid's seal.
- **Unusual odors during operation:**
  - A slight odor may occur during initial uses; this is normal.
  - If odors persist or are strong, ensure the cooker is clean and free of food residue.

If the problem persists after attempting these solutions, please contact customer support.

## 7. SPECIFICATIONS

---

Feature	Specification
Brand	Cuchen
Model Name	CJE-A0305 (Mini Rice Cooker)
Capacity	0.63 liters (for 3 people / 3.5 rice bowls)
Product Dimensions (D x W x H)	10.24" x 9.53" x 8.07" (26cm x 24.2cm x 20.5cm)
Power Source	Corded Electric
Voltage	220 Volts
Wattage	10 Watts
Item Weight	4 Kilograms
Color	Pink
Special Features	Removable Bowl, Automatic Steam Cleaning, Separable Clean Inner Cover, LCD Display

Included Components	Inner Pot, Instruction Manual
UPC	880805270224

## 8. WARRANTY AND CUSTOMER SUPPORT

---

For warranty information or customer support inquiries, please refer to the warranty card included with your product or contact the retailer from whom you purchased the appliance. You may also visit the official Cuchen website for further assistance.

Please have your model number (CJE-A0305) and purchase date available when contacting support.