

SURKER K7S-golden

SURKER Hair Clippers User Manual

Model: K7S-golden | Brand: SURKER

1. INTRODUCTION

Thank you for choosing the SURKER Hair Clippers. This professional grooming kit is designed for precise and comfortable hair cutting and beard trimming. Please read this manual thoroughly before use to ensure proper operation, maintenance, and safety.

2. SAFETY INFORMATION

- Keep away from water. This appliance is not waterproof and should not be used near water or in wet conditions.
- Handle with care. Avoid dropping the clipper as it may damage the internal components or blades.
- Avoid using while charging. For optimal battery life and safety, do not operate the clipper while it is connected to the charger.
- Keep out of reach of children.
- Do not disassemble the clipper. Refer to qualified personnel for repairs.
- Use only the provided charging cable.

3. PRODUCT OVERVIEW & COMPONENTS

The SURKER Hair Clipper kit includes the following items:

- SURKER Hair Clipper (Model: K7S-golden)
- USB Fast-Charge Cable
- 8 Guide Combs (1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm, 16mm, 19mm)
- Cleaning Brush
- Lubricating Oil
- User Manual (this document)



Image: SURKER Hair Clipper, various guide combs, USB charging cable, and cleaning accessories.

4. SETUP

4.1 Initial Charging

Before first use, ensure the clipper is fully charged. The LED display will show the battery percentage.

1. Connect the USB fast-charge cable to the charging port at the bottom of the clipper.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a computer's USB port.
3. Charge for approximately 3 hours for a full charge, providing up to 240 minutes of run time. The LED display will indicate 100% when fully charged.

USB QUICK CHARGING

Charging anytime anywhere with USB quickcharge cable

Large capacity battery

Charging time: 3 Hours

Operation time: 4 Hours



Image: The SURKER Hair Clipper connected to a USB cable for charging, showing the LED display.

4.2 Attaching Guide Combs

The clipper comes with 8 guide combs for various cutting lengths.

1. Select the desired guide comb (e.g., 1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm, 16mm, 19mm).
2. Align the comb with the clipper blade and push it firmly until it clicks into place. Ensure it is securely attached.
3. To remove, gently pull the comb away from the blade.

MULTIPLE LENGTH CONTROL

8 Guide Combs and Three Adjustment Lever



1.5 mm



4.5 mm



3 mm



6 mm



10 mm



13 mm



16 mm

 


19 mm

Adjust lever



Guide Comb

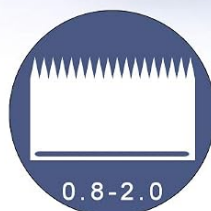

Taper Lever



Guide Combs


0.8-21mm Length

Image: The SURKER Hair Clipper demonstrating the attachment of a guide comb, with various comb sizes displayed.

5. OPERATING INSTRUCTIONS

5.1 Basic Hair Cutting

 1. Ensure the clipper is fully charged and the desired guide comb is attached.
2. Turn on the clipper using the power switch.
3. Adjust the thumb taper lever (0.8mm to 2.0mm) for fine-tuning the cutting length.
4. Begin cutting hair against the direction of hair growth, using smooth, even strokes.
5. For best results, keep the blades clean during use by periodically brushing away hair clippings.

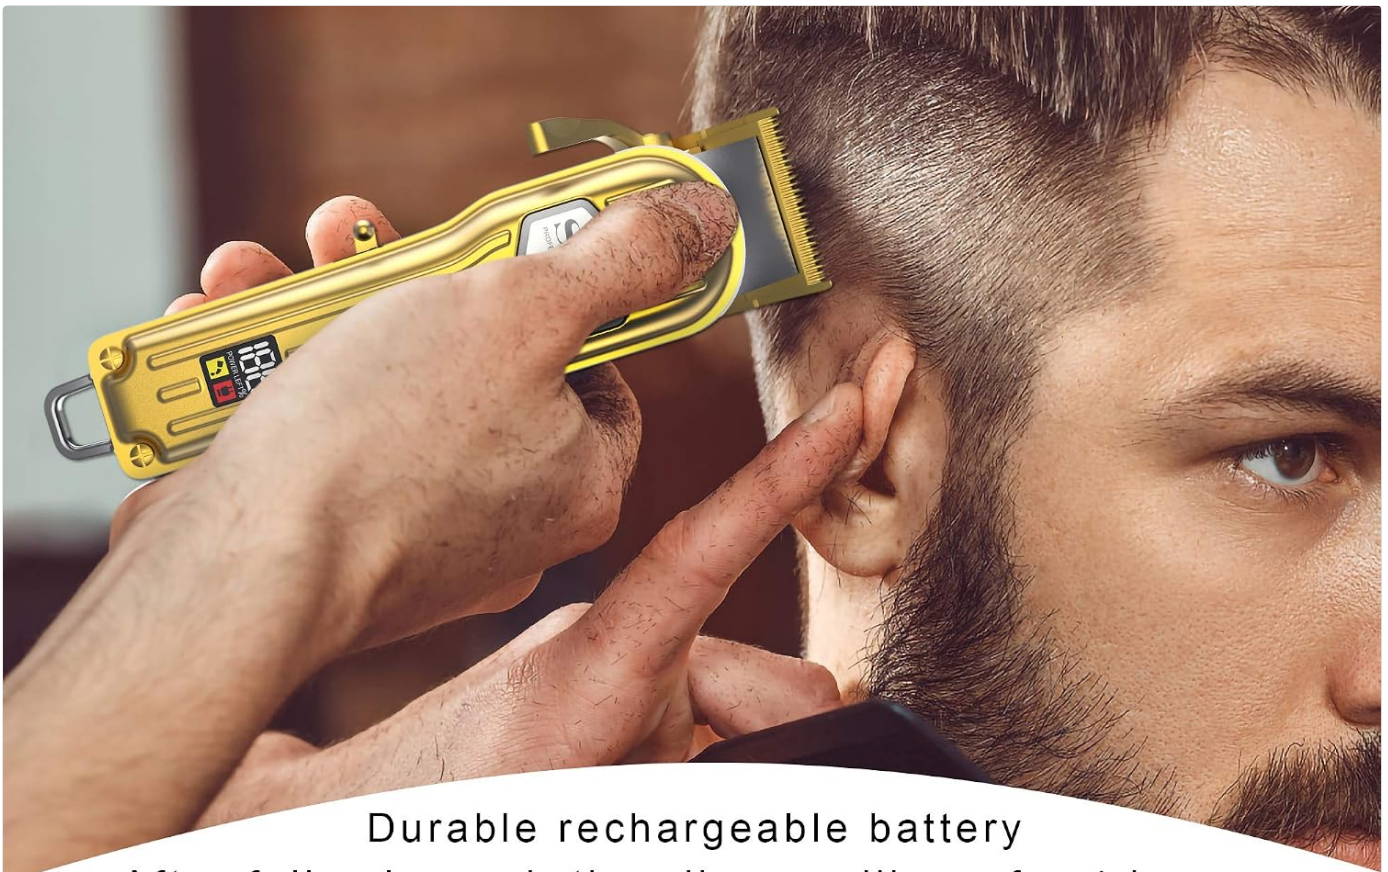

Durable rechargeable battery

After fully charged, the clipper will run for 4 hours.


SHARP BLADE WITH ADJUSTABLE TAPER LEVELS



Sharp blade



Adjustable lengths
from 0.8mm-2.0mm

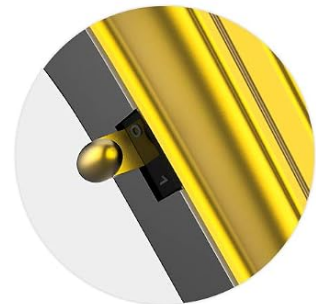

Single speed
for shaving

Image: A man receiving a haircut using the SURKER Hair Clippers, demonstrating its use for precise cutting.

5.2 Beard Trimming

The clipper is also suitable for beard trimming and grooming.

1. Select a longer guide comb initially and gradually reduce the length as desired.
2. Trim your beard in the direction of hair growth for a smoother finish.
3. Use the clipper without a comb for precise edging and detailing around the neckline and beard lines.

ACCURATE CUTTING

Precise and comfortable

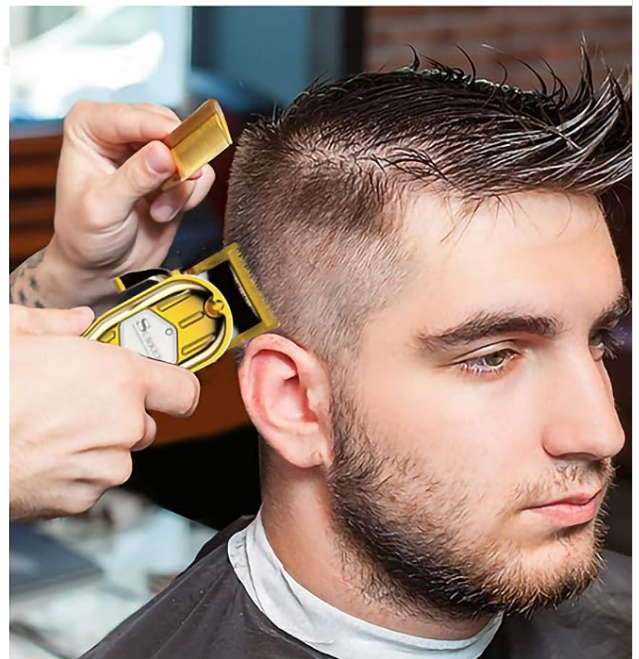 
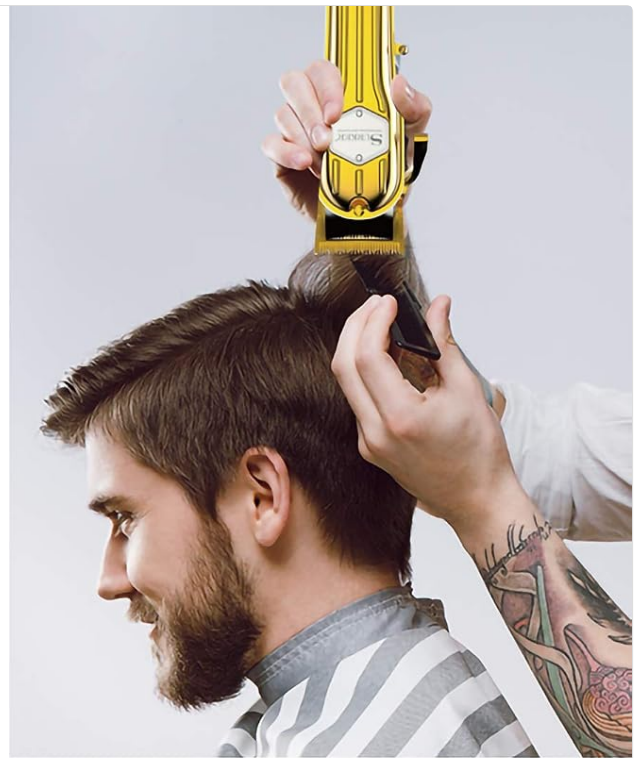 


Image: A man using the SURKER Hair Clippers to trim his beard, highlighting its versatility for facial hair grooming.

6. MAINTENANCE

6.1 Cleaning the Blades

Regular cleaning ensures optimal performance and extends the life of your clipper.

1. After each use, turn off the clipper and remove any attached guide comb.
2. Use the provided cleaning brush to remove loose hairs from the blades and the clipper body.
3. For a more thorough cleaning, you may carefully detach the blade assembly (refer to product diagrams if available) and brush away trapped hairs.

6.2 Oiling the Blades

To maintain blade sharpness and smooth operation, oil the blades regularly.

1. Apply a few drops of the provided lubricating oil evenly across the top and sides of the blades.
2. Turn on the clipper for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a soft cloth.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on or low power.	Battery is low or depleted.	Charge the clipper fully (approx. 3 hours).
Blades pulling hair or cutting poorly.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If problem persists, blades may need replacement.
Clipper making unusual noise.	Hair trapped in blades or internal mechanism.	Clean the blades thoroughly. If noise continues, contact customer support.
Guide comb not attaching securely.	Incorrect alignment or debris.	Ensure proper alignment and clear any debris from the attachment points.

8. SPECIFICATIONS

- **Model:** K7S-golden
- **Brand:** SURKER
- **Blade Material:** High-carbon steel
- **Adjustable Taper Lever:** 0.8mm to 2.0mm
- **Guide Combs:** 1.5mm, 3mm, 4.5mm, 6mm, 10mm, 13mm, 16mm, 19mm
- **Battery Type:** Rechargeable (1 AAA battery included)
- **Charging Time:** Approximately 3 hours
- **Run Time:** Up to 240 minutes
- **Product Dimensions:** 6.42 x 9.41 x 2.91 inches; 1.43 Pounds
- **Item Weight:** 650 Grams
- **Country of Origin:** China

9. WARRANTY & SUPPORT

Please feel free to contact us if you encounter any problems with your SURKER Hair Clippers. We are committed to providing a satisfactory solution.

For further assistance, please refer to the contact information provided with your purchase or visit the official SURKER website.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question