

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Pgzy](#) /

› [Pgzy Multi-Function Electronic Digital Sport Stopwatch Timer \(Model ZSD-009\) Instruction Manual](#)

## Pgzy ZSD-009

# Pgzy Multi-Function Electronic Digital Sport Stopwatch Timer

MODEL: ZSD-009

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Safety Information](#) [Product](#)  
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

## 1. Introduction

This manual provides detailed instructions for the Pgzy Multi-Function Electronic Digital Sport Stopwatch Timer, Model ZSD-009. This device is designed for precise timing in various sports and activities, offering stopwatch, time, date, and alarm functions. Please read this manual thoroughly before using the product to ensure proper operation and longevity.

## 2. Safety Information

- Keep the stopwatch away from extreme temperatures and direct sunlight.
- Avoid dropping the device or subjecting it to strong impacts.
- While the stopwatch is water-resistant, it is not waterproof. Do not submerge it in water.
- Do not attempt to open or repair the device yourself, as this will void the warranty.
- Dispose of used batteries responsibly according to local regulations.

## 3. Product Overview

The Pgzy Stopwatch features a large digital display, three control buttons, and an integrated compass. It comes with a lanyard for convenient carrying.



Figure 1: Front view of the Pgzsy Stopwatch showing the display and buttons.



Figure 2: Close-up of the control buttons on the stopwatch.

### 3.1. Button Functions

- **MODE Button (Top Left):** Switches between Stopwatch, Time/Date, and Alarm modes.
- **SET LAP RESET Button (Top Left Side):** Used for setting values in Time/Date and Alarm modes, and for lap/reset in Stopwatch mode.
- **START STOP Button (Top Right Side):** Used to start and stop the timer in Stopwatch mode, and for adjusting values in Time/Date and Alarm modes.

### 3.2. Display Indicators

- **STOPWATCH:** Indicates the device is in stopwatch mode.
- **TIME:** Indicates the device is in time display mode.
- **DATE:** Indicates the device is in date display mode.
- **ALARM:** Indicates the alarm function is active.
- **WATER RESIST:** Indicates water resistance feature.
- **Compass:** Small integrated compass for basic directional reference.

## 4. Setup

### 4.1. Battery Installation

The stopwatch comes with a pre-installed LR44 battery. If the display is dim or unresponsive, the battery may need replacement. To replace the battery:

1. Carefully open the battery compartment on the back of the stopwatch using a small screwdriver.

2. Remove the old LR44 battery.
3. Insert a new LR44 battery, ensuring the correct polarity (+/-).
4. Securely close the battery compartment.

## 4.2. Setting Time and Date

To set the current time and date:

1. Press the **MODE** button repeatedly until the time display (hours, minutes, seconds) is shown.
2. Press and hold the **SET LAP RESET** button until the seconds digit starts flashing.
3. Press the **START STOP** button to adjust the flashing digit.
4. Press the **SET LAP RESET** button to move to the next digit (minutes, then hours, then month, day, and day of the week).
5. Repeat step 3 to adjust each flashing digit.
6. Once all settings are correct, press the **MODE** button to exit the setting mode.

## 5. Operating Instructions

---

### 5.1. Stopwatch Mode

To use the stopwatch function:

1. Press the **MODE** button until "STOPWATCH" is displayed. The display should show "0:00:00".
2. Press the **START STOP** button to begin timing.
3. To pause the timer, press the **START STOP** button again. Press it once more to resume.
4. To record a split time (lap time) while the stopwatch is running, press the **SET LAP RESET** button. The display will momentarily show the split time, then return to the running total.
5. To stop the timer completely, press the **START STOP** button.
6. To reset the stopwatch to zero, press the **SET LAP RESET** button while the timer is stopped.

Your browser does not support the video tag.

Video 1: Demonstration of the Pgzsy Stopwatch's basic functions, including start, stop, and reset.

Your browser does not support the video tag.

Video 2: A review demonstrating the stopwatch's functionality and ease of use.

### 5.2. Time and Date Display

To view the current time and date, simply press the **MODE** button until the time and date are displayed on the screen. The day of the week will also be indicated.

### 5.3. Alarm Function

To set the alarm:

1. Press the **MODE** button until the alarm time is displayed (usually indicated by an alarm icon).
2. Press and hold the **SET LAP RESET** button until the alarm hour starts flashing.
3. Press the **START STOP** button to adjust the hour.
4. Press the **SET LAP RESET** button to move to the minutes digit.
5. Press the **START STOP** button to adjust the minutes.
6. Press the **MODE** button to exit the alarm setting mode.

To turn the alarm ON or OFF, press the **SET LAP RESET** and **START STOP** buttons simultaneously while in the alarm display mode. An alarm icon will appear or disappear to indicate its status.

## 6. Maintenance

- **Cleaning:** Wipe the stopwatch with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the stopwatch in a cool, dry place when not in use.
- **Water Resistance:** The device is water-resistant, meaning it can withstand splashes or light rain. Do not immerse it in water or expose it to high-pressure water jets.
- **Battery Life:** Replace the LR44 battery when the display becomes dim or the device malfunctions.

## 7. Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the LR44 battery.
Buttons are unresponsive.	Temporary software glitch or low battery.	Remove and reinsert the battery. If the issue persists, replace the battery.
Time/Date is incorrect.	Not set correctly or battery removed.	Follow the instructions in Section 4.2 to reset the time and date.
Alarm sounds unexpectedly.	Alarm is set and active.	Follow instructions in Section 5.3 to turn off the alarm.

## 8. Specifications

- **Model:** ZSD-009
- **Color:** Black
- **Material:** Plastic
- **Product Dimensions:** 3.15"D x 1.97"W x 1.97"H
- **Item Weight:** 9.4 ounces
- **Battery:** 1 x LR44 (included)
- **Functions:** Stopwatch, Time, Date, Alarm, Split Timing, Compass
- **Accuracy:** 1/100th of a second (for stopwatch)
- **Water Resistance:** Yes (splash resistant)

## 9. Warranty and Support

This Pgzsy product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact your retailer. If you encounter any issues or require technical assistance, please contact Pgzsy customer support through the retailer's platform or the official brand website.

