

MYAMIA RM-L1508

MYAMIA Huayu RM-L1508 Universal Remote Control User Manual

Model: RM-L1508

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your MYAMIA Huayu RM-L1508 Universal Remote Control. This remote is designed as a replacement for TCL Smart TVs, offering a compact and lightweight solution for controlling your television.

2. PRODUCT FEATURES

- **Compact and Lightweight Design:** Easy to handle and store.
- **Universal Compatibility:** Specifically designed for TCL Smart TVs.
- **Plug and Play:** No driver installation required for immediate use.
- **Effective Control Distance:** Operates reliably within 8-10 meters (approximately 26-33 feet).
- **Durable Material:** Constructed from high-quality ABS material for longevity.

3. PACKAGE CONTENTS

Please check the package carefully to ensure all items are present:

- 1 x HUAYU RM-L1508 Universal Remote Control

Note: 2 x AAA batteries are required for operation and are not included in the package.

4. SETUP

4.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide open the battery cover.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover securely.



Image: Back view of the RM-L1508 remote control, illustrating the location of the battery compartment.

4.2. Initial Connection

The MYAMIA Huayu RM-L1508 remote control is designed for immediate use with compatible TCL Smart TVs. No complex pairing or programming is typically required. Simply insert the batteries, point the remote towards your TV, and begin using it.

5. OPERATING INSTRUCTIONS

The remote control features standard buttons for TV operation. Familiarize yourself with the layout:



Image: Front view of the RM-L1508 remote control, displaying all functional buttons.

5.1. Basic Functions

- **Power Button** (⏻): Turns the TV on or off.
- **Mute Button** (🔇): Mutes or unmutes the TV sound.
- **Number Buttons (0-9)**: Directly select channels.
- **Volume Up/Down (+ / -)**: Adjusts the volume level.
- **Channel Up/Down (▲ / ▼)**: Changes the TV channel.
- **Navigation Buttons (◀ ▲ ▼ ▶)**: Navigate through menus and options.
- **OK Button**: Confirms selections in menus.
- **Home Button** (🏠): Accesses the TV's smart home screen or main menu.
- **Back/Return Button** (↶): Returns to the previous screen or menu.
- **Exit Button**: Exits the current menu or application.

5.2. Advanced Functions

- **Settings Button** (⚙️): Opens the TV's settings menu.
- **Info Button** (i): Displays information about the current program or input.
- **List Button**: Accesses the channel list.
- **Pre-CH Button**: Switches to the previously viewed channel.
- **Guide Button**: Opens the electronic program guide (EPG).
- **Text Button**: Activates or deactivates Teletext.
- **SUBT. Button**: Toggles subtitles on or off.
- **LANG Button**: Changes audio language or track.
- **Color Buttons (Red, Green, Yellow, Blue)**: Used for specific functions within menus or applications, as indicated on the TV screen.
- **Media Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Record)**: Controls media playback for connected devices or smart TV apps.
- **NETFLIX Button**: Direct access to the Netflix application.

6. MAINTENANCE

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage**: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops**: Protect the remote from physical impact, as drops can damage internal components.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote range is poor.	Low batteries; Obstruction between remote and TV; Remote sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's IR sensor. Clean any dust or debris from the TV's sensor.
Certain buttons do not work.	Button stuck or damaged; Remote not fully compatible with a specific TV function.	Check if the button is physically stuck. If the remote is universal, some advanced functions might not be supported by all TV models.
Remote works intermittently.	Loose battery connection; Interference from other devices.	Ensure batteries are snug in the compartment. Move away from strong light sources or other electronic devices that might cause IR interference.

8. SPECIFICATIONS

- **Model:** RM-L1508
- **Brand:** MYAMIA / HUAYU
- **Compatible Devices:** TCL Smart Televisions
- **Connectivity Technology:** Infrared (IR)
- **Control Distance:** 8-10 meters (26-33 feet)
- **Material:** ABS
- **Power Source:** 2 x AAA Batteries (not included)
- **Dimensions:** Approximately 230 x 38 x 15 mm (9.06 x 1.50 x 0.59 inches)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer or point of purchase. Keep your purchase receipt as proof of purchase for any warranty claims.

Note: Information regarding spare parts availability and software updates is not available for this product.

