

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Faber](#) /
- › [Faber FBI MWO 32L GLB 32L Convection Microwave Oven User Manual](#)

Faber FBI MWO 32L GLB

Faber FBI MWO 32L GLB 32L Convection Microwave Oven User Manual

Model: FBI MWO 32L GLB

[Introduction](#)

[Safety Instructions](#)

[Product Overview](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Faber FBI MWO 32L GLB Convection Microwave Oven. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open or if the door is damaged, as this can result in harmful exposure to microwave energy.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- Regularly clean the oven and remove any food deposits.

- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Ensure the appliance is properly grounded.
- Do not operate the oven if it is damaged or malfunctioning. Contact authorized service personnel.

3. PRODUCT OVERVIEW

Familiarize yourself with the components and control panel of your Faber 32L Convection Microwave Oven.

3.1. External View



Image: Front view of the Faber FBI MWO 32L GLB Convection Microwave Oven, showcasing its sleek black finish and digital display.

3.2. Control Panel



Image: Close-up of the electronic control panel with digital timer, function icons, and 'START +30sec/Confirm' button.

3.3. Interior Components



Image: Interior view of the microwave oven with the door open, showing the glass turntable and metal grill rack.

The oven typically includes:

- Glass Turntable: For even cooking.
- Turntable Ring: Supports the glass turntable.
- Grill Rack: Used for grilling functions.
- Control Panel: Digital display and function buttons.
- Oven Cavity: The cooking chamber.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your microwave oven.

4.1. Unpacking

- Carefully remove all packaging materials from the oven cavity and accessories.
- Check the oven for any damage, such as dents or a misaligned door. Do not operate if damaged.

4.2. Placement

- This is a built-in model. Ensure the installation cavity meets the specified dimensions (refer to Section

8: Specifications).

- Place the oven on a stable, level surface that can support its weight and the heaviest food item likely to be cooked in it.
- Ensure adequate ventilation. Do not block air vents. Maintain a minimum clearance of 10 cm at the rear, 20 cm at the sides, and 30 cm above the oven.
- Keep the oven away from heat sources and strong magnetic fields.

4.3. Electrical Connection

- Ensure the voltage and frequency of your power supply match the ratings on the oven's rating label.
- The oven must be properly grounded. Use a three-prong grounded outlet.
- Do not use extension cords or adapters.

4.4. Initial Cleaning

- Before first use, wipe the interior and exterior of the oven with a soft, damp cloth.
- Wash the glass turntable and grill rack with warm, soapy water.

5. OPERATING INSTRUCTIONS

Your Faber 32L Convection Microwave Oven offers various cooking modes for versatile meal preparation.



Image: Icons representing key features: 10 Auto Cook Menus, Digital Timer, Childlock, Combination Cooking, Grill + Convection, Defrost.

5.1. Basic Microwave Cooking

- Place food in a microwave-safe container on the glass turntable.
- Close the door (push opening mechanism).
- Select the desired microwave power level and cooking time using the control panel.
- Press 'START +30sec/Confirm' to begin cooking.

5.2. Grill Function

- Use the metal grill rack for best results.
- Select the grill function and set the cooking time.
- Press 'START +30sec/Confirm'.

5.3. Convection Function

- This function allows for baking and roasting. The temperature range is 50°C to 250°C.
- Preheat the oven to the desired temperature.
- Place food in an oven-safe dish.
- Select the convection function, set temperature and time.
- Press 'START +30sec/Confirm'.

5.4. Combination Cooking

Combine microwave, grill, and/or convection functions for faster and more varied cooking results.

- Select the desired combination mode (e.g., Microwave + Grill, Microwave + Convection).
- Set the power levels and cooking times for each stage.
- Press 'START +30sec/Confirm'.

5.5. Defrost Function

The defrost function allows you to thaw frozen foods quickly and efficiently.

- Select the defrost mode (usually by weight or time).
- Enter the weight of the food or the desired defrost time.
- Press 'START +30sec/Confirm'.

5.6. Auto Menus

The oven features 10 pre-programmed auto cook menus for common dishes. Refer to the internal oven sticker or a quick guide for specific menu items.

- Select the desired auto menu number.
- Enter the food quantity if prompted.
- Press 'START +30sec/Confirm'.

5.7. Multi-Stage Cooking

Program multiple cooking stages (e.g., defrost, then microwave, then grill) to run consecutively without manual intervention.

- Program the first stage (e.g., defrost time).

- Program the second stage (e.g., microwave power and time).
- Continue for additional stages as needed.
- Press 'START +30sec/Confirm'.

5.8. Speedy Cooking

This function allows for quick start cooking at full microwave power, typically in 30-second increments.

- Press the 'START +30sec/Confirm' button repeatedly to add cooking time in 30-second intervals.

5.9. Digital Timer (Kitchen Timer)

The digital timer can be used independently as a kitchen timer without activating any cooking functions.

- Select the timer function.
- Set the desired time.
- The timer will count down and alert you when finished.

5.10. Child Lock

The child lock feature prevents accidental operation of the oven, enhancing safety.

- **To activate:** Press and hold the designated Child Lock button (or a combination of buttons as indicated on the control panel) for a few seconds until the lock indicator appears on the display.
- **To deactivate:** Repeat the activation steps.

5.11. Inquiry Function

The inquiry function allows you to check the current settings (e.g., power level, remaining time) during operation.

- During cooking, press the 'Inquiry' button (if available, refer to control panel icons) to display current settings.

6. CARE AND MAINTENANCE

Regular cleaning and proper care will extend the life of your microwave oven.

6.1. Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior cavity after each use with a damp cloth to prevent food buildup.
- For stubborn stains, use a mild detergent or a microwave-safe cleaner. Do not use abrasive cleaners or scouring pads.
- To remove odors, boil a cup of water with lemon juice or vinegar inside the oven for a few minutes, then wipe clean.

6.2. Cleaning the Oven Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Clean the control panel gently with a soft, damp cloth. Avoid excessive moisture.

6.3. Cleaning Accessories

- The glass turntable and turntable ring can be washed in warm, soapy water or in a dishwasher.

- The metal grill rack should be washed by hand with warm, soapy water.
- Ensure all accessories are dry before placing them back in the oven.

6.4. Door Seal Care

- Keep the door seals and adjacent parts clean.
- Do not use harsh cleaners on the door seals as this can damage them and affect oven performance.

7. TROUBLESHOOTING GUIDE

If you encounter issues with your microwave oven, refer to the following table for common problems and solutions. If the problem persists, contact customer service.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped; Child lock activated.	Plug in power cord; Close door firmly; Check fuse/reset circuit breaker; Deactivate child lock.
Food not cooking or heating evenly	Incorrect cooking time/power level; Food not stirred/rotated; Turntable not rotating.	Adjust time/power; Stir/rotate food during cooking; Check turntable assembly.
Light not working	Bulb needs replacement.	Contact authorized service personnel for bulb replacement.
Excessive steam or condensation	High moisture content in food; Normal during cooking.	Wipe interior after use; Ensure proper ventilation.
Oven making unusual noises	Turntable not seated correctly; Metal objects inside.	Re-seat turntable; Remove any metal objects.

8. SPECIFICATIONS

Detailed technical specifications for the Faber FBI MWO 32L GLB Convection Microwave Oven.



Image: Diagram illustrating the external dimensions of a microwave oven, showing width, depth, and height measurements.

Feature	Specification
Brand	Faber
Model	FBI MWO 32L GLB
Capacity	32 Litres
Installation Type	Built-In
Oven Cooking Mode	Convection, Grill, Microwave, Combination
Control Type	Electronic Control, Digital Timer
Special Features	10 Auto Menus, Speedy Cooking, Multi-Stage Cooking, Pre-Set Function, Child Lock, Inquiry Function, Defrost System
Temperature Range (Convection)	50°C – 250°C
Door Orientation	Left (Push Opening)

Feature	Specification
Material	Steel
Colour	Black
Built-in Dimensions (WxDxH)	595 x 477 x 388 mm
Item Weight	5 kg 70 g
Country of Origin	India

9. WARRANTY AND CUSTOMER SUPPORT

Faber is committed to providing quality products and support.

9.1. Warranty Information

- **Product Warranty:** 1 year from the date of purchase.
- **Magnetron Warranty:** 2 years from the date of purchase.
- The warranty covers manufacturing defects under normal use. It does not cover damage due to misuse, accident, unauthorized repair, or normal wear and tear.
- Please retain your purchase receipt for warranty claims.

9.2. Customer Support

For service, technical assistance, or warranty claims, please contact Faber customer service. Contact details can typically be found on the Faber official website or on your product packaging.

When contacting support, please have the following information ready:

- Model Number: FBI MWO 32L GLB
- Date of Purchase
- Description of the issue