

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Faber](#) /

› [Faber 38 L Convection Microwave Oven User Manual](#)

Faber FBIMWO 38L CGS BS

Faber 38 L Convection Microwave Oven User Manual

Model: FBIMWO 38L CGS BS

1. INTRODUCTION

Thank you for choosing the Faber 38 L Convection Microwave Oven (Model: FBIMWO 38L CGS BS). This appliance combines microwave, grill, and convection functions, offering versatile cooking options. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new oven. Please read it thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should be followed, including the following:

- Read all instructions before using the appliance.
- Ensure the appliance is properly installed and grounded by a qualified technician before use.
- Do not operate the oven if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Do not attempt to service or repair the appliance yourself. Contact authorized service personnel for all repairs.
- Always supervise children when the oven is in use.
- Use only utensils suitable for microwave ovens.
- Clean the oven regularly and remove any food deposits.
- Do not store or use this appliance outdoors.

3. PRODUCT OVERVIEW

The Faber FBIMWO 38L CGS BS is a versatile built-in microwave oven designed for modern kitchens.



Figure 3.1: Front view of the Faber 38 L Convection Microwave Oven with the door closed, showcasing the black finish and LED display.

Key components include the control panel with LED display, oven cavity, glass turntable, and various accessories for different cooking modes.



Figure 3.2: Interior view of the oven with the door open, showing the spacious cavity, glass turntable, and a wire rack for grilling or convection cooking.



Figure 3.3: Interior view demonstrating the use of a baking pan on the wire rack, suitable for convection baking.



Figure 3.4: A closer look at the oven's interior, highlighting the baking pan and the internal lighting.



Figure 3.5: Angled view of the open oven, providing a comprehensive perspective of the interior and accessories.

4. INSTALLATION AND SETUP

This Faber microwave oven is designed for built-in installation. Proper installation is crucial for safety and optimal performance.

4.1 Unpacking

- Carefully remove all packaging materials from the oven cavity and accessories.
- Check the oven for any damage. Do not operate if damaged.
- Retain packaging materials for future transport if needed.

4.2 Placement and Dimensions

The oven requires a dedicated cabinet space. Ensure adequate ventilation around the appliance.

- **Oven Dimensions (WxDxH):** 594mm x 455mm x 465mm (approx. 2.34 x 1.79 x 1.83 meters).
- Ensure the cabinet opening matches these dimensions for a snug fit.
- The appliance operates on **230 Volts**. Ensure the electrical outlet meets this requirement and is properly grounded.

4.3 Electrical Connection

Connect the oven to a properly installed and grounded wall outlet. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

Your Faber microwave oven offers multiple cooking functions and user-friendly controls.

5.1 Control Panel and Display

The oven features an LED fully electric display and digital clock with an automatic cut-off timer for precise cooking.

5.2 Cooking Modes

The oven supports the following cooking modes:

- **Microwave:** For rapid heating and cooking.
- **Grilling:** For browning and crisping food.
- **Convection:** For baking and roasting, with a temperature range of 50°C to 250°C.
- **Microwave + Convection:** Combination cooking for faster results with browning.
- **Grilling + Convection:** Combination for crispy exteriors and thoroughly cooked interiors.
- **Microwave + Grilling + Convection:** Triple combination for comprehensive cooking.
- **Defrost:** For thawing frozen foods.
- **Recipe:** Access pre-programmed recipes.

5.3 Auto Cook Menus

The oven includes 10 auto cook menus for convenient preparation of popular dishes. Refer to the detailed recipe guide (if provided separately) for specific instructions on using these menus.

5.4 Setting the Clock and Timer

Detailed instructions for setting the digital clock and utilizing the automatic cut-off timer can be found in the dedicated section of the full manual (if applicable).

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

6.1 Cleaning the Interior

- Wipe the oven cavity after each use with a damp cloth and mild detergent.
- For stubborn stains, place a bowl of water with lemon slices inside and microwave for a few minutes to loosen food particles.
- Clean the glass turntable and roller ring regularly with warm, soapy water.

6.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- Clean the control panel gently to prevent damage to the display.

6.3 Odor Removal

To remove odors, combine a cup of water with a few tablespoons of lemon juice or vinegar in a microwave-safe bowl. Heat on high for 5-7 minutes.

7. TROUBLESHOOTING

Before contacting service, please check the following common issues:

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly; Power cord unplugged; Fuse blown or circuit breaker tripped.	Ensure door is firmly closed; Check power connection; Reset circuit breaker or replace fuse.
Food not cooking evenly	Incorrect power level or cooking time; Food not stirred/rotated.	Adjust power level/time; Stir or rotate food during cooking.
Light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Excessive steam inside oven	High moisture content in food.	This is normal for high-moisture foods. Wipe interior after use.

If the problem persists after attempting these solutions, please contact Faber customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Faber
Model	FBIMWO 38L CGS BS
Capacity	38 litres
Installation Type	Built-In
Oven Cooking Mode	Convection, Grill, Microwave, Combination
Colour	Black
Voltage	230 Volts
Fuel Type	Electric
Defrost System	Defrost
Door Orientation	Left
Material	Steel

Feature	Detail
Item Weight	31 kg
Item Dimensions (LxWxH)	594x455x465 mm (approx. 2.34 x 1.79 x 1.83 Meters)
Special Features	Timer, Turntable, LED Display, Digital Clock, 10 Auto Cook Menus
Temperature Range (Convection)	50°C – 250°C

9. WARRANTY AND SUPPORT

Your Faber 38 L Convection Microwave Oven comes with a comprehensive warranty to ensure peace of mind.

- **Product Warranty:** 1 year on the product.
- **Magnetron Warranty:** 2 years on the magnetron.

For warranty claims, technical support, or service requests, please contact Faber customer service.

Manufacturer: Faber

