

[manuals.plus](#) /› [Faber](#) /› **Faber FBI MWO 25L CGS BK Convection Microwave Oven User Manual**

## Faber FBI MWO 25L CGS BK

# Faber FBI MWO 25L CGS BK Convection Microwave Oven User Manual

Model: FBI MWO 25L CGS BK

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Faber FBI MWO 25L CGS BK Convection Microwave Oven. Please read these instructions carefully before installation and operation, and retain them for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy when using your appliance, follow basic precautions, including:

- Read all instructions before using the appliance.
- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Regularly clean the oven cavity, door, and seals.
- Ensure proper ventilation around the oven.
- This appliance is designed for built-in installation.
- Keep children away from the appliance during operation. The oven features a child safety control.

## 3. PRODUCT OVERVIEW

The Faber FBI MWO 25L CGS BK is a 25-liter convection microwave oven with a sleek black glass finish. It offers multiple cooking functions including microwave, grill, convection, and combination modes.

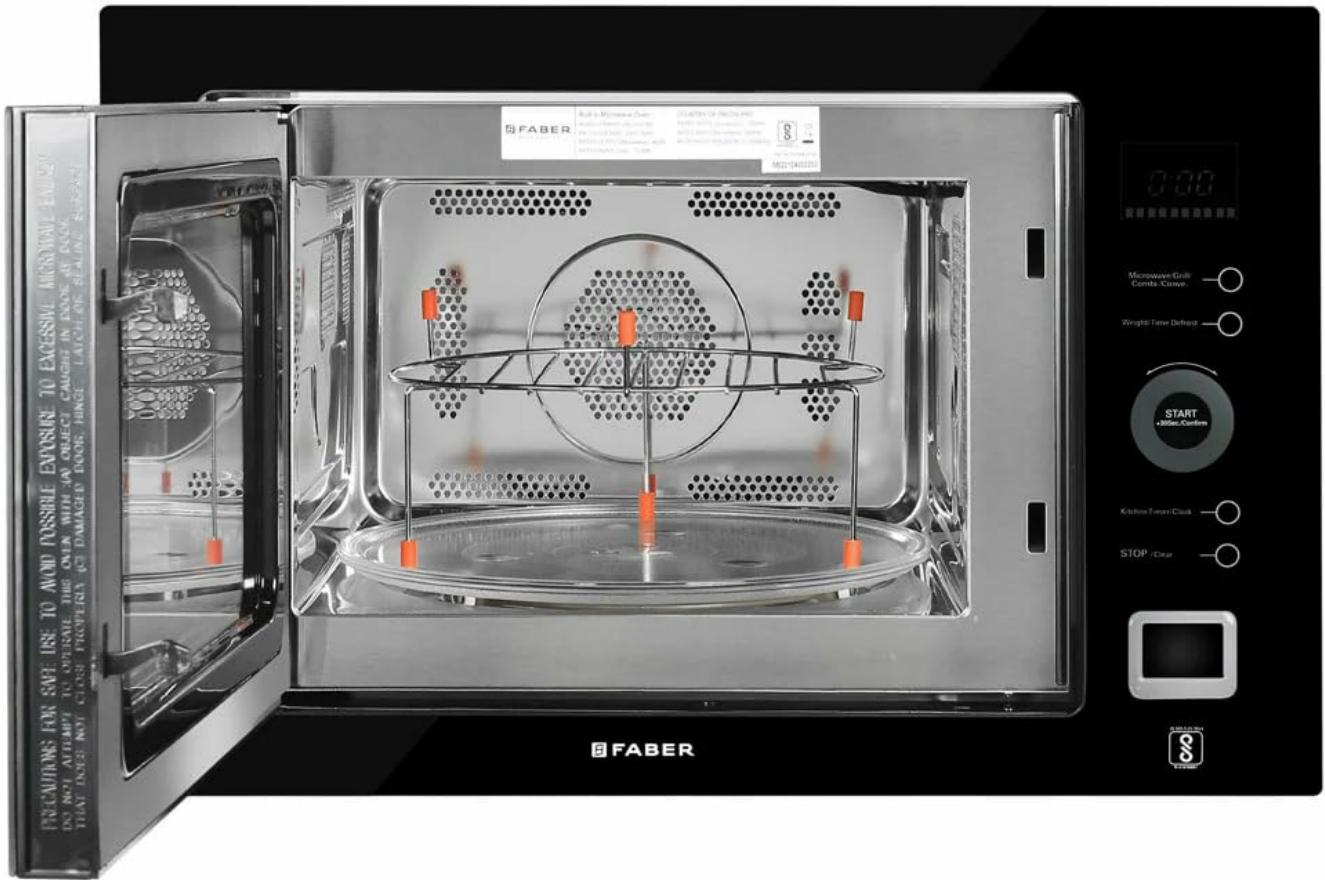


Figure 3.1: Front view of the Faber Convection Microwave Oven with the door open, showing the interior cavity and accessories.

### 3.1 Key Features

- **Capacity:** 25 Liters (Model specific, general specifications may list 32 liters for product line).
- **Finish:** Black Glass.
- **Control Type:** Electric control panel with digital display.
- **Cooking Modes:** Microwave, Grill, Convection, Combination Cooking.
- **Auto Cook Menus:** 10 pre-programmed auto cook options.
- **Temperature Range:** 50°C to 250°C for convection cooking.
- **Safety:** Child Safety Control.
- **Additional Functions:** Multi-stage cooking, pre-set function, speedy cooking, speedy microwave cooking, kitchen timer, inquiry function.

### 3.2 Control Panel

The control panel features a digital display and various buttons for selecting cooking modes, setting time, and initiating operations.



Figure 3.2: Detailed view of the control panel, showing the digital display and function buttons.

- **Display:** Shows time, cooking settings, and indicators.
- **Microwave/Grill/Combi/Conve Button:** Selects desired cooking mode.
- **Weight/Time Defrost Button:** Initiates defrosting by weight or time.
- **START/+30sec/Confirm Button:** Starts cooking, adds 30 seconds to microwave cooking, or confirms selections.
- **Kitchen Timer/Clock Button:** Sets the kitchen timer or adjusts the clock.
- **STOP/Clear Button:** Stops current operation or clears settings.

## 4. INSTALLATION AND SETUP

This Faber microwave oven is designed for built-in installation. Professional installation is recommended to ensure proper

fitting and electrical connection.

## 4.1 Unpacking

- Carefully remove all packaging materials from the oven cavity and accessories.
- Inspect the oven for any damage. Do not operate if damaged.
- Ensure all included components are present: Product, Instruction manual, Accessories (turntable, grill rack), and Warranty card.

## 4.2 Placement and Ventilation

- Install the oven in a cabinet opening that meets the specified dimensions.
- Ensure adequate space for ventilation around the oven as per installation guidelines provided in the full manual.
- Do not block any ventilation openings.



Figure 4.1: Oven dimensions (WxDxH: 594x470x388 mm) for built-in installation.

## 4.3 Electrical Connection

- Connect the oven to a properly grounded electrical outlet with the correct voltage (230 Volts).
- Do not use extension cords or adapters.

## 5. OPERATING INSTRUCTIONS

---

Familiarize yourself with the control panel and functions before operating the oven.

### 5.1 Setting the Clock

1. Press the **Kitchen Timer/Clock** button once.
2. Use the dial or appropriate buttons to set the hour. Press **START/Confirm**.
3. Use the dial or appropriate buttons to set the minutes. Press **START/Confirm** to confirm.

### 5.2 Microwave Cooking

1. Place food in a microwave-safe container on the turntable.
2. Close the oven door.
3. Press the **Microwave/Grill/Combi/Conve** button repeatedly until "Microwave" mode is selected.
4. Use the dial or buttons to set the desired cooking time.
5. Press **START/+30sec/Confirm** to begin cooking. For quick start, press **START/+30sec/Confirm** to cook for 30 seconds at full power, press again to add 30 seconds.

### 5.3 Grill Cooking

1. Place food on the grill rack provided.
2. Press the **Microwave/Grill/Combi/Conve** button repeatedly until "Grill" mode is selected.
3. Set the desired grilling time.
4. Press **START/Confirm** to begin.



Figure 5.1: Oven interior with the grill rack in place, suitable for grilling functions.

## 5.4 Convection Cooking

Convection mode allows for baking and roasting with a temperature range of 50°C to 250°C.

1. Press the **Microwave/Grill/Combi/Conve** button repeatedly until "Convection" mode is selected.
2. Set the desired temperature (e.g., 180°C). Press **START/Confirm**.
3. Set the desired cooking time. Press **START/Confirm** to begin.

## 5.5 Combination Cooking

This mode combines microwave power with grill or convection heat for faster and more even cooking results.

1. Press the **Microwave/Grill/Combi/Conve** button repeatedly to select a combination mode (e.g., Combi 1, Combi 2).
2. Set the desired cooking time.
3. Press **START/Confirm** to begin.

## 5.6 Defrosting

The oven offers defrosting by weight or time.

1. Place frozen food in the oven.
2. Press the **Weight/Time Defrost** button.
3. Select defrost by weight or time using the dial/buttons.
4. Enter the weight or time. Press **START/Confirm**.

## 5.7 Auto Cook Menus

The oven has 10 pre-programmed auto cook menus for various dishes. Refer to the full manual for a list of specific menus and their usage.

1. Press the **Auto Cook** button (if available, or cycle through modes to find auto cook).
2. Select the desired menu number.
3. Enter the food weight if prompted.
4. Press **START/Confirm**.

## 5.8 Child Safety Lock

To activate the child lock, press and hold the **STOP/Clear** button for approximately 3 seconds until a lock indicator appears on the display. To deactivate, repeat the process.

# 6. CARE AND MAINTENANCE

---

Proper care and maintenance will ensure the longevity and optimal performance of your microwave oven.

## 6.1 Cleaning the Oven Interior

- Always unplug the oven before cleaning.
- Wipe the interior cavity, door, and door seals with a damp cloth after each use.
- For stubborn stains, use a mild detergent or a microwave-safe cleaner. Avoid abrasive cleaners.
- Remove the glass turntable and wash it in warm soapy water or a dishwasher.

## 6.2 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use harsh chemicals or abrasive materials that could damage the black glass finish.

# 7. TROUBLESHOOTING GUIDE

---

If you encounter issues with your oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not start.	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure power cord is securely plugged in; Close the door firmly; Check household fuse/circuit breaker.
Food not heating.	Incorrect power level or cooking time set; Door not closed properly.	Adjust power level and cooking time; Ensure door is fully closed.

Problem	Possible Cause	Solution
Turntable not rotating.	Turntable not properly seated; Debris under turntable.	Reposition turntable correctly; Clean under the turntable.
Oven light not working.	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.

If the problem persists after attempting these solutions, please contact Faber customer service.

## 8. TECHNICAL SPECIFICATIONS

<b>Brand</b>	Faber
<b>Model</b>	FBI MWO 25L CGS BK
<b>Capacity</b>	25 Liters (Model specific, general specifications may list 32 liters for product line)
<b>Installation Type</b>	Built-In
<b>Oven Cooking Mode</b>	Convection
<b>Colour</b>	Black
<b>Voltage</b>	230 Volts
<b>Wattage</b>	220
<b>Fuel Type</b>	Electric
<b>Defrost System</b>	Defrost
<b>Door Orientation</b>	Left
<b>Material</b>	Steel
<b>Item Weight</b>	24 kg
<b>Item Dimensions (LxWxH)</b>	59.4 x 47 x 38.8 Centimeters
<b>Finish Type</b>	Black Glass Finish
<b>Special Features</b>	Timer, 10 auto cooks menus, child safety control, combination cooking, multi stage cooking, pre-set function, speedy cooking, speedy microwave cooking, kitchen timer, inquiry function

## 9. WARRANTY AND CUSTOMER SUPPORT

### 9.1 Warranty Information

Your Faber FBI MWO 25L CGS BK Convection Microwave Oven comes with a standard warranty:

- **Product Warranty:** 1 year from the date of purchase.

- **Magnetron Warranty:** 2 years from the date of purchase.

Please retain your purchase receipt and warranty card for any warranty claims. The warranty covers manufacturing defects under normal use conditions.

## 9.2 Customer Support

For technical assistance, service requests, or inquiries regarding your product, please contact Faber customer service. Refer to the warranty card or Faber's official website for contact details.

**Included Components:** The product package includes the oven, this instruction manual, necessary accessories (such as turntable and grill rack), and a warranty card.

© 2023 Faber. All rights reserved.