

GLOBE 67339

GLOBE Electric 67339 16 Inch Pink Desk Lamp User Manual

Model: 67339 | Brand: GLOBE Electric

1. INTRODUCTION

Thank you for purchasing the GLOBE Electric 67339 16 Inch Pink Desk Lamp. This manual provides important information regarding the safe installation, operation, and maintenance of your new desk lamp. Please read this manual thoroughly before use and retain it for future reference.

The GLOBE Electric 67339 desk lamp features a matte rose shade and base, complemented by matte gold accents. Its pivoting head allows for adjustable light direction, making it suitable for various settings such as home offices, bedrooms, or dorms.

2. SAFETY INFORMATION

Please observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Ensure the power is disconnected before installation, cleaning, or changing the bulb.
- This lamp is designed for indoor use only. Do not expose to water or moisture.
- Use only the specified bulb type and wattage: 1x E26/Medium Base 60W Bulb (sold separately). Exceeding the maximum wattage may cause overheating.
- Do not operate the lamp with a damaged cord or plug. If damaged, contact qualified service personnel.
- Keep flammable materials away from the lamp when in operation.
- Do not attempt to modify or disassemble the lamp beyond what is instructed in this manual.

3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- 1x GLOBE Electric 67339 Desk Lamp (Matte Rose, Robin)
- 1x Instruction Sheet (this manual)



Image: Product packaging showing the lamp box.

4. SETUP AND INSTALLATION

The GLOBE Electric 67339 Desk Lamp comes pre-assembled. Follow these steps to prepare it for use:

1. **Unpack the Lamp:** Carefully remove the lamp from its packaging. Inspect for any damage.
2. **Install the Bulb:** Ensure the lamp is unplugged. Screw one E26/Medium Base 60W maximum bulb (not included) into the lamp socket. Do not overtighten.
3. **Position the Lamp:** Place the lamp on a stable, flat surface.
4. **Connect to Power:** Plug the lamp's power cord into a standard 120V AC electrical outlet.



Image: The GLOBE Electric 67339 Desk Lamp, ready for use.

5. OPERATING INSTRUCTIONS

Using your GLOBE Electric 67339 Desk Lamp is straightforward:

- **Power On/Off:** Locate the in-line rotary switch on the power cord. Rotate the switch clockwise to turn the lamp ON and counter-clockwise to turn it OFF.
- **Adjusting Light Direction:** The lamp features a pivoting head. Gently adjust the lamp head to direct light as needed for reading or task lighting.



Image: Close-up view of the lamp head, illustrating its adjustable nature.

6. MAINTENANCE

To ensure the longevity and optimal performance of your desk lamp, follow these maintenance guidelines:

- **Cleaning:** Disconnect the power before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled completely. Unscrew the old bulb and replace it with a new E26/Medium Base 60W maximum bulb.
- **Storage:** If storing the lamp, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

If you encounter issues with your lamp, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lamp does not turn on.	No power to the outlet. Bulb is loose or burnt out. Switch is faulty.	Check if the outlet is working by plugging in another device. Tighten or replace the bulb. Ensure the in-line switch is fully turned ON.
Light flickers.	Loose bulb. Incorrect bulb type/wattage.	Tighten the bulb. Ensure the bulb is E26/Medium Base and 60W max.
Lamp gets too hot.	Bulb wattage too high.	Replace the bulb with one that does not exceed 60W.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	67339
Brand	GLOBE Electric
Dimensions (D x W x H)	7.48" x 7.48" x 14.96"
Item Weight	3.15 Pounds
Material	Metal
Finish Type	Matte
Shade Color	Matte Rose
Bulb Base	E26 (Medium Base)
Max Wattage	60 Watts
Voltage	120 Volts
Power Source	Corded Electric
Switch Type	Rotary (In-line)
UPC	058219673393



Image: Dimensional diagram of the desk lamp, showing height, width, and cord length.

9. WARRANTY AND SUPPORT

Warranty Information: According to product specifications, there is no explicit warranty description provided for this product.

Customer Support: For any questions, concerns, or assistance with your GLOBE Electric 67339 Desk Lamp, please contact GLOBE Electric customer service. Refer to the manufacturer's website or product packaging for the most current contact information.

You can also visit the official GLOBE Electric store on Amazon for more products and information [GLOBE Electric Store](#)

