

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Jekero](#) /

› [Jekero Portable DVD Player User Manual](#)

Jekero 1703

Jekero Portable DVD Player User Manual

Model: 1703

PRODUCT OVERVIEW

The Jekero Portable DVD Player (Model 1703) is a versatile entertainment device designed for on-the-go use. It features a large 14.1-inch swivel screen, a long-lasting rechargeable battery, and wide compatibility with various disc and media formats. This player is suitable for all ages and can be used for watching movies, listening to music, viewing photos, and playing games.



Image: The Jekero Portable DVD Player, showcasing its main unit with a large screen, alongside its remote control. The screen is displaying a vibrant image of a child.

PACKAGE CONTENTS

Upon opening the package, ensure all the following items are present:

- 1 x Jekero Portable DVD Player
- 1 x DC Power Adapter
- 1 x Car Charger
- 1 x Remote Control
- 1 x Game Controller
- 1 x AV Cable
- 1 x User Manual (this document)

Accessories Included



⚠ Note:
The screen has a protective film which can be torn off before use. The protective film may be scratched, but not the screen.



Remote
(No battery included)



RCA Cable



DC Adapter



Car Charger

Image: A visual representation of the accessories included with the Jekero Portable DVD Player, such as the remote control, RCA cable, DC power adapter, and car charger.

SETUP GUIDE

Charging the Battery

Before first use, it is recommended to fully charge the player's built-in lithium polymer battery. The player can operate for approximately 5-6 hours on a full charge.

1. Connect the DC Power Adapter to the DC IN port on the player.
2. Plug the adapter into a standard wall outlet.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off (refer to the device's specific indicator behavior).

For extended use in a vehicle, connect the Car Charger to the DC IN port and plug it into your car's cigarette lighter socket.



Support Car Charger

It can be powered by car charger for longer use in journey.

Support DC Adapter

It can be powered by adapter for longer use at home.



Built-in 3500mAh Rechargeable Battery

3500mAh 4Hours

Image: Illustrations demonstrating how to power the DVD player using the car charger and the DC adapter, along with battery charge level indicators.

Initial Power On

Locate the ON/OFF switch on the side of the player and slide it to the "ON" position.

OPERATING INSTRUCTIONS

Disc Playback

The player supports a wide range of disc formats, including CD, DVD, CD-R(RW), DVD-R (+R), DVD-RW (RW), CVD(SVCD), VCD(DVCD), HDCD, and DTSCD. It is region-free for DVDs (excluding Blu-ray discs).

1. Gently open the disc cover.
2. Place a compatible disc onto the spindle, ensuring it is seated correctly with the label side facing up.
3. Close the disc cover firmly.

4. The player will automatically detect and begin playback of the disc. Use the remote control or on-device buttons for navigation and playback control.

Audio Features

The Jekero Portable DVD Player is equipped with two large 3-inch speakers, providing clear and loud audio output. For private listening, a headphone jack is available.

Dual 3" Large Speaker

Two speakers make the volume louder and clearer



Image: The Jekero Portable DVD Player highlighting its dual 3-inch speakers, which provide enhanced audio. The screen displays a scene from a popular animated movie.

Media Playback from USB/SD Card

The player supports USB drives and SD/MMC/MS cards up to 32GB. Compatible media formats include MP3, WMA, MPG, VOB, AVI, DIVX, MPEG, JPEG, and TXT.

1. Insert a USB drive into the USB port or an SD card into the SD card slot.
2. Use the "MODE" button on the player or remote to select the appropriate input source (USB or SD).

3. Navigate through your files using the directional buttons and select the desired media for playback.

Multi-function Player

- CD / DVD
- CVD / SVCD
- VCD / DVCD
- CD - R / + RW
- DVD - R / + RW
- HDCD / DTSCD



Image: A detailed view of the side ports on the Jekero Portable DVD Player, including USB, SD card slot, headphone jack, AV input/output, DC power input, TV output, and game controller port.

Swivel Screen Adjustment

The 14.1-inch LCD screen can swivel 270° and flip 180°, allowing for optimal viewing angles in various situations.

Upgraded 5000mAh Battery



Rechargeable battery ensures playing up to 6-7 hours



Brighter screen brings you more vivid and clearer vision

270°× 180° Swivel Screen



Image: Visual demonstration of the screen's flexibility, illustrating its 270-degree swivel and 180-degree flip capabilities for versatile viewing.

Connecting to a TV (Sync TV)

You can connect the portable DVD player to a larger TV screen using the supplied AV cable for a home theater experience.

1. Connect one end of the AV cable to the AV OUT port on the DVD player.
2. Connect the other end of the AV cable to the corresponding AV IN ports on your television (typically yellow for video, white/red for audio).
3. Select the correct AV input source on your television.

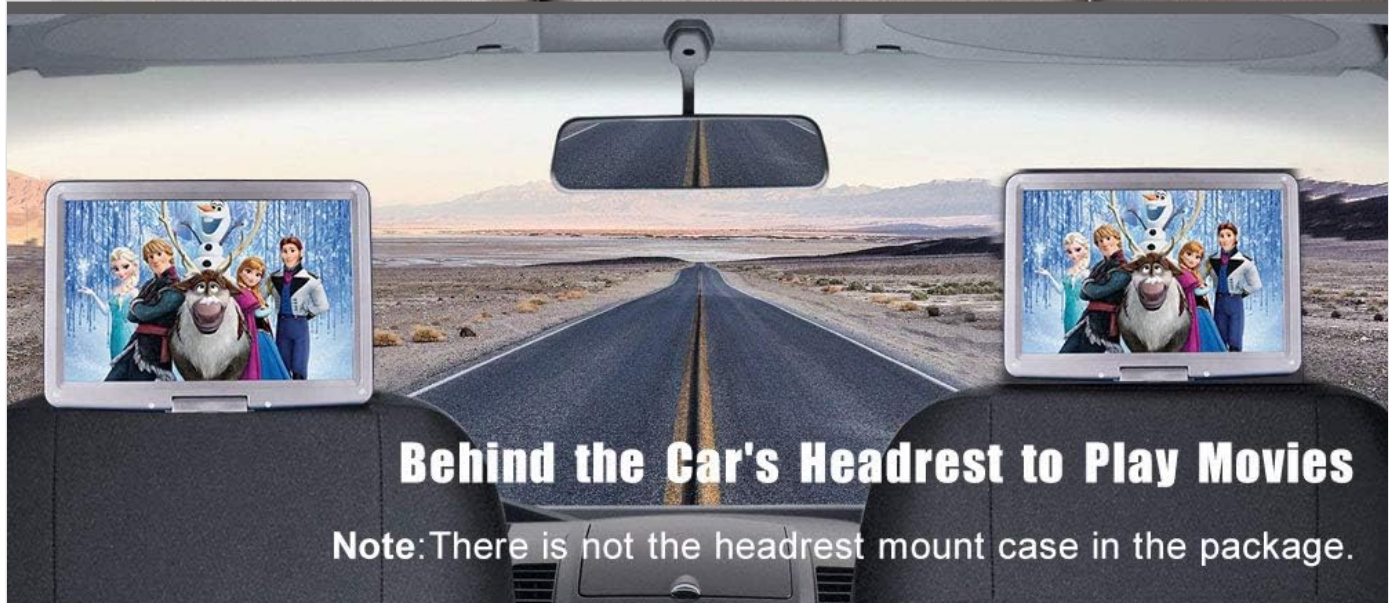


Image: The portable DVD player connected to a television, demonstrating its ability to sync content to a larger display. Also shown is the player used in a car, mounted behind headrests for rear-seat entertainment.

Using the Remote Control

The included remote control provides full functionality for operating the player, including:

- **Break-point storage:** Resumes playback from where it was stopped.
- **A-B repeat playback:** Repeats a specific section of audio/video.
- **Slow motion playback:** Plays content at a reduced speed.
- **Screenshot:** Captures a still image from the video.
- **Rotation:** Rotates images.
- **Zoom:** Zooms in on images or video.
- **CD copy:** Copies audio tracks from a CD.

Last Memory Function

The device will remember the last playback point



Image: A visual representation of the "Last Memory Function," illustrating how the device remembers the last playback point, allowing users to resume watching from where they left off.

Playing Games

The player supports multiple NES games and includes a game controller.

1. Connect the game controller to the dedicated GAME port.
2. Select the game function from the main menu or by pressing the appropriate button on the remote.
3. Choose your desired game and begin playing.

MAINTENANCE

Cleaning the Device

- Use a soft, dry cloth to wipe the exterior of the player.
- For the screen, use a soft, lint-free cloth specifically designed for electronics screens. Do not use abrasive cleaners

or sprays directly on the screen.

- Ensure the device is powered off and unplugged before cleaning.

Disc Care

- Handle discs by their edges to avoid fingerprints on the playing surface.
- Store discs in their cases when not in use to prevent scratches.
- Clean dirty discs with a soft, lint-free cloth, wiping from the center outwards.

Battery Care

- Avoid exposing the player to extreme temperatures, which can affect battery life.
- If storing the player for an extended period, charge the battery to approximately 50% before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	Battery is depleted; Power adapter not connected properly; Power switch is OFF.	Charge the battery; Ensure power adapter is securely connected; Slide power switch to ON.
No disc playback.	Disc is dirty or scratched; Disc format is not supported (e.g., Blu-ray); Disc inserted incorrectly.	Clean the disc; Use a supported disc format; Reinsert the disc correctly.
No sound.	Volume is too low or muted; Headphones connected; AV cable not fully inserted.	Increase volume; Disconnect headphones if using speakers; Ensure AV cable is fully inserted.
Image distorted or no video on TV.	Incorrect AV input selected on TV; AV cable faulty or not connected properly.	Select correct AV input on TV; Check AV cable connections; Try a different AV cable if available.
Remote control not working.	Batteries are dead or inserted incorrectly; Obstruction between remote and player.	Replace remote batteries; Ensure correct battery polarity; Remove any obstructions.

SPECIFICATIONS

Feature	Detail
Brand	Jekero
Model Number	1703
Screen Size	14.1 Inches (diagonal)
Display Type	LCD
Display Resolution	1280x800 pixels

Feature	Detail
Swivel Angle	270 Degrees
Flip Angle	180 Degrees
Battery Type	Lithium Polymer (Built-in)
Battery Life	Approx. 5-6 hours
Supported Disc Formats	CD, DVD, CD-R(RW), DVD-R (+R), DVD-RW (RW), CVD(SVCD), VCD(DVCD), HDCD, DTSCD (Region-free for DVDs, except Blu-ray)
Supported Media Formats	MP3, WMA, MPG, VOB, AVI, DIVX, MPEG, JPEG, TXT
External Storage Support	USB, SD / MMC / MS card (up to 32GB)
Connectivity	USB, SD Card, Headphone Output, AV Input/Output, DC Power Input, Game Port
Product Dimensions	35.05 x 24.89 x 5.08 cm (13.8 x 9.8 x 2 inches)
Item Weight	1.72 kg (3.8 pounds)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided with your purchase or visit the official Jekero website. Keep your purchase receipt as proof of purchase for warranty claims.

If you have any questions or require assistance, please feel free to contact Jekero customer service. They aim to reply within 7*24 hours and provide a satisfactory solution.