

U-MAX B081DSYSDC

U-MAX 44in Outdoor Propane Gas Fire Pit Table Instruction Manual

Model: B081DSYSDC

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your U-MAX 44in Outdoor Propane Gas Fire Pit Table. Please read all instructions thoroughly before use and retain this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

WARNING: For outdoor use only. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Read the installation, operating, and maintenance instructions thoroughly before installing or servicing this equipment.

- This appliance is for use with propane gas only.
- Ensure adequate ventilation. Do not use in an enclosed area.
- Keep children and pets away from the fire pit during operation.
- Maintain a safe distance from combustible materials.
- Do not store a spare propane cylinder under or near this appliance.
- Always turn off the gas supply at the cylinder when the appliance is not in use.
- This product is CSA certified, ensuring it meets safety standards.

3. PACKAGE CONTENTS

Your U-MAX 44in Outdoor Propane Gas Fire Pit Table package includes the following items:

- One Fire Pit Table with Burner Lid
- Waterproof Fire Pit Cover (Note: Not Rain-Proof)

- Burner with pre-attached 2.4FT Hose & Regulator
- Tempered Glass Wind Guard
- 11 lbs Ocean Blue Decorative Glass Stone Set
- Accessories Bag (Necessary Screws, Nuts & Washers)
- Product Manual

4. PRODUCT SPECIFICATIONS

Feature	Specification
Overall Table Size	43.25"L x 27.5"W x 24.5"H
Heat Output	50,000 BTU
Fuel Type	Liquefied Petroleum Gas (Propane)
Ignition System	Push Button Spark Ignition (AAA Battery required)
Material	Powder-coated Aluminum frame, PE Rattan, 304 Stainless Steel burner/control panel, Tempered Glass tabletop
Color	Brown
Item Weight	73 Pounds
Certification	CSA Certified



Figure 1: Product Dimensions. The table measures 43.25 inches long, 27.5 inches wide, and 24.5 inches high. The glass wind guard is 30.5 inches long, 13 inches wide, and 4 inches high.

5. SETUP AND ASSEMBLY

Your fire pit table comes in two boxes with detailed assembly and use directions. All necessary hardware and tools are included. Assembly is easier with two people and typically takes 20-30 minutes.

5.1 Unpacking and Component Check

Carefully unpack all components and verify against the parts list in the included manual. Ensure all pieces are present and undamaged before proceeding.

5.2 Propane Tank Installation

The fire pit features a convenient pull-out drawer for the propane tank. This design keeps the tank hidden and allows for easy replacement.



Table Weight Capacity : **100LBS**

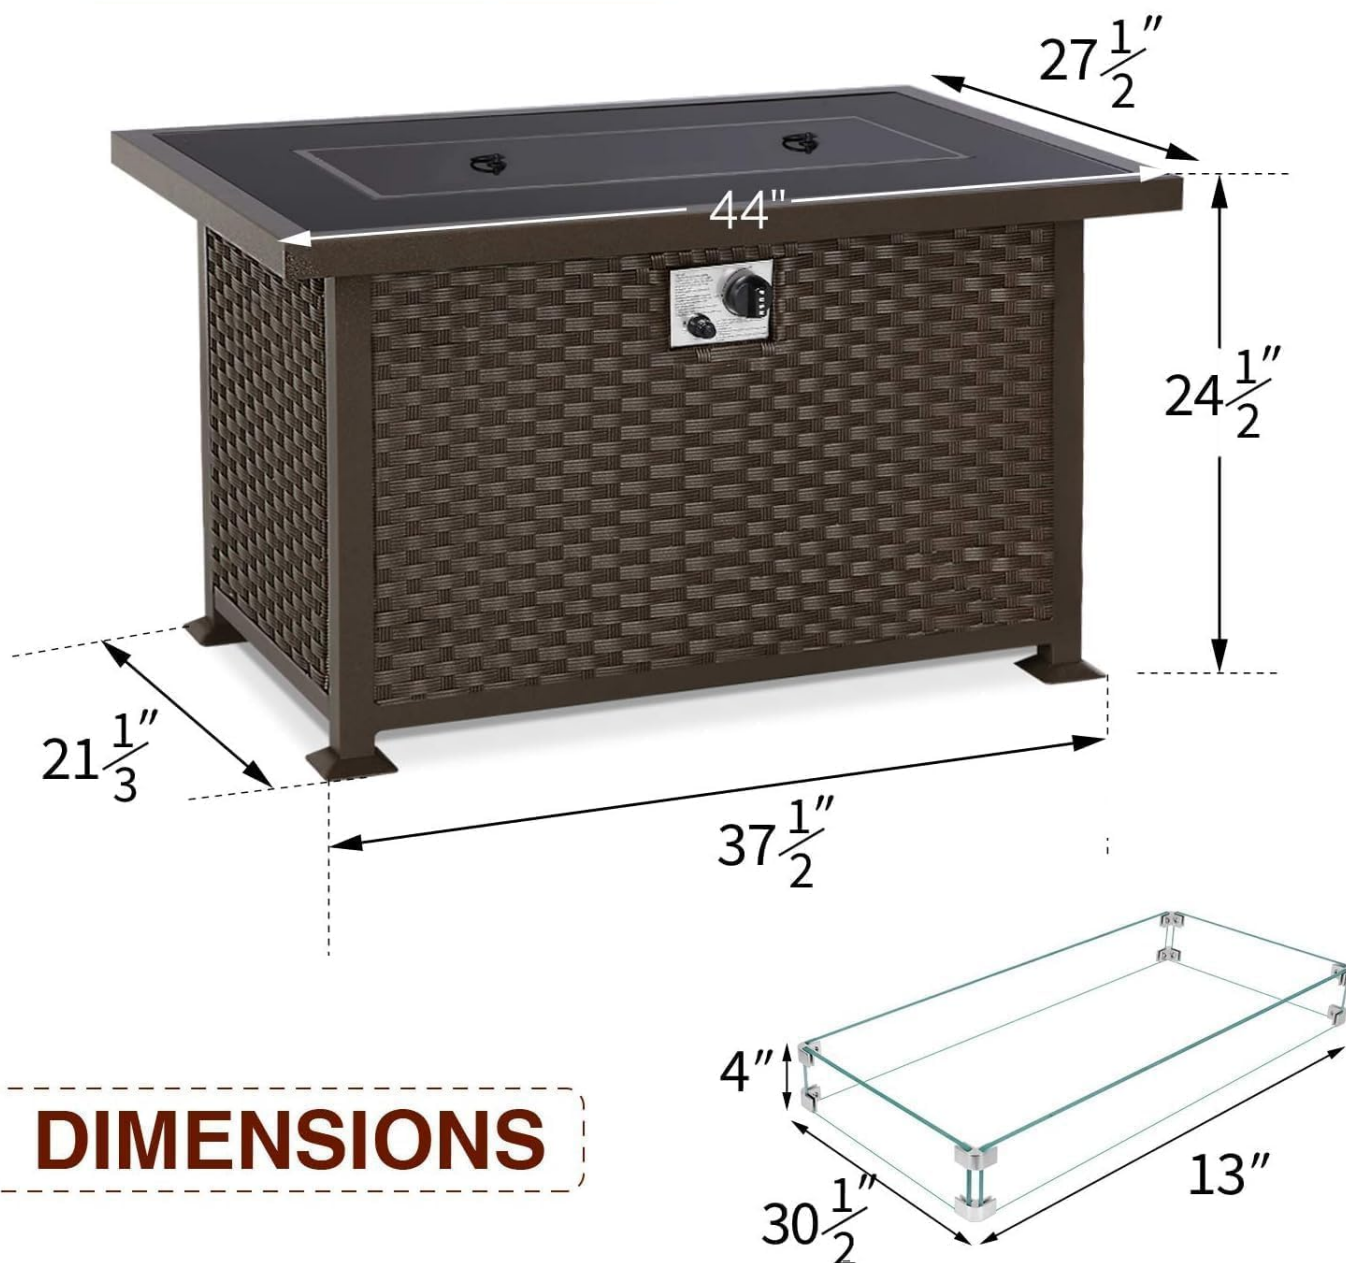


Figure 2: Propane Tank Drawer. The drawer track allows for easy access to the propane tank (not included).

1. Open the side panel to access the propane tank compartment.
2. Slide out the tank tray.
3. Place a standard 20 lb / 5 gallon propane tank (not included) onto the tray.
4. Secure the tank using the provided screw/fastener.
5. Connect the pre-attached hose and regulator to the propane tank valve. Ensure a tight connection.
6. Slide the tank tray back into the compartment and close the side panel.

5.3 Glass Wind Guard Assembly

The tempered glass wind guard helps protect the flame from wind. Assemble it according to the separate instructions provided in the accessories bag. Ensure all screws are securely tightened.

6. OPERATING INSTRUCTIONS

6.1 Lighting the Fire Pit

The fire pit features an auto-ignition system for simple and convenient control.

Drawer track, easy to carry propane tank



- Standard 20 lb / 5 gallon propane tank (not included)

Figure 3: Control Panel. Features a push-button igniter and a control knob for adjusting flame intensity.

1. Ensure the control knob is in the "OFF" position.
2. Connect the propane cylinder (refer to Section 5.2).
3. Slowly open the valve on the propane tank.
4. Push and turn the control knob counter-clockwise to "LOW".
5. Press the igniter button repeatedly to light the burner.
6. If ignition does not occur within 5 seconds, turn the burner control knob to "OFF", wait 5 minutes, and repeat the lighting procedure.
7. Once lit, adjust the flame to your desired height using the control knob.

6.2 Turning Off the Fire Pit

1. Turn the control knob clockwise to the "OFF" position.

2. Turn the cylinder valve on the gas tank clockwise to close the gas supply.



Figure 4: Fire Pit in Operation. The blue glass rocks enhance the visual appeal of the flames.

7. CARE AND MAINTENANCE

- Regularly inspect the hose and connections for any signs of leaks or damage.
- Clean the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners.
- Ensure the burner area is free from debris and obstructions.
- When not in use, especially during inclement weather, cover the fire pit with the provided waterproof cover to protect it from the elements.



Figure 5: Waterproof Cover. Use the cover to protect your fire pit table when not in use.

8. TROUBLESHOOTING

If you encounter issues with your fire pit, refer to the following common solutions:

- **Burner does not light:** Check if the propane tank valve is fully open. Ensure the igniter battery (AAA) is correctly installed and functional. Verify gas flow by listening for a hiss when the control knob is turned to "LOW".
- **Low flame:** Check the propane tank level. Ensure the gas line is not kinked or obstructed.
- **Flame goes out:** Ensure the wind guard is properly installed in windy conditions. Check for adequate gas supply.

For persistent issues, contact customer support.

9. WARRANTY AND SUPPORT

U-MAX provides a 12-month warranty for this product. If you experience any shipping damage or defective issues, please

contact our professional after-sales service team. Refer to the contact information provided in your product packaging or on the official U-MAX website for assistance.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question