

[Manuals.plus](#) /

› [ALLIMITY](#) /

› ALLIMITY RMT-TX100U Remote Control User Manual for Sony Bravia TVs

ALLIMITY RMT-TX100U

ALLIMITY RMT-TX100U Remote Control User Manual

For Sony Bravia TV Models

INTRODUCTION

This manual provides instructions for the ALLIMITY RMT-TX100U replacement remote control, designed for use with various Sony Bravia TV models. This remote operates using infrared (IR) technology and requires no programming; simply insert batteries to begin use.

SETUP

1. Battery Installation

The RMT-TX100U remote control requires two (2) AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back view of the remote control with the battery cover removed, illustrating the battery insertion points.

The remote is now ready for use. No additional pairing or programming is required.

OPERATING INSTRUCTIONS

To ensure proper functionality, point the remote control directly towards the infrared sensor on your Sony

Bravia TV. Avoid placing any obstacles between the remote and the TV sensor.





Image: Front view of the ALLIMITY RMT-TX100U remote control, showing the layout of all buttons.

Key Button Functions:

- **POWER:** Turns the TV on or off.
- **INPUT:** Selects the input source (e.g., HDMI 1, HDMI 2, AV).
- **SYNC MENU:** Accesses the Sync Menu for connected devices.
- **Number Pad (0-9):** Directly enters channel numbers.
- **PIC OFF:** Turns off the TV picture while audio continues.
- **Color Buttons (Yellow, Blue, Red, Green):** Used for specific functions within menus or applications, as indicated on-screen.
- **DISPLAY:** Shows on-screen information.
- **NETFLIX:** Direct access button for the Netflix application.
- **HELP:** Accesses the TV's help menu.
- **ACTION MENU:** Displays a context-sensitive menu for current content.
- **Navigation Pad (Up, Down, Left, Right, Enter):** Navigates through menus and selects options.
- **TV:** Switches to TV input.
- **GUIDE:** Displays the electronic program guide.
- **HOME:** Returns to the TV's home screen.
- **BACK:** Returns to the previous screen or menu.
- **DISCOVER:** Accesses content discovery features.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the TV channel.
- **JUMP:** Jumps between two channels or inputs.
- **MUTING:** Mutes or unmutes the TV audio.
- **AUDIO:** Selects audio options.
- **SUBTITLE CC:** Toggles subtitles or closed captions.
- **Playback Controls (PREV, PLAY, PAUSE, NEXT, WIDE, STOP, FOOTBALL):** Controls media playback functions.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.

- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, or moisture.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are inserted correctly with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the TV's IR sensor.
 - Ensure you are within the effective range and pointing the remote directly at the TV.
- **Intermittent response:**
 - Batteries may be low; replace them.
 - Clean the remote's IR emitter and the TV's IR receiver with a soft cloth.
- **Specific buttons not working:**
 - This remote is a replacement and may not support all advanced functions of original Sony remotes, especially voice control or specific smart features not present on the original RMT-TX100U.
 - Ensure the TV model is listed as compatible.

SPECIFICATIONS

- **Model Number:** RMT-TX100U
- **Brand:** ALLIMITY
- **Connective Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Compatible Devices:** Sony Bravia TVs (refer to product description for specific models)
- **Dimensions:** Approximately 7 x 2 x 0.7 inches (17.8 x 5.1 x 1.8 cm)
- **Weight:** Approximately 2.89 ounces (82 grams) without batteries

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller's policies or contact the seller directly through your purchase platform. Keep your purchase receipt as proof of purchase.