

**Walker Edison BS68FRSWBR**

# **Walker Edison X Back Modern Farmhouse Wood Bookcase (Model BS68FRSWBR) Instruction Manual**

This manual provides detailed instructions for the assembly, usage, and maintenance of your Walker Edison X Back Modern Farmhouse Wood Bookcase.

## **INTRODUCTION**

The Walker Edison X Back Modern Farmhouse Wood Bookcase is a versatile storage unit designed for various home environments, including living rooms, home offices, and bedrooms. Featuring four fixed shelves and a durable pine wood construction with painted metal accents, this bookcase is suitable for displaying books, decorative items, and house plants.





*Image: The Walker Edison X Back Modern Farmhouse Wood Bookcase, showcasing its four shelves and X-back design.*

## SAFETY INFORMATION

Please read and understand all instructions before assembly and use. Keep this manual for future reference.

- **Weight Capacity:** Each shelf is designed to hold up to 50 lbs. Do not exceed this weight limit per shelf. The total weight capacity for the unit is 200 lbs.
- **Stability:** Ensure the bookcase is placed on a level surface. For added stability and safety, especially in homes with children or pets, consider anchoring the unit to a wall using appropriate hardware (not included).
- **Assembly:** Assemble the unit in a spacious area, away from obstacles. Two people are recommended for assembly to prevent injury and ensure proper construction.

- **Maintenance:** Regularly check all fasteners to ensure they remain tight. Loose fasteners can compromise the unit's stability.
- **Chemicals:** Avoid using harsh chemicals or abrasive cleaners on the furniture, as this may damage the finish.

## PACKAGE CONTENTS

---

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Frame components (Pine Wood and Painted Metal)
- Four fixed shelves
- Assembly Hardware (screws, bolts, Allen wrench, etc.)
- Step-by-step instructions

## SETUP AND ASSEMBLY


---

Your Walker Edison bookcase ships ready-to-assemble. Follow the included step-by-step instructions carefully. Two people are recommended for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches.
2. **Identify Parts:** Refer to the parts list in your separate instruction sheet to identify each component and hardware piece.
3. **Assemble Frame:** Begin by connecting the main frame components using the provided hardware. Ensure all connections are secure but do not overtighten until the unit is fully assembled.
4. **Attach Shelves:** Secure the four fixed shelves to the frame. Note the varying depths of the shelves: 8.75" (top), 10.75" (second), 14.25" (third), and 16.75" (bottom).
5. **Install X-Back Support:** Attach the metal X-back support to the rear of the unit for added stability and design.
6. **Final Tightening:** Once all components are in place, carefully tighten all screws and bolts.
7. **Placement:** Position the assembled bookcase on a level surface.



 *Image: Diagram showing the dimensions of the bookcase: 68.25" H x 34.75" W x 17.5" D.*



## Solid Wood Materials

Made with solid wood responsibly sourced from renewable forests and can hold up to 30 lbs.



*Image: Close-up highlighting the solid wood construction and indicating that assembly tools are required.*

## USAGE GUIDELINES

This bookcase is designed for indoor use in living rooms, offices, or bedrooms. It is ideal for organizing and displaying various items.

- **Loading Shelves:** Distribute weight evenly across each shelf. Place heavier items on lower shelves to enhance stability.
- **Recommended Items:** Suitable for books, decorative objects, framed photos, and potted plants.
- **Avoid Overloading:** Do not exceed the maximum weight capacity of 50 lbs per shelf or 200 lbs total for the unit.



*Image: The bookcase styled in a living room, demonstrating its use for books and decorative items.*



*Image: A close-up view of books neatly arranged on one of the bookcase shelves.*



*Image: The lower shelves of the bookcase, displaying books and a decorative bowl with air plants.*

## MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your bookcase.

- **Cleaning:** Wipe with a dry cloth to remove dust and debris. Avoid using wet cloths or liquid cleaners directly on the wood.
- **Spills:** In case of spills, immediately blot with a clean, dry cloth.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.
- **Heat and Moisture:** Keep the bookcase away from direct heat sources and areas of high humidity.
- **Fastener Check:** Periodically check and tighten all assembly fasteners to maintain structural integrity.



*Image: A close-up view of the stained pine wood grain, illustrating the material of the shelves.*

## TROUBLESHOOTING

---

If you encounter issues with your bookcase, refer to the following common solutions:

- **Wobbling/Instability:**

- Ensure the bookcase is on a level surface.
- Check all screws and bolts and tighten them securely.
- Verify that all parts are correctly assembled according to the instructions.

- **Missing or Damaged Parts:**

- Carefully re-check all packaging materials to ensure no small parts were overlooked.
- Contact Walker Edison customer support for replacement parts.

- **Difficulty Assembling:**

- Review the step-by-step instructions provided with the product.
- Ensure you are using the correct hardware for each step.
- Consider having a second person assist with assembly.

## SPECIFICATIONS

Feature	Detail
<b>Model Number</b>	BS68FRSWBR
<b>Dimensions (H x W x D)</b>	68.25" H x 34.75" W x 17.5" D
<b>Material</b>	Stained Solid Pine Wood, Painted Metal
<b>Number of Shelves</b>	4 (fixed)
<b>Shelf Depths (Top to Bottom)</b>	8.75", 10.75", 14.25", 16.75"
<b>Weight Capacity per Shelf</b>	50 lbs
<b>Total Weight Capacity</b>	200 lbs
<b>Item Weight</b>	33 Pounds
<b>Assembly Required</b>	Yes
<b>Care Instructions</b>	Wipe with Dry Cloth

## WARRANTY INFORMATION

Walker Edison products are designed for quality and durability. For specific warranty details regarding your X Back Modern Farmhouse Wood Bookcase, please refer to the documentation included with your purchase or contact Walker Edison customer support directly. Replacement parts are available; please contact Walker Edison within 30 days of delivery for assistance.

## CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need replacement parts, please contact Walker Edison customer support:

**Phone: 1-801-433-3008**

**Email: [service@walkeredison.com](mailto:service@walkeredison.com)**

# QUESTIONS? We can help you.



**1-801-433-3008**  
or email **service@walkeredison.com**

Replacement parts now available.  
Please contact Walker Edison within 30 days of delivery.

*Image: Walker Edison customer support contact details.*

© 2023 Walker Edison. All rights reserved.