

Manuals.plus /

› FocalTop /

› User Manual: FocalTop AH59-02424A Replacement Remote Control

FocalTop AH59-02424A

User Manual: FocalTop AH59-02424A Replacement Remote Control

For Samsung Home Theater Systems HT-E353HK, HT-E355K, HT-E330K, HT-E330

INTRODUCTION

This manual provides essential information for the proper use and maintenance of your FocalTop AH59-02424A Replacement Remote Control. This remote is designed as a direct replacement for specific Samsung Home Theater System models, offering immediate functionality without the need for complex programming.





Figure 1: Front view of the AH59-02424A Replacement Remote Control, showing all buttons and layout.

SETUP

Battery Installation

The AH59-02424A remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Figure 2: Back view of the remote control, illustrating the open battery compartment for AAA battery insertion.

Once batteries are installed, the remote is ready for use with compatible Samsung Home Theater Systems. No programming is required.

OPERATING INSTRUCTIONS

This replacement remote control is designed to function identically to the original Samsung AH59-02424A remote. Simply point the remote at your Samsung Home Theater System and press the desired button.

Compatible Models

This remote control is compatible with the following Samsung Home Theater System models:

- HT-E353HK
- HT-E355K
- HT-E330K
- HT-E330

Basic Functions

The remote provides access to all standard functions of your home theater system, including:

- **Power On/Off:** Use the **POWER** button.
- **Volume Control:** Adjust with the **VOL +/-** buttons.
- **Mute:** Silence audio with the **MUTE** button.
- **Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind, Skip Track using the dedicated buttons.
- **Navigation:** Use the directional arrows and **ENTER** button for menu navigation.
- **Source Selection:** Select input sources (e.g., DVD, USB) as per your system's capabilities.
- **Number Pad:** Direct input for track numbers or other numerical selections.



Figure 3: Angled view of the remote control, highlighting the ergonomic design and button layout.

MAINTENANCE

Proper care will extend the life of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always replace both batteries at the same time with new ones.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Environment:** Avoid exposing the remote to extreme temperatures, direct sunlight, high humidity, or liquids.

TROUBLESHOOTING

If you experience issues with your remote control, try the following solutions:

Problem	Possible Solution
Remote is not responding.	<ul style="list-style-type: none"> • Check if the batteries are inserted correctly with the correct polarity (+/-). • Replace old batteries with new ones. • Ensure there are no obstructions between the remote and the home theater system's IR receiver. • Make sure you are within the effective range of the home theater system.
Some buttons are not working.	<ul style="list-style-type: none"> • Clean the remote control surface, especially around the non-working buttons, to remove any dirt or debris. • Ensure the remote is pointed directly at the home theater system. • Verify that your home theater system model is listed as compatible.

SPECIFICATIONS

Feature	Detail
Model Number	AH59-02424A
Brand	FocalTop
Connectivity Technology	Infrared (IR)
Compatible Devices	Samsung Home Theater Systems (HT-E353HK, HT-E355K, HT-E330K, HT-E330)
Controller Type	Button Control
Special Feature	Ergonomic
Power Source	2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

As a replacement part, specific warranty details may vary. Please refer to the seller or retailer from whom you purchased this product for information regarding warranty coverage and return policies.

For technical support or further assistance, please contact the seller directly. Ensure you have your purchase details readily available when contacting support.