

[Manuals.plus](#) /

> [VIVOHOME](#) /

> VIVOHOME 6-Quart Stand Mixer User Manual

VIVOHOME VH291-BK

VIVOHOME 6-Quart Stand Mixer User Manual

Model: VH291-BK | Brand: VIVOHOME

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the mixer.
- To protect against risk of electrical shock, do not immerse the mixer body, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Always ensure the mixer is turned off and unplugged before assembling, disassembling, or cleaning.
- Do not use the appliance for other than intended household use.

2. PRODUCT OVERVIEW

The VIVOHOME Stand Mixer is designed for efficient and versatile mixing tasks in your kitchen. It features a powerful motor, a large capacity bowl, and multiple attachments for various culinary needs.

2.1 Components



Figure 2.1: VIVOHOME Stand Mixer with its primary components and included attachments.

- **Mixer Body:** Contains the motor and speed controls.
- **Tilt-Head:** Allows for easy attachment and bowl removal.
- **6-Quart Stainless Steel Bowl:** Large capacity mixing bowl with a handle.
- **Splash Guard:** Transparent cover to prevent splattering during operation, with an opening for adding ingredients.
- **Speed Control Knob:** Adjusts mixing speed from 1 to 10, plus a pulse function.

2.2 Attachments

The mixer comes with three primary attachments and an egg separator:

Attachment Set

Comes with 3 multipurpose accessories



Figure 2.2: Included attachments: Wire Whisk, Dough Hook, and Mixing Beater.

- **Wire Whisk:** Ideal for whipping eggs, cream, and light batters. Made of stainless steel.
- **Dough Hook:** Designed for kneading yeast doughs for bread, pizza, and pasta. Made of aluminum.
- **Mixing Beater:** Suitable for mixing cakes, cookies, pastries, and frostings. Coated with Teflon.
- **Egg Separator:** A small accessory for separating egg yolks from whites.

3. SETUP

1. **Unpack the Mixer:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the mixer on a clean, dry, and stable surface. Ensure there is enough space around the mixer for operation and ventilation. The suction cups on the base will help secure it.

3. Attach the Bowl:

- Ensure the mixer is unplugged and the speed control is set to '0'.
- Place the stainless steel bowl onto the base, aligning the grooves on the bowl with the locking mechanism on the base.
- Rotate the bowl clockwise until it locks securely into place.



Figure 3.1: Securely fixing the mixing bowl to the base.

4. Attach an Accessory:

- Lift the tilt-head by pressing the tilt-head release button and raising the head until it clicks into place.
- Slide the desired attachment (whisk, dough hook, or beater) onto the attachment shaft, aligning the pin on the shaft with the groove on the attachment.
- Rotate the attachment counter-clockwise until it locks into place.
- Lower the tilt-head by pressing the release button again and gently pushing the head down until it locks.

5. **Attach the Splash Guard:** Place the splash guard over the bowl, ensuring it fits snugly. The opening allows for easy addition of ingredients.

4. OPERATING INSTRUCTIONS

Follow these steps to operate your VIVOHOME Stand Mixer:

1. **Add Ingredients:** Place your ingredients into the stainless steel mixing bowl.
2. **Plug In:** Plug the power cord into a standard electrical outlet.
3. **Select Speed:** Turn the speed control knob to the desired speed setting. The mixer offers 10 speeds and a pulse function (P).

10-speed Control

Easy to Adjust; Satisfy precise needs for various tasks

		
1-3 Speed	4-7 Speed	8-10 Speed
Knead Dough	Mix Salad	Stir Eggs or Cream



Portable handle



Figure 4.1: Speed recommendations for various tasks.

- **Speeds 1-3 (Knead Dough):** For heavy mixtures like bread dough, pizza dough, or pasta.
 - **Speeds 4-7 (Mix Salad/Batters):** For medium-heavy mixtures like cake batters, cookie dough, or mixing salads.
 - **Speeds 8-10 (Stir Eggs/Cream):** For light mixtures like whipping cream, egg whites, or light batters.
 - **Pulse (P):** Provides short bursts of power for quick mixing or incorporating ingredients.
4. **Monitor Mixing:** Observe the mixing process through the transparent splash guard. Use the opening to add additional ingredients as needed.
 5. **Turn Off:** Once mixing is complete, turn the speed control knob back to '0' and unplug the mixer from the outlet.

6. **Remove Bowl and Attachments:** Lift the tilt-head, remove the attachment by rotating it clockwise, and then unlock and remove the mixing bowl.

5. CARE AND CLEANING

Proper care and cleaning will ensure the longevity and optimal performance of your VIVOHOME Stand Mixer.

- **Always unplug the mixer before cleaning.**
- **Mixer Body:** Wipe the exterior of the mixer body with a damp cloth. Do not immerse the mixer body in water or any other liquid.
- **Stainless Steel Bowl:** The 6-quart stainless steel bowl can be washed with warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots.
- **Attachments (Wire Whisk, Dough Hook, Mixing Beater):** Wash these attachments by hand with warm, soapy water. **Note: The attachments are NOT dishwasher safe.** Rinse and dry thoroughly after washing.
- **Splash Guard:** Wash the splash guard with warm, soapy water. Rinse and dry.
- **Storage:** Store the mixer and its accessories in a clean, dry place when not in use.

6. TROUBLESHOOTING

If you encounter any issues with your VIVOHOME Stand Mixer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet malfunction; speed knob not at '0'.	Ensure the mixer is securely plugged into a working outlet. Check if the speed knob is set to '0' before turning on.
Attachments do not reach the bottom of the bowl.	Attachment not properly installed.	Ensure the attachment is fully pushed onto the shaft and rotated to lock into place.
Mixer is excessively noisy or vibrates.	Overloaded; unstable surface; internal issue.	Reduce the amount of ingredients. Ensure the mixer is on a flat, stable surface. If the problem persists, discontinue use and contact customer support.
Ingredients are not mixing evenly.	Incorrect attachment; ingredients stuck to sides.	Stop the mixer, scrape down the sides of the bowl with a spatula, and resume mixing.

If the problem persists after attempting these solutions, please contact VIVOHOME customer support for assistance.

7. SPECIFICATIONS

- **Brand:** VIVOHOME
- **Model Name:** VIVOHOME Electric Stand Kitchen Food Mixer
- **Model Number:** VH291-BK
- **Power:** 660W
- **Capacity:** 6 Quarts
- **Speeds:** 10-speed control with pulse function
- **Product Dimensions:** 15.2"D x 8.8"W x 18.8"H

- **Item Weight:** 11 Pounds
- **Blade Material:** Stainless Steel (for whisk)
- **Container Material:** Steel (Stainless Steel bowl)
- **Special Feature:** Tilt Head
- **Dishwasher Safe:** No (for attachments)

PRODUCT SPECIFICATION:

PACKAGE DIMENSIONS: 16.5*10.2*14.6 IN

PACKAGE WEIGHT: 13.6 lbs.



Figure 7.1: Key dimensions of the VIVOHOME Stand Mixer.

8. WARRANTY AND SUPPORT

VIVOHOME products are manufactured with quality and durability in mind. For information regarding warranty coverage, product support, or to purchase replacement parts, please visit the official VIVOHOME website or contact their customer service directly.

For the most up-to-date information, please refer to the contact details provided with your purchase or on the VIVOHOME official brand store:

[Visit the VIVOHOME Brand Store on Amazon](#)

