

[Manuals.plus](#) /

› [Clever](#) /

› Clever Coffee Dripper (Large 18 oz, Black) Instruction Manual

Clever C-70777.CCD#4

Clever Coffee Dripper (Large 18 oz, Black) Instruction Manual

Model: C-70777.CCD#4

INTRODUCTION

The Clever Coffee Dripper combines the best features of pour-over and French press brewing methods, offering a full-bodied, clean cup of coffee with minimal effort. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your Clever Coffee Dripper.



Image: The Clever Coffee Dripper in black, showcasing its design.

WHAT'S INCLUDED

Your Clever Coffee Dripper package includes the following components:

- 1 x Clever Coffee Dripper (Large 18 oz)
- 100 x Clever Filters (Paper)
- 1 x Coaster
- 1 x Lid

What's Included

Everything you need to start brewing today



Image: All components included with the Clever Coffee Dripper: the dripper, lid, coaster, and a stack of 100 paper filters.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash:** Before first use, wash the Clever Coffee Dripper, lid, and coaster with warm, soapy water. Rinse thoroughly.
3. **Insert Filter:** Place one Clever paper filter into the cone of the dripper, ensuring it sits snugly against the sides.
4. **Pre-wet Filter (Optional):** For optimal taste, you may pre-wet the paper filter with a small amount of hot water. Discard this water before adding coffee grounds.

OPERATING INSTRUCTIONS

Follow these steps to brew a perfect cup of coffee:

1. **Add Coffee Grounds:** Place fresh, coarse ground coffee into the filter. A common ratio is 1 rounded tablespoon per 4 oz (125ml) cup, or adjust to your preference.
2. **Add Hot Water:** Slowly pour hot water (ideally between 195-205°F / 90-96°C) over the grounds in a circular motion, ensuring all grounds are saturated.
3. **Steep:** Place the lid on the dripper to retain heat. Allow the coffee to steep for 2-4 minutes, depending on your desired strength. The unique shut-off valve at the bottom will prevent dripping during this stage.
4. **Dispense:** Once steeping is complete, place the Clever Coffee Dripper onto your mug or carafe. The rim of the mug will press against the valve, allowing the brewed coffee to flow directly into your cup.
5. **Enjoy:** Once the coffee has fully drained, remove the dripper from your mug. Your perfect cup of coffee is ready to enjoy!



Image: Visual guide illustrating the four main steps of brewing with the Clever Coffee Dripper, from adding grounds to dispensing coffee.



Image: A hand pouring hot water from a gooseneck kettle into the Clever Coffee Dropper, which contains a paper filter and coffee grounds.



Image: The Clever Coffee Dropper placed on top of a clear glass mug, with brewed coffee flowing from the dropper into the mug.

Understanding the Automatic Shut-Off Valve

The Clever Coffee Dropper features a patented shut-off valve at its base. This valve remains closed when the dropper is placed on a flat surface, allowing for full immersion brewing. When the dropper is placed on a mug, the weight and pressure activate the valve, opening it to release the brewed coffee. This mechanism ensures no drips or spills until you are ready to dispense.



AUTOMATIC SHUT OFF VALVE

Pours out only placed on a cup, brew as long as you want.

Image: A detailed close-up of the transparent automatic shut-off valve at the bottom of the Clever Coffee Dripper, showing its internal mechanism.

Official Product Videos

Your browser does not support the video tag.

Video: "Best Clever Dripper Recipe" by JumpBoost. This video demonstrates a recommended brewing recipe for the Clever Coffee Dripper.

Your browser does not support the video tag.

Video: "Clever Dripper - Steps - JumpBoost". This video provides a quick overview of the steps involved in using the Clever Dripper.

Your browser does not support the video tag.

Video: "Clever Dripper for Beginners" by JumpBoost. This video offers a beginner-friendly guide to using the Clever Coffee Dripper.

MAINTENANCE & CLEANING

The Clever Coffee Dripper is designed for easy cleaning. Proper maintenance ensures longevity and consistent coffee quality.

- **After Each Use:** Discard the used paper filter and coffee grounds. Rinse the dripper thoroughly with

warm water.

- **Dishwasher Safe:** The Clever Coffee Dripper, lid, and coaster are made from 100% BPA-free durable Tritan plastic and are dishwasher safe (top rack recommended).
- **Avoid Harsh Abrasives:** Do not use abrasive cleaners or scouring pads, as these can scratch the plastic.
- **Deep Cleaning (Periodically):** For a deeper clean, especially if you notice coffee residue buildup, you can soak the dripper in a solution of warm water and a small amount of white vinegar or a coffee equipment cleaner. Rinse thoroughly afterward.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Coffee drains too slowly.	Coffee grounds are too fine or too much coffee is used.	Use a coarser grind setting or reduce the amount of coffee grounds. Ensure the filter is not clogged.
Coffee drains too quickly.	Coffee grounds are too coarse.	Use a finer grind setting to allow for more contact time with water.
Coffee tastes weak.	Insufficient steeping time or too coarse grounds.	Increase steeping time (up to 4 minutes) or use a finer grind. Ensure water temperature is correct.
Coffee tastes bitter.	Over-extraction (too long steeping time) or too fine grounds.	Reduce steeping time or use a coarser grind. Ensure water temperature is not too high.
Dripper leaks when not on a mug.	Valve mechanism may be obstructed or damaged.	Ensure the valve area is clean and free of grounds. If damage is suspected, contact customer support.

SPECIFICATIONS

- **Material:** 100% BPA-free Durable Tritan Plastic
- **Capacity:** 18 oz (Large Size)
- **Dimensions:** 4.25 x 5 x 5.5 inches
- **Item Weight:** 1.12 pounds
- **Filter Type:** #4 Cone Filter
- **Compatibility:** Fits on cups and thermoses with tops wider than 1.5" and less than 3.75" in diameter.

WARRANTY & SUPPORT

For warranty information or customer support, please visit the official Clever website or contact your retailer. Keep your purchase receipt as proof of purchase.

