

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Continental Edison](#) /
› [CONTINENTAL EDISON 1600W Steam Vacuum Cleaner User Manual](#)

Continental Edison 3612402908913

CONTINENTAL EDISON 1600W Steam Vacuum Cleaner User Manual

Model: 3612402908913

INTRODUCTION

Thank you for choosing the Continental Edison 1600W Steam Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Read all instructions before using the appliance.
- Do not immerse the appliance in water or other liquids.
- Do not operate the appliance with a damaged cord or plug.
- Keep children and pets away from the appliance during operation.
- Use only manufacturer-recommended attachments.
- Unplug from outlet when not in use and before cleaning.
- Exercise extreme caution when using steam to clean stairs.
- Do not direct steam at people, animals, or electrical components.
- Use only tap water or distilled water in the water tank. Do not add cleaning solutions, perfumes, or other chemicals.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Continental Edison Steam Vacuum Cleaner.



Image 1: The Continental Edison 1600W Steam Vacuum Cleaner in its upright position. This image displays the main body, handle, dust tank, and floor nozzle with the mop pad attached. The appliance is white with grey accents.

- **Handle:** Ergonomic grip for comfortable operation.
- **Main Body:** Houses the motor, heating element, and internal components.
- **Dust Tank:** Removable container for collecting vacuumed debris.
- **Water Tank:** Reservoir for water used in steam generation.
- **Floor Nozzle:** Attachment for vacuuming and steam cleaning floors.
- **Mop Pad:** Reusable pad attached to the floor nozzle for steam cleaning.
- **Power Cord:** For connecting to an electrical outlet.



Image 2: Various accessories for the Continental Edison Steam Vacuum Cleaner. Shown are the removable dust tank, the water tank, and the floor nozzle base with a detachable microfiber mop pad. These components are essential for the vacuum and steam functions.

SETUP AND ASSEMBLY

- 1. Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or transport.
- 2. Handle Assembly:** Insert the handle into the main body until it clicks securely into place.
- 3. Attach Floor Nozzle:** Connect the floor nozzle to the main body. Ensure it is firmly attached.
- 4. Attach Mop Pad:** Secure the microfiber mop pad to the bottom of the floor nozzle. The pad typically attaches with hook-and-loop fasteners.
- 5. Fill Water Tank:**
 - Remove the water tank from the appliance.
 - Open the water tank cap.
 - Fill the tank with clean tap water or distilled water up to the maximum fill line (500 ml capacity). Do not overfill.
 - Close the cap securely and reinsert the water tank into the appliance.
- 6. Insert Dust Tank:** Ensure the dust tank is empty and properly inserted into its compartment.



Image 3: A hand demonstrating the insertion of the transparent dust tank into the main body of the Continental Edison Steam Vacuum Cleaner. This shows the correct way to secure the dust collection component before operation.

OPERATING INSTRUCTIONS

General Operation

1. **Power Connection:** Plug the power cord into a suitable 240V electrical outlet.
2. **Power On:** Press the power button to turn on the appliance.
3. **Mode Selection:** The appliance offers both vacuuming and steam cleaning functions. Select the desired mode using the controls on the handle.

Vacuuming Function

1. Ensure the dust tank is empty and properly installed.
2. Select the vacuum mode.
3. Move the vacuum cleaner slowly over the surface to be cleaned. The powerful 1600W motor will effectively pick up dust and debris.
4. Empty the dust tank when it reaches the MAX fill line or after each use.

Steam Cleaning Function

1. Ensure the water tank is filled (500 ml capacity).
2. Select the steam mode. Allow approximately 30 seconds for the water to heat up and steam to generate.
3. Once steam is ready, move the appliance slowly and steadily over hard, sealed floor surfaces. Do not hold the steam cleaner in one spot for too long to avoid damaging the floor.
4. The steam pressure is 2.8 bar, providing effective cleaning and sanitization.
5. Replace the mop pad when it becomes heavily soiled.

Combined Vacuum and Steam Function

For optimal cleaning, it is recommended to vacuum the area first to remove loose debris, then proceed with steam cleaning. Some models may allow simultaneous operation; refer to the specific controls on your unit.

MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your steam vacuum cleaner.

- **Emptying the Dust Tank:**

- Press the release button to detach the dust tank.
- Empty contents into a waste bin.
- Rinse the dust tank and filter with water if necessary, and allow them to air dry completely before reassembling.

- **Cleaning the Mop Pads:**

- Remove the mop pad from the floor nozzle.
- Machine wash the mop pad with similar colors, or hand wash with mild detergent. Do not use bleach or fabric softeners.
- Allow to air dry completely before reuse.

- **Descaling the Water Tank/Steam System:**

Over time, mineral deposits can build up in the water tank and steam system, especially if using hard tap water. To descale:

- Mix a solution of equal parts white vinegar and water.
- Pour the solution into the water tank.
- Allow it to sit for 30 minutes, then empty.
- Rinse the tank thoroughly with clean water.
- Run a tank of clean water through the steam system to flush out any remaining vinegar.

- **Exterior Cleaning:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or solvents.

- **Storage:** Store the appliance in a cool, dry place. Ensure the water tank and dust tank are empty and clean before storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; power button not pressed.	Check power cord connection; test outlet with another appliance; press power button firmly.
No steam or low steam output.	Water tank empty; water tank not properly installed; steam system clogged with mineral deposits.	Refill water tank; ensure tank is securely in place; descale the appliance (refer to Maintenance section).
Poor vacuum suction.	Dust tank full; filter clogged; nozzle blocked.	Empty dust tank; clean or replace filter; check nozzle for obstructions.

Problem	Possible Cause	Solution
Water leaking from appliance.	Water tank cap not secure; water tank not properly seated; overfilled water tank.	Ensure water tank cap is tightly closed; re-seat water tank; do not overfill.

If the problem persists after attempting these solutions, please contact customer support.

PRODUCT SPECIFICATIONS

- **Brand:** Continental Edison
- **Model Number:** 3612402908913
- **Power:** 1600 Watts
- **Voltage:** 240 Volts
- **Steam Pressure:** 2.8 bar
- **Dust Tank Capacity:** 1 Liter
- **Water Tank Capacity:** 500 ml
- **Weight:** 10 Kilograms
- **Color:** White
- **Power Source:** Corded Electric

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details. For technical support, spare parts, or warranty claims, please contact Continental Edison customer service.

Contact Information: Please visit the official Continental Edison website for the most up-to-date contact details for your region.

© 2023 Continental Edison. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.