

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› Dickie Toys RC Fire Engine Rotating Ladder 360° Light & Sound Water Spray Function Instruction Manual

DICKIE TOYS 203719022

Dickie Toys RC Fire Engine Instruction Manual

Model: 203719022

[Safety](#)

[Contents](#)

[Setup](#)

[Operation](#)

[Maintenance
Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

INTRODUCTION

This manual provides instructions for the safe and proper use of your Dickie Toys RC Fire Engine. Please read this manual thoroughly before operating the product and retain it for future reference.



Image: Front-side view of the Dickie Toys RC Fire Engine with its ladder extended and emergency lights illuminated.

SAFETY INFORMATION

WARNING:

- Contains small parts.
- To be used under the direct supervision of an adult.
- Not suitable for children under 36 months (3 years).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove batteries during long periods of non-use to prevent leakage.

WHAT'S IN THE BOX

Please check that all items are present:

- Dickie Toys RC Fire Engine
- 4-channel 2.4GHz Radio Control (Remote)
- Accessories (e.g., traffic cones)
- AA Batteries (for vehicle, 3 included)



Image: The product packaging displaying the RC Fire Engine, remote control, and included accessories.

SETUP

1. Battery Installation

Ensure the power switch on both the vehicle and remote control is in the OFF position before installing batteries.

1. **For the RC Fire Engine:** Locate the battery compartment on the underside of the vehicle. Open the compartment

cover using a screwdriver (not included). Insert 3 AA batteries, ensuring correct polarity (+/-). Close the cover and secure it.

2. **For the Remote Control:** Locate the battery compartment on the back of the remote control. Open the compartment cover. Insert 2 AA batteries, ensuring correct polarity (+/-). Close the cover.

2. Water Tank Filling

The fire engine features a water spray function. To use this, the water tank must be filled.

1. Locate the water tank inlet at the rear of the fire engine.
2. Carefully pour clean water into the tank. Do not overfill.
3. Securely close the water tank cap.



Image: Rear view of the fire engine, highlighting the water tank and ladder base.

OPERATING INSTRUCTIONS

1. Power On

1. Switch on the RC Fire Engine using the power switch located on the vehicle.
2. Switch on the remote control using its power switch. The remote control and vehicle should automatically pair.

2. Driving the Vehicle

Use the joysticks or directional buttons on the remote control to maneuver the fire engine:

- **Forward/Backward:** Push the designated lever/button forward or backward.
- **Turn Left/Right:** Push the designated lever/button left or right.

3. Ladder Operation

The fire engine features a rotating and extendable ladder:

- **Rotate Ladder:** Use the designated control on the remote to rotate the ladder 360 degrees.
- **Extend/Retract Ladder:** Manually extend or retract the ladder sections.

4. Light and Sound Functions

Activate the emergency lights and siren sounds using the dedicated buttons on the remote control.

5. Water Spray Function

Ensure the water tank is filled before activating this function.

- Press the designated button on the remote control to activate the water spray from the ladder nozzle.
- Release the button to stop the spray.



Image: The RC Fire Engine actively spraying water from the nozzle at the end of its extended ladder.

MAINTENANCE

Cleaning

- Wipe the vehicle and remote control with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- Do not immerse the vehicle or remote control in water.

Battery Care

- Remove all batteries from both the vehicle and remote control if the product will not be used for an extended period.
- Dispose of used batteries responsibly according to local regulations.

Water System

- After each use of the water spray function, drain any remaining water from the tank to prevent stagnation or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vehicle does not move or respond to remote.	Low or incorrectly installed batteries in vehicle or remote.	Check and replace batteries in both the vehicle and remote control. Ensure correct polarity.
Lights or sounds are not working.	Low or depleted batteries in the vehicle.	Replace batteries in the vehicle.
Water spray function is not working.	Water tank is empty; pump obstruction.	Refill the water tank. Check the nozzle for any blockages.
Ladder does not rotate or extend smoothly.	Obstruction or debris.	Inspect the ladder mechanism for any foreign objects and remove them carefully.

SPECIFICATIONS

- **Model Number:** 203719022
- **Item Weight:** 5.32 pounds
- **Manufacturer Recommended Age:** 3 years and up
- **Vehicle Batteries:** 3 AA batteries (included)
- **Remote Control Batteries:** 2 AA batteries (not included, based on common practice for RC toys)
- **Features:** 360° Rotating Ladder, Light & Sound, Water Spray Function, Freewheel
- **Radio Control:** 4-channel FS with 2.4GHz



Image: Side view of the Dickie Toys RC Fire Engine, showcasing its detailed design.

WARRANTY & SUPPORT

For warranty information, product support, or to purchase replacement parts, please refer to the official Dickie Toys website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Manufacturer: Dickie Toys

Website: [Visit the DICKIE TOYS Store on Amazon](#)

© 2023 Dickie Toys. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question