

[Manuals.plus /](#)

[Ewin /](#)

[Ewin Wireless Bluetooth Keyboard EW-B009 Instruction Manual](#)

Ewin EW-B009

Ewin Wireless Bluetooth Keyboard EW-B009 Instruction Manual

INTRODUCTION

Thank you for purchasing the Ewin Wireless Bluetooth Keyboard EW-B009. This compact and lightweight keyboard is designed for multi-system compatibility, allowing seamless switching between up to three devices. It features a JIS Japanese layout and a comfortable pantograph key mechanism, making it ideal for various computing tasks.



Image: Comparison highlighting the Ewin keyboard's features like multi-system support, multi-pairing, JIS Japanese layout, and Bluetooth 5.1.

コンパクト 軽量×薄型
持ち運びとても便利



Image: The compact and lightweight Ewin keyboard shown with a tablet, emphasizing its portability.

SETUP INSTRUCTIONS

1. Battery Installation

The keyboard operates on AAA alkaline batteries. Locate the battery compartment on the back of the keyboard, open it, and insert two AAA batteries according to the polarity markings. Close the compartment securely. **Note: Batteries are not included and must be purchased separately.**

2. Powering On

Slide the power switch, located on the side or back of the keyboard, to the 'ON' position. An LED indicator will light up briefly.

3. Bluetooth Pairing

This keyboard supports multi-pairing with up to three devices. Follow these steps to pair your device:

1. Press and hold the **Fn** key, then press one of the device selection keys **1**, **2**, or **3** to select a channel for your device.
2. Press and hold **Fn + Tab** (the Bluetooth connection button) until the blue LED indicator starts blinking. This indicates the keyboard is in pairing mode.
3. On your device (PC, tablet, smartphone), go to Bluetooth settings and search for available devices.
4. Select 'Ewin Keyboard' or a similar name from the list of found devices.
5. If prompted, enter the pairing code displayed on your device using the Ewin keyboard and press **Enter**.
6. Once paired, the LED indicator will stop blinking and remain solid blue for a few seconds, then turn off. The keyboard is now connected and ready to use.

Important: Ensure your device has Bluetooth functionality. This keyboard is not compatible with all Android 12 devices. No special drivers are required; simply pair to use.

最大3台のマルチペアリングに対応

パソコンやタブレット、スマートフォンなど、
最大3台までのデバイスをペアリング可能です。
切り替えボタンを押すことで登録したデバイスを
瞬時に切り替えることができます。

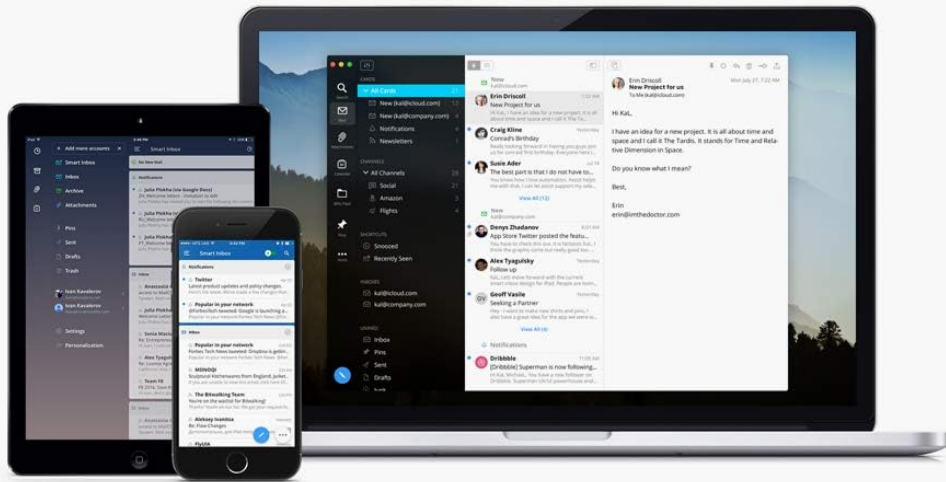


Image: The Ewin keyboard demonstrating multi-device connectivity with a laptop, tablet, and smartphone.

OPERATING INSTRUCTIONS

1. Switching Between Devices

To switch between up to three paired devices, simply press **Fn + 1**, **Fn + 2**, or **Fn + 3**. The keyboard will quickly connect to the selected device.



Image: A visual representation of switching between three devices (smartphone, tablet, PC) using the keyboard's dedicated function keys.

2. OS Optimization

The keyboard is optimized for different operating systems. To select the appropriate OS mode, press:

- **Fn + Q** for Android OS
- **Fn + W** for Windows OS
- **Fn + E** for iOS/Macintosh OS

それぞれのOS最適化した入力モードを搭載

Windows OS/Android OS/Macintosh OS/iOSのそれぞれに
最適化した入力モードを搭載しています。

Bluetooth搭載しているiPad、スマホ、PCにすべて対応します。

本体サイズ:295*120*20mm
本体重量:約290g

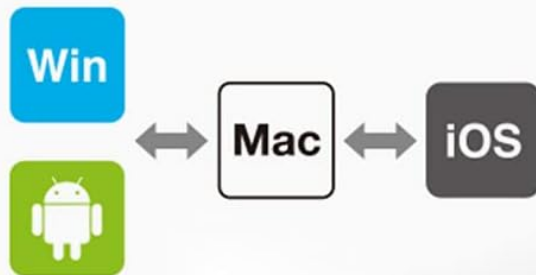


Image: The Ewin keyboard with indicators for Windows, Mac, and iOS, showing its multi-OS compatibility.

3. Multi-function Keys

The keyboard is equipped with 12 dedicated multi-function keys (F1-F12) that allow for convenient control of media playback, volume, and other system functions. To use these functions, press the **Fn** key simultaneously with the desired function key.

- **Fn + F1**: Home
- **Fn + F2**: Search
- **Fn + F3**: Mute

- **Fn + F4**: Volume Down
- **Fn + F5**: Volume Up
- **Fn + F6**: Previous Track
- **Fn + F7**: Play/Pause
- **Fn + F8**: Next Track
- **Fn + F9**: Pause Key (for media players)
- **Fn + F10**: Insert
- **Fn + F11**: Scroll Lock
- **Fn + F12**: Print Screen



Image: The Ewin keyboard displaying its 12 multi-function keys, which provide quick access to various controls when used with the Fn key.

4. Typing Experience

The keyboard features a JIS Japanese layout, allowing for both Kana and Roman character input. It utilizes a pantograph key mechanism, similar to laptop keyboards, providing a light and comfortable typing experience with a 19mm key pitch and 79 keys.



Image: A detailed diagram illustrating the pantograph key mechanism, showing the keycap, rubber dome, and pantograph structure.

MAINTENANCE

Cleaning

To clean the keyboard, gently wipe the surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, ensuring no liquid enters the keyboard. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

When the keyboard's performance degrades or the LED indicator suggests low power, replace the AAA batteries. Always use new alkaline batteries for optimal performance.

TROUBLESHOOTING

If your device cannot find the Bluetooth keyboard:

1. **Check Pairing Mode:** Ensure the keyboard is in pairing mode. Press **Fn + 1/2/3** to select a channel, then press **Fn + Tab**. The blue LED should blink.
2. **Check Battery Level:** Low battery on either the keyboard or your device can prevent proper operation. Replace the keyboard batteries or fully charge your device.
3. **Restart Bluetooth/Device:** Turn off and then turn on Bluetooth on your device. If the issue persists, restart your device.
4. **Check for Other Connections:** If the keyboard is automatically connected to another device, your current device may not find it. Turn off Bluetooth or power off other devices that might be connected to the keyboard.
5. **Distance:** Bluetooth signal weakens with distance. Keep the keyboard within 1 meter (3 feet) of your device.
6. **Interference:** Metal objects, magnetic fields, or other wireless devices can interfere with Bluetooth signals. Move the keyboard away from such items or turn off unnecessary electronic devices.
7. **OS Update:** Outdated operating systems may have bugs or incompatibilities. Ensure your device's OS is updated to the latest version.

If your device can find Bluetooth but cannot pair:

1. **Power Cycle Keyboard:** Turn the keyboard off and then on again, then attempt pairing.
2. **Remove Existing Entry:** If your device has previously connected to this keyboard, remove the keyboard's entry from your device's Bluetooth history and try pairing again.
3. **Multi-pairing Conflict:** If the keyboard is multi-pairing capable and used with multiple devices, it might be connected to another device. Use **Fn + 1/2/3** to switch the keyboard's connection channel to the desired device.
4. **Check Battery Level:** Ensure both the keyboard and your device have sufficient power.
5. **Device Performance:** If your device's memory is full or CPU usage is high, the system may freeze. Uninstall unnecessary applications to free up memory or restart your device.
6. **Interference:** As mentioned above, metal objects or other wireless devices can cause interference.
7. **Multiple Identical Products:** If you have multiple Ewin keyboards, ensure you are pairing with the correct one. Remove all existing entries with the same Bluetooth name from your device's list and then pair with the specific keyboard you intend to use.

If your device can find and pair with the keyboard, but the keyboard is unusable:

Remove the keyboard's entry from your device's Bluetooth settings, turn the keyboard off and on, and then attempt

to re-pair.

If the keyboard's Bluetooth connection frequently disconnects:

- 1. Check Battery Level:** Low battery on either the keyboard or your device can lead to unstable connections.
- 2. Interference:** Metal objects, magnetic fields, or other wireless devices can affect Bluetooth stability. Adjust the environment or move interfering devices.
- 3. Device Performance:** High memory or CPU usage on your device can cause system freezes and connection issues. Optimize your device's performance.
- 4. Power Saving Mode:** If your device is in power-saving mode, Bluetooth connections may become unstable. Disable power-saving mode.
- 5. Keyboard Auto-Sleep:** The keyboard automatically turns off Bluetooth after 10 minutes of inactivity to save power. Press any key to wake it up, and it will automatically reconnect to the last paired device.

SPECIFICATIONS

Brand	Ewin
Model Number	EW-B009
Connectivity Technology	Bluetooth
Keyboard Description	Connects to 3 devices
Recommended Uses	Work, Study
Special Features	Battery-powered (batteries not included)
Color	Black
Style	Pantograph type
Product Dimensions (L x W x H)	29.5 x 12 x 2 cm
Included Components	User Manual
Compatible Devices	PC, Tablet, Smartphone (Not compatible with Android 12)
Language	Japanese
Power Type	Battery operated
Keyboard Layout	QWERTY (JIS Japanese layout)
Hand Orientation	Ambidextrous
Waterproof	No
Number of Keys	79
Item Weight	Approx. 290g

WARRANTY

For detailed warranty information, please refer to the product packaging or the official Ewin website. Keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Ewin customer support through the retailer where you purchased the product or visit the official Ewin website for assistance.