



Manuals.plus /

› **TIMEX** /

› Timex Intelligent Quartz Compass Chronograph Watch TW2T76500 User Manual

TIMEX TW2T76500

Timex Intelligent Quartz Compass Chronograph Watch TW2T76500 User Manual

1. PRODUCT OVERVIEW

This manual provides instructions for the Timex Intelligent Quartz Compass Chronograph Analog Watch, model TW2T76500. This timepiece features an analog display with Intelligent Quartz technology, integrating a compass and chronograph function. It is designed for durability with a stainless steel case, mineral dial glass, and a fabric band.



Figure 1.1: Timex Intelligent Quartz Compass Chronograph Watch (Model TW2T76500) on a wrist.



Figure 1.2: Close-up of the watch dial, showing chronograph subdials and compass markings.

2. INITIAL SETUP

Upon receiving your watch, perform the following steps to ensure proper function:

1. **Unboxing:** Carefully remove the watch from its packaging. Inspect for any visible damage.



Figure 2.1: The Timex watch is supplied in a protective box.

2. **Crown Protector:** If present, remove any plastic crown protector.
3. **Time Setting:** Pull the crown (the knob on the side of the watch) out to its outermost position. Rotate the crown to set the correct time. Push the crown back in completely to start the watch movement.
4. **Date Setting (if applicable):** If your watch includes a date function, pull the crown out to the middle position and rotate it to set the correct date. Push the crown back in completely.

3. OPERATING INSTRUCTIONS

3.1. Setting Time and Date

1. **Time:** Pull the crown to the outermost position. Rotate the crown clockwise or counter-clockwise to adjust the hour and minute hands. Once set, push the crown back to the normal operating position.
2. **Date:** Pull the crown to the middle position. Rotate the crown to advance the date. Avoid setting the date between 9 PM and 3 AM to prevent damage to the movement. Once set, push the crown back to the normal operating position.

3.2. Using the Chronograph Function

The chronograph allows for precise timing of events.

1. **Start:** Press the upper pusher (button) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be displayed on the chronograph subdials.
3. **Reset:** After stopping, press the lower pusher to reset the chronograph hands to their zero positions.
4. **Split Time (if applicable):** Some chronographs allow for split time measurement. Consult the specific watch diagram for your model if this feature is present.

3.3. Using the Compass Function

The Intelligent Quartz compass feature provides directional guidance.

1. **Activate Compass:** Typically, the compass function is activated by pressing a specific pusher (often the lower pusher) or by pulling the crown to a specific position. Refer to your watch's specific markings.
2. **Calibrate (if necessary):** For accurate readings, the compass may require calibration. This usually involves rotating the watch in a figure-eight pattern or following on-screen prompts if a digital display is present.
3. **Read Direction:** Hold the watch horizontally. The compass hand will point North. The bezel may be rotated to align with North for easier navigation.
4. **Deactivate Compass:** Press the pusher again or push the crown back to its normal position to return to timekeeping mode.

4. MAINTENANCE

4.1. Cleaning

- Wipe the watch case and crystal with a soft, dry cloth.
- For fabric bands, a damp cloth with mild soap can be used, but ensure the band is thoroughly dry before wearing.
- Avoid using harsh chemicals or abrasive materials, as these can damage the watch's finish.

4.2. Water Resistance

This watch is water-resistant. Refer to the specifications for the exact water resistance level.

- Do not operate the crown or pushers when the watch is wet or submerged.
- Avoid exposing the watch to hot water, steam, or extreme temperature changes, as this can compromise the seals.
- If the watch is exposed to saltwater, rinse it with fresh water and dry thoroughly.



Figure 4.1: Illustration of water resistance, indicating care instructions.

4.3. Battery Replacement

When the watch stops or the second hand begins to jump in 2-second intervals, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and function. The watch uses a standard button cell battery.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Battery depleted; Crown not pushed in; Watch needs service.	Replace battery; Push crown in completely; Contact service center.
Time is incorrect	Time not set correctly; Watch stopped.	Reset time as per instructions; Check battery.
Chronograph hands do not reset to zero	Requires calibration; Mechanical issue.	Consult service center for calibration or repair.
Compass reading is inaccurate	Needs calibration; Magnetic interference.	Recalibrate compass; Move away from strong magnetic fields (e.g., electronics).
Moisture under crystal	Water resistance compromised; Exposure to extreme temperature changes.	Immediately take to a service center to prevent further damage.

6. SPECIFICATIONS

Feature	Detail
Model Number	TW2T76500
Brand	TIMEX
Movement Type	Quartz
Display Type	Analog
Dial Color	Beige
Case Material	Stainless Steel
Case Diameter	45 Millimetres
Case Thickness	18 Millimetres
Dial Glass Material	Mineral
Band Material	Fabric
Band Color	Brown
Closure Type	Buckle
Special Features	Chronograph, Compass
Water Resistance Level	Water Resistant
Item Weight	300 g (0.3 Kilograms)
Battery	1 Watch Battery (included)

7. WARRANTY AND SUPPORT

Your Timex watch comes with a 1-year manufacturer warranty from the date of purchase.

7.1. How to Avail Warranty

- To claim your warranty, you must present either the original bill copy/invoice or the warranty card at any authorized Timex service center.

7.2. Contact Information

- For any service-related inquiries or feedback, please contact Timex India toll-free number: 1800 419 2727.
- Operating hours: Monday to Sunday, 10:00 AM to 7:00 PM (except government holidays).
- You may also send an email to: custservice@timexindia.com or feedback@timexindia.com.