

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cornat](#) /

› [Cornat Recyklat T353306R Flexible Sink Siphon 1 1/2 Inch x 40 mm Instruction Manual](#)

Cornat T353306R

Cornat Recyklat T353306R Flexible Sink Siphon Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Cornat Recyklat T353306R Flexible Sink Siphon. This product is designed to connect standard sinks to the drainage system, effectively preventing unpleasant odors through its water barrier. Manufactured in Germany from recycled plastic, it offers a space-saving solution with a flexible design. Please read these instructions carefully before installation and retain them for future reference.



Figure 1: Assembled Cornat Recyklat Flexible Sink Siphon



Wer verwertet, der gewinnt

Innovative Produkte für eine saubere Umwelt!

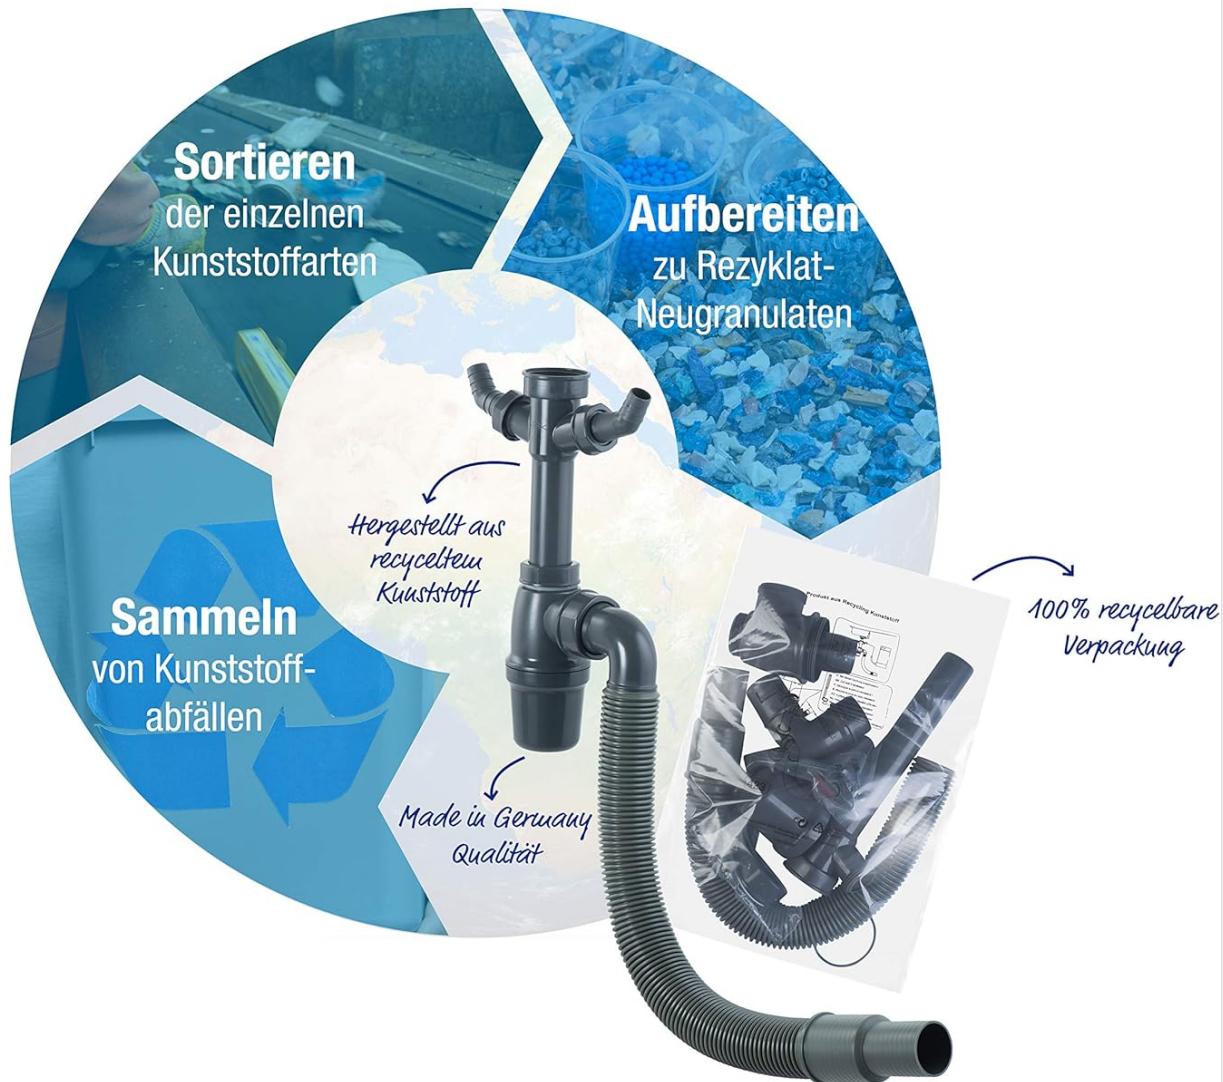


Figure 2: The recycling process for Cornat Recyklat products

SETUP AND INSTALLATION

Before you begin, ensure you have all components and necessary tools. The package includes:

- 1 Plunging Tube
- 2 Angled Hose Connectors (45°)
- 1 Odor Trap Siphon
- 1 Flexible Outlet Hose
- Various Seals and Connection Nuts



Figure 3: Exploded view of siphon components

Installation Steps:

- 1. Prepare the Sink Drain:** Ensure the sink drain is clean and ready for connection.
- 2. Assemble the Siphon Body:** Connect the main siphon body to the sink drain using the provided 1 1/2 inch connection nut and seal. Hand-tighten to ensure a secure, leak-free fit.
- 3. Attach Flexible Outlet Hose:** Connect the flexible outlet hose to the bottom of the siphon. This hose can be adjusted in length and shape to fit your drainage system.
- 4. Connect Appliance Hoses (Optional):** If connecting a washing machine or dishwasher, attach the angled hose connectors (19-23 mm) to the designated ports on the siphon. Secure with the provided nuts and seals.
- 5. Connect to Wall Drain:** Guide the flexible outlet hose to your wall drain. The flexible design allows for easy adjustment to various wall connection heights and positions. Ensure a proper seal at the wall connection.
- 6. Test for Leaks:** Once all connections are made, run water through the sink for several minutes and carefully check all connections for any signs of leakage. Tighten any leaking connections gently.



Produkt-Abmessungen

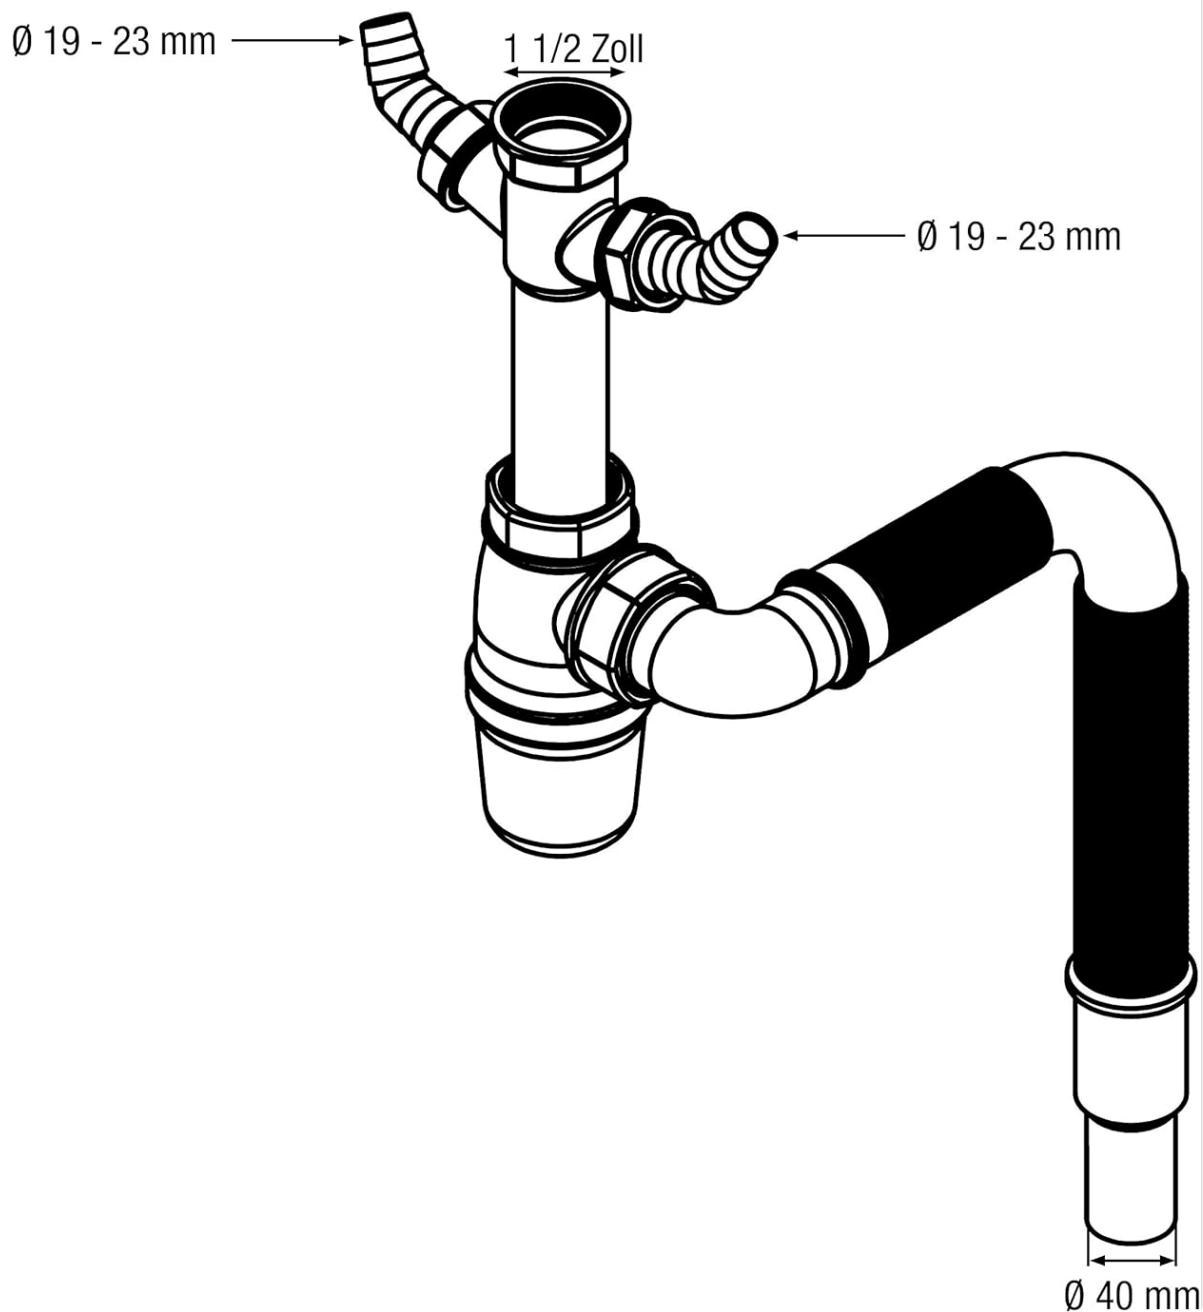


Figure 4: Product dimensions and connection points



Anschlussmöglichkeit

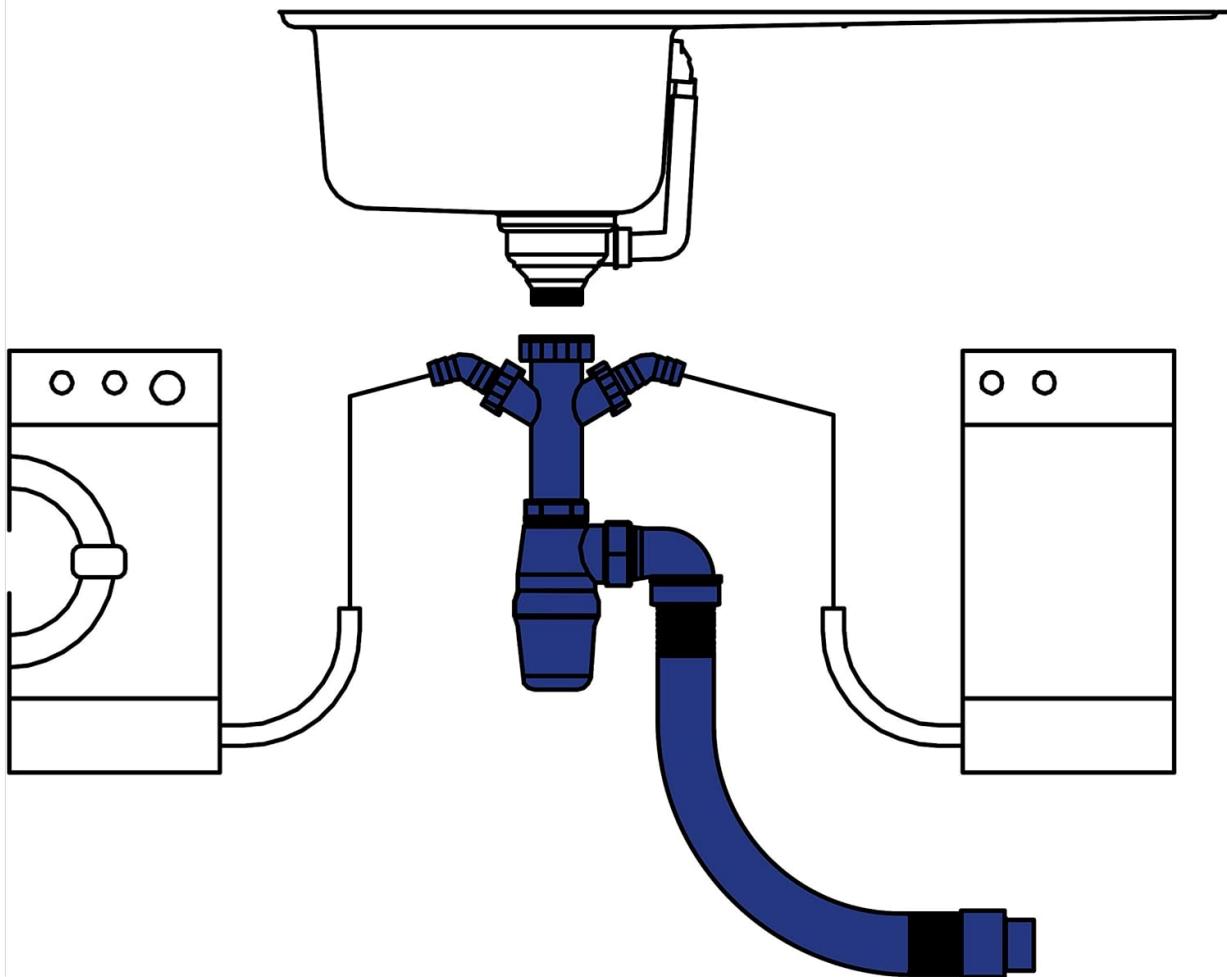


Figure 5: Connection possibilities for sink and appliances



Figure 6: Siphon installed under a sink

OPERATING INSTRUCTIONS

The Cornat Recyklat Siphon functions as an odor trap by maintaining a water seal within its cup. This water barrier prevents sewer gases from entering your living space. Regular use of the sink, which involves water flowing through the siphon, helps to naturally refresh this water seal, contributing to its self-cleaning properties.

MAINTENANCE

To ensure optimal performance and hygiene:

- **Regular Self-Cleaning:** The siphon is designed for self-cleaning through regular water replacement when the tap is opened.
- **Manual Cleaning:** For thorough cleaning or to remove blockages, the siphon can be easily unscrewed. Place a bucket underneath before unscrewing to catch any water. Clean the internal components and reassemble, ensuring all seals are correctly seated.
- **Leak Checks:** Periodically inspect all connections for any signs of leaks. Tighten nuts gently if necessary.

TROUBLESHOOTING

Issue: Unpleasant Odors from the Sink

- **Cause:** The water seal in the siphon may have evaporated or been disturbed.
- **Solution:** Run water into the sink for a minute to replenish the water seal. If the problem persists, check for proper installation and ensure no leaks are allowing the water seal to drain.

Issue: Leaks at Connections

- **Cause:** Loose connections or improperly seated seals.
- **Solution:** Gently tighten all connection nuts. If leaks persist, disassemble the affected connection, inspect the seals for damage or incorrect placement, and reassemble carefully.

Issue: Slow Drainage or Blockage

- **Cause:** Accumulation of debris (food particles, hair, grease) within the siphon or drain pipes.
- **Solution:** Manually clean the siphon by unscrewing its components as described in the Maintenance section. If the blockage is further down the drain, professional assistance may be required.

SPECIFICATIONS

The following are the technical specifications for the Cornat Recyklat T353306R Flexible Sink Siphon:

Feature	Detail
Brand	Cornat
Model Number	T353306R
Connection Size	1 1/2 inches
Outlet Diameter	Ø 40/50 mm
Appliance Connection	19-23 mm
Material	Recycled Plastic
Color	Grey
Product Dimensions (L x W x H)	29.5 x 5 x 73 cm
Item Weight	300 g
Country of Origin	Germany

WARRANTY INFORMATION

Warranty information for the Cornat Recyklat T353306R Flexible Sink Siphon is not provided within this instruction manual. Please refer to the product packaging, the official Cornat website, or your point of purchase for detailed warranty terms and conditions.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond the scope of this manual, or inquiries regarding spare parts, please contact Cornat customer service. You can typically find contact information on the product packaging or by visiting the official Cornat website.