

Manuals.plus /
› Mobile Spec /
› MobileSpec MBS11305 Active Bluetooth Earbuds User Manual

Mobile Spec MBS11305

MobileSpec MBS11305 Active Bluetooth Earbuds User Manual

Model: MBS11305 | Brand: Mobile Spec

INTRODUCTION

This user manual provides comprehensive instructions for the MobileSpec MBS11305 Active Bluetooth Earbuds. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before using the earbuds.

PACKAGE CONTENTS

Upon unboxing, please verify that all items listed below are present and in good condition.

- MobileSpec MBS11305 Active Bluetooth Earbuds
- User Manual
- Charging Cable
- Multiple sizes of ear tips



Image: Retail packaging for the MobileSpec MBS11305 Active Bluetooth Earbuds, showing the product inside and key features.

PRODUCT OVERVIEW

Familiarize yourself with the various components of your MobileSpec MBS11305 Active Bluetooth Earbuds.



Image: Front view of the MobileSpec MBS11305 Active Bluetooth Earbuds, featuring black ear tips and the "MS" logo on the earpieces.



Image: Front view of the MobileSpec MBS11305 Active Bluetooth Earbuds, featuring red ear tips and the "MS" logo on the earpieces.



Image: Side view of the MobileSpec MBS11305 Active Bluetooth Earbuds, highlighting the ergonomic ear hook design and the "MS" branding.

- **Ear Hooks:** Designed for a secure and comfortable fit during active use.
- **Ear Tips:** Interchangeable silicone tips for optimal sound isolation and comfort.

- **Inline Microphone:** For hands-free calling.
- **Control Buttons:** Typically include Power/Pairing, Volume Up/Next Track, Volume Down/Previous Track.
- **Charging Port:** For recharging the internal battery.

SETUP

1. Charging the Earbuds

Before first use, fully charge your earbuds. A full charge provides approximately 5 hours of battery life.

1. Connect the charging cable to the charging port on the earbuds.
2. Connect the other end of the charging cable to a USB power source (e.g., computer USB port, wall adapter).
3. The indicator light will typically show red during charging and turn off or blue when fully charged.
4. Charging time may vary, but usually takes 1-2 hours for a full charge.

2. Pairing with a Bluetooth Device

Follow these steps to connect your earbuds to your smartphone, tablet, or other Bluetooth-enabled device.

1. Ensure the earbuds are fully charged and turned off.
2. Press and hold the Power button on the earbuds for approximately 5-7 seconds until the indicator light flashes red and blue alternately. This indicates pairing mode.
3. On your Bluetooth device, go to the Bluetooth settings and ensure Bluetooth is enabled.
4. Scan for available devices. You should see "MBS11305" or "MobileSpec Earbuds" appear in the list.
5. Select "MBS11305" to connect. Once connected, the indicator light on the earbuds will typically flash blue slowly or turn off.
6. If prompted for a passcode, enter "0000" (four zeros).
7. The earbuds are now ready for use.

Note: The earbuds will automatically attempt to reconnect to the last paired device when powered on.

OPERATION

Power On/Off

- **Power On:** Press and hold the Power button for 3 seconds until the blue indicator light flashes.
- **Power Off:** Press and hold the Power button for 3 seconds until the red indicator light flashes and then turns off.

Music Playback Controls

- **Play/Pause:** Press the Multi-function button (often the Power button) once.
- **Next Track:** Press and hold the Volume Up (+) button.
- **Previous Track:** Press and hold the Volume Down (-) button.
- **Volume Up:** Short press the Volume Up (+) button.
- **Volume Down:** Short press the Volume Down (-) button.

Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.

- **Redial Last Number:** Double-press the Multi-function button.

Battery Status

The earbuds provide approximately 5 hours of continuous playback on a full charge. A low battery warning may be indicated by a flashing red light or an audible prompt.

MAINTENANCE

Proper care and maintenance will extend the life of your earbuds.

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the earbuds. Do not use abrasive cleaners or solvents. For ear tips, remove them and clean with mild soap and water, then dry thoroughly before reattaching.
- **Storage:** When not in use, store the earbuds in a cool, dry place, away from direct sunlight and extreme temperatures. Avoid storing them with sharp objects that could damage the cables or earpieces.
- **Water Resistance:** These earbuds are designed for active lifestyles but are not fully waterproof. Avoid submerging them in water.

TROUBLESHOOTING

If you encounter issues with your earbuds, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Earbuds do not power on.	Low battery.	Charge the earbuds fully.
Cannot pair with device.	Earbuds not in pairing mode; Bluetooth off on device; device too far.	Ensure earbuds are in pairing mode (flashing red/blue). Turn Bluetooth on your device. Move device closer to earbuds (within 10 meters). Try forgetting the device on your phone and re-pairing.
No sound or low volume.	Volume too low; earbuds not connected; incorrect audio output.	Increase volume on both earbuds and connected device. Ensure earbuds are properly connected. Check audio output settings on your device.
Sound distortion.	Interference; device too far; low battery.	Move away from sources of interference (Wi-Fi routers, other Bluetooth devices). Move closer to your device. Charge the earbuds.

SPECIFICATIONS

Detailed technical specifications for the MobileSpec MBS11305 Active Bluetooth Earbuds.

- **Model:** MBS11305
- **Connectivity Technology:** Wireless
- **Wireless Communication Technology:** Bluetooth
- **Battery Life:** Approximately 5 Hours
- **Control Type:** Media Control
- **Microphone:** Inline Microphone Included

- **Material:** Plastic
- **Item Weight:** 2.4 ounces (approx. 0.15 Pounds)
- **Product Dimensions:** 6 x 5 x 1.3 inches
- **Form Factor:** In Ear
- **Noise Control:** Active Noise Cancellation
- **Color:** Black
- **Manufacturer:** MobileSpec
- **Country of Origin:** China

WARRANTY AND SUPPORT INFORMATION

MobileSpec products are designed for reliability and performance. For warranty details or technical support, please refer to the warranty card included with your purchase or visit the official MobileSpec website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact MobileSpec customer service through their official channels.

© 2024 Mobile Spec. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B081LDSJVQ>

More documents and user manuals: <https://manuals.plus/>