

## Antec KP8104

# Antec Sensio Pie Maker Model KP8104 User Manual

Model: KP8104

## 1. INTRODUCTION

---

Thank you for purchasing the Antec Sensio Pie Maker Model KP8104. This appliance is designed to simplify the process of making delicious pies. Please read this manual thoroughly before operating the pie maker to ensure safe and efficient use. Keep this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### 3. SETUP

---

Before first use, ensure all packaging materials are removed. Wipe the cooking plates with a damp cloth and dry thoroughly. The appliance is ready for use.



Figure 1: Antec Sensio Pie Maker Model KP8104. This image displays the compact red pie maker with its lid closed, ready for use.

### 4. OPERATING INSTRUCTIONS

---

1. **Preparation:** Prepare your pie crust and filling according to your recipe. Ensure the pie maker is clean and dry.
2. **Preheating:** Close the lid and plug the pie maker into a standard electrical outlet. The indicator light will illuminate, signaling that the appliance is preheating.
3. **Ready to Bake:** Once the pie maker reaches the optimal baking temperature, the indicator light will turn off (or change color, depending on the model). This typically takes 3-5 minutes.
4. **Add Ingredients:** Carefully open the lid. Place one pie crust into each cooking cavity. Add your desired filling, ensuring not to overfill. Place the top crusts over the filling.
5. **Baking:** Close the lid firmly. The indicator light will illuminate again as the appliance maintains its temperature. Bake for approximately 8-12 minutes, or until the crusts are golden brown and the filling is heated through. Baking time may vary based on recipe and desired crispness.
6. **Removal:** Using a non-metallic utensil (e.g., plastic or wooden spatula), carefully remove the cooked pies from the cavities.
7. **Cooling:** Allow pies to cool slightly before serving.
8. **Finish:** Unplug the pie maker from the outlet when finished baking.

### 5. CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your pie maker.

- **Cool Down:** Always allow the appliance to cool completely before cleaning.
- **Unplug:** Ensure the pie maker is unplugged from the electrical outlet.
- **Cleaning Plates:** Wipe the non-stick cooking plates with a damp cloth or sponge. For stubborn residue, use a small amount of cooking oil to soften it, then wipe clean. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
- **Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not immerse the pie maker in water or any other liquid.
- **Storage:** Store the pie maker in a clean, dry place.

## 6. TROUBLESHOOTING

---

| Problem                           | Possible Cause                                    | Solution   |
|-----------------------------------|---|--|
| Appliance does not turn on.       | Not plugged in; power outlet malfunction.         | Ensure the plug is securely inserted into a working outlet. Check the circuit breaker.   |
| Pies are not cooking evenly.      | Uneven filling; appliance not fully preheated.    | Ensure filling is evenly distributed. Allow the pie maker to fully preheat before adding ingredients.                                      |
| Pies stick to the cooking plates. | Insufficient non-stick coating; plates not clean. | Ensure cooking plates are clean. A light spray of cooking oil can be used if needed, though typically not required for non-stick surfaces. |

## 7. SPECIFICATIONS

---

- **Brand:** Antec
- **Model:** KP8104
- **Color:** Red
- **Shape:** Round
- **Capacity:** 1 Kilogram (approximate)
- **Product Care:** Hand Wash (for removable parts, if applicable; main unit wipe clean)
- **Item Weight:** 1 Pound
- **UPC:** 704455690631

## 8. WARRANTY AND SUPPORT

---

Antec provides a limited warranty for this product. For detailed warranty information, product support, or to inquire about replacement parts, please refer to the warranty card included with your purchase or visit the official Antec website. Please have your model number (KP8104) and proof of purchase available when contacting support.