

[Manuals.plus](#) /

> [Yoidesu](#) /

> Yoidesu External CD Drive Box Case User Manual

Yoidesu Yoidesudnxc4hrqye-11

Yoidesu External CD Drive Box Case User Manual

Model: Yoidesudnxc4hrqye-11 | Brand: Yoidesu

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Yoidesu External CD Drive Box Case. This versatile enclosure allows you to utilize a standard 9.5 mm SATA CD drive or a 9.5 mm CD-ROM HD stand as an external device, enhancing the functionality of your laptop or desktop computer.

Key features include:

- Portable and compact design for easy carrying.
- Plug-and-play functionality, requiring no additional drivers.
- Standard USB 3.0 interface, backward compatible with USB 2.0 and USB 1.1, offering data transfer rates up to 5Gbps.
- Supports both optical drives and hard drives within the interchanger box.

SETUP AND INSTALLATION

The Yoidesu External CD Drive Box Case is designed for simple plug-and-play operation. Follow these steps to set up your device:

1. **Prepare the Internal Drive:** Ensure your 9.5 mm SATA CD drive or 9.5 mm CD-ROM HD stand is ready for installation into the enclosure. Gently slide the drive into the case, ensuring it connects securely to the internal SATA connector.
2. **Close the Enclosure:** Securely close the drive box case.
3. **Connect to Computer:** Connect the USB 3.0 cable from the external drive box to an available USB 3.0 port on your laptop or desktop computer. The device is backward compatible with USB 2.0 and USB 1.1 ports, but USB 3.0 is recommended for optimal performance.
4. **Automatic Recognition:** Your operating system (Windows, macOS, Linux) should automatically detect and install the necessary drivers. No manual driver installation is typically required.



Image: The Yoidesu External CD Drive Box Case with its integrated USB 3.0 cable, ready for connection.



Standard USB 3.0

Backwards compatible with USB 2.0, USB 1.1, up to 5Gbps data transfer rate.

Image: The external drive box connected to a laptop via USB, demonstrating its compact and portable nature.

OPERATING INSTRUCTIONS

Once connected, the external drive box functions like any internal optical or hard drive.

- **Accessing the Drive:** The drive will appear as a removable storage device in your computer's file explorer (e.g., "This PC" on Windows, "Finder" on macOS).
- **Inserting Media:** For optical drives, press the eject button on the front of the enclosure to open the disc tray. Place your CD or DVD onto the tray and gently push the tray back in until it clicks.
- **Data Transfer:** Drag and drop files to and from the drive, or use software applications to read/write data, install programs, or play media. The USB 3.0 interface ensures fast data transfer speeds up to 5Gbps.
- **Hot Swap Support:** The device supports hot swapping, meaning you can connect or disconnect it while your computer is running without needing to restart.

External ODD / HDD interchanger box

Can be inserted not only into
the hard drive but also into the optical drive.



Image: The external drive box, highlighting its capability to house either an optical drive or a hard drive.

**With USB3.0 port and powerful error correction
Faster data transfer.
Plug and play, support hot swap.**



Image: The device emphasizing its USB 3.0 port for faster data transfer and powerful error correction capabilities.

MAINTENANCE

To ensure the longevity and optimal performance of your Yoidesu External CD Drive Box Case, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to wipe the exterior of the case. Avoid using liquid cleaners or abrasive materials, which can damage the finish.
- **Storage:** When not in use, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the device with care to prevent drops or impacts, which could damage the internal components or the installed drive.
- **Ventilation:** Ensure the device has adequate ventilation during operation to prevent overheating, especially if a hard drive is installed.

TROUBLESHOOTING

If you encounter issues with your Yoidesu External CD Drive Box Case, refer to the following common troubleshooting steps:

- **Device Not Recognized:**
 - Ensure the USB cable is securely connected to both the drive box and your computer.
 - Try connecting to a different USB port on your computer.
 - Test the device on another computer to rule out computer-specific issues.

- Verify that the internal optical drive or hard drive is correctly seated and connected within the enclosure.

• **Slow Data Transfer:**

- Ensure you are connected to a USB 3.0 port on your computer for maximum speed. USB 2.0 or 1.1 ports will result in slower transfer rates.
- Check the condition of the USB cable; a damaged cable can affect performance.

• **Disc Read/Write Errors (for optical drives):**

- Ensure the disc is clean and free of scratches or smudges.
- Try a different disc to determine if the issue is with the media.
- Verify that the optical drive installed in the enclosure is functioning correctly.

• **Power Issues:**

- The device is typically powered via the USB connection. Ensure your USB port provides sufficient power. Some older or low-power USB ports may not be adequate.

SPECIFICATIONS

Feature	Detail
Brand	Yoidesu
Model Number	Yoidesudnxc4hrqye-11
Interface	USB 3.0 (backward compatible with USB 2.0, USB 1.1)
Data Transfer Rate	Up to 5Gbps (USB 3.0)
Compatible Drive Type	Standard 9.5 mm SATA CD drives, 9.5 mm CD-ROM HD stands
Material	ABS
Color	Black (Optional: White)
Item Weight	6.3 ounces
Hardware Platform	Laptop
Operating System Compatibility	Windows 10, macOS, Linux
Special Feature	Portable
Optical Storage Write Speed	24x



Image: The bottom of the external drive box, showing product information and certifications.

WARRANTY AND SUPPORT

For product support, technical assistance, or warranty inquiries, please contact Yoidesu customer service through the retailer where the product was purchased or visit the official Yoidesu brand store online. Please retain your proof of purchase for warranty claims.

For more information, you may visit the [Yoidesu Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B081Q95XYZ>

More documents and user manuals: <https://manuals.plus/>