

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEXON](#) /

› [LEXON FLIP+ TRAVEL Mini LCD Alarm Clock User Manual](#)

LEXON LR151K9

LEXON FLIP+ TRAVEL Mini LCD Alarm Clock User Manual

Model: LR151K9

INTRODUCTION

The LEXON FLIP+ TRAVEL Mini LCD Alarm Clock (Model LR151K9) is a compact and intuitive alarm clock designed for ease of use, especially during travel. Its unique flip function allows you to activate or deactivate the alarm simply by turning the clock over. This manual provides detailed instructions to help you get the most out of your device.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- 1 x LEXON FLIP+ TRAVEL Mini LCD Alarm Clock (Model LR151K9)
- 2 x AAA Batteries

SETUP

1. Battery Installation

The LEXON FLIP+ TRAVEL alarm clock operates on two AAA batteries. These are included in your package.

1. Locate the battery compartment on the bottom of the alarm clock.
2. Open the battery compartment cover.
3. Insert two AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.



Image: Bottom view of the alarm clock, highlighting the battery compartment and time/alarm setting buttons.

2. Setting the Time

Use the buttons located on the bottom of the clock to set the current time.

1. Press the **SET** button once to enter time setting mode. The hour digits will flash.
2. Use the **HR (+)** or **(-)** buttons to adjust the hour.
3. Press the **SET** button again. The minute digits will flash.
4. Use the **MIN (+)** or **(-)** buttons to adjust the minutes.
5. Press the **SET** button a third time to confirm and exit time setting mode.

3. Setting the Alarm

To set your desired wake-up time:

1. Press and hold the **SET** button for approximately 3 seconds to enter alarm setting mode. The alarm hour digits will flash.
2. Use the **HR (+)** or **(-)** buttons to adjust the alarm hour.
3. Press the **SET** button again. The alarm minute digits will flash.
4. Use the **MIN (+)** or **(-)** buttons to adjust the alarm minutes.
5. Press the **SET** button a third time to confirm and exit alarm setting mode.

OPERATING INSTRUCTIONS

1. Activating and Deactivating the Alarm (Flip Function)

The unique design of the FLIP+ TRAVEL alarm clock allows you to easily turn the alarm on or off by simply flipping the device.

- To **activate** the alarm, place the clock with the side marked "**ON**" facing upwards. The alarm icon will appear on the display, indicating it is active.
- To **deactivate** the alarm, flip the clock so the side marked "**OFF**" is facing upwards. The alarm icon will disappear from the display.

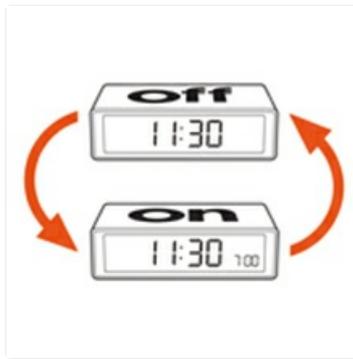


Image: Diagram showing the clock being flipped to switch between ON and OFF states for the alarm.



Image: Alarm clock with the "ON" side facing up, indicating the alarm is active.



Image: Alarm clock with the "OFF" side facing up, indicating the alarm is inactive.

2. Snooze Function

When the alarm sounds, you can temporarily silence it using the snooze function.

- To activate snooze, gently press the **SNOOZE / LIGHT** button located on the top of the clock. The alarm will pause for a few minutes (typically 5-10 minutes, refer to specifications for exact duration) and then sound again.
- To turn off the alarm completely after snoozing, flip the clock to the **"OFF"** side.

3. Backlight

The clock features a backlight for easy viewing in low-light conditions.

- To activate the backlight, gently press the **SNOOZE / LIGHT** button. The display will illuminate for a few seconds.

MAINTENANCE

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the display becomes dim or the alarm function is inconsistent. Always use new AAA alkaline batteries.
- **Storage:** If storing the clock for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Solution
Display is blank or dim.	Check battery installation. Replace with new AAA batteries if necessary.

Problem	Solution
Alarm does not sound.	Ensure the clock is flipped to the "ON" side. Verify the alarm time is set correctly. Check battery level.
Time or alarm cannot be set.	Ensure you are pressing the SET button correctly to enter and exit setting modes. Check battery level.
Snooze/Light button is unresponsive.	Check battery level. Ensure the clock is not in a setting mode.

SPECIFICATIONS

Brand	LEXON
Model Number	LR151K9
Product Dimensions	11.2 x 7 x 4 cm
Material	Resin
Color	Khaki
Special Features	Alarm, Snooze
Power Source	Battery Operated
Battery Type	AAA Alkaline
Item Weight	114 grams
Display Type	Digital
Style	Classic
Room Type	Bedroom
Shape	Rectangular
Frame Material	Plastic

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or visit the official LEXON website. Contact details for customer service can typically be found on the manufacturer's website.