

[manuals.plus](#) /› [Bitty Boomers](#) /› [Bitty Boomers Marvel Spider-Man Mini Bluetooth Speaker Instruction Manual](#)**Bitty Boomers BITTYSPIDER**

Bitty Boomers Marvel Spider-Man Mini Bluetooth Speaker Instruction Manual

MODEL: BITTYSPIDER

Introduction

The Bitty Boomers Marvel Spider-Man Mini Bluetooth Speaker combines popular culture with portable audio technology. This ultra-portable speaker is designed for ease of use and delivers clear sound in a compact form factor.

Key features include:

- Ultra-Portable 2" Tall Speaker
- Bluetooth 5.0 Technology for Wireless Connectivity
- 30-Foot Wireless Range
- Over 4 Hours of Music Playtime on a Single Charge
- Rechargeable via Micro USB Cable (included)
- Ability to Connect 2 Bitty Boomers for a True Wireless Stereo Experience
- Integrated Selfie Remote Function
- Strap Included for Easy Attachment to Backpacks or Bags



The Bitty Boomers Spider-Man Mini Bluetooth Speaker fits comfortably in the palm of your hand.

Setup

1. Charging the Speaker

Before initial use, fully charge your Bitty Boomers speaker. Connect the included Micro USB cable to the charging port on the speaker and the other end to a USB power source (e.g., computer, wall adapter). The LED indicator will show charging status.

2. Powering On/Off

To power on the speaker, press and hold the power button located on the bottom of the unit until you hear an audible cue and the LED indicator lights up. To power off, press and hold the power button again until the LED turns off.



The power button and Micro USB charging port are located on the base of the speaker.

3. Bluetooth Pairing

1. Ensure your Bitty Boomers speaker is powered on and in pairing mode (LED will typically flash).
2. On your mobile device (smartphone, tablet, etc.), go to the Bluetooth settings.
3. Scan for available devices. You should see "BITTY BOOMER" appear in the list.
4. Select "BITTY BOOMER" to connect. Once connected, you will hear a confirmation tone, and the LED indicator will change (e.g., solid blue).

Your browser does not support the video tag.

Watch this instructional video for a visual guide on how to use your Bitty Boomer speaker.

Operating Instructions

1. Single Speaker Playback

Once paired with your device, simply start playing audio from your device. The sound will be streamed wirelessly to your Bitty Boomers speaker.

2. True Wireless Stereo (TWS) Pairing

To achieve a true wireless stereo experience, you can connect two Bitty Boomers speakers together:

1. Ensure both Bitty Boomers speakers are powered on and not connected to any other Bluetooth device.
2. Double-click the power button on one of the speakers. It will search for the second speaker.
3. Once connected, you will hear a confirmation sound, and the two speakers will function as a stereo pair.
4. Now, connect your mobile device to one of the paired Bitty Boomers via Bluetooth as described in the "Bluetooth Pairing" section.

3. Selfie Remote Function

Your Bitty Boomers speaker can also function as a remote shutter for your smartphone camera:

1. Ensure your Bitty Boomers speaker is paired with your smartphone.
2. Open your smartphone's camera application.
3. Press the power button on your Bitty Boomers speaker once to capture a photo.



The included strap allows for easy portability and attachment to bags or wrists.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Avoid using harsh chemicals or abrasive materials.
- **Water Resistance:** The speaker is water-resistant, not waterproof. Avoid submerging it in water or exposing it to heavy rain.
- **Battery Care:** For optimal battery life, fully charge the speaker before long periods of non-use. Avoid extreme temperatures.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

- **Speaker will not power on:** Ensure the speaker is fully charged. Connect it to a power source using the Micro USB cable.
- **Unable to pair with device:**

- Make sure Bluetooth is enabled on your device.
- Ensure the speaker is in pairing mode (flashing LED).
- Move the speaker closer to your device (within 30 feet).
- Turn off and restart both the speaker and your device.

- **No sound or low volume:**

- Check the volume levels on both the speaker and your connected device.
- Ensure the speaker is properly paired and connected.

- **Short battery life:** Ensure the speaker is fully charged before use. Battery performance may vary with volume levels and usage.

Specifications

Feature	Detail
Model Name	Bitty Boomers
Item Model Number	BITTYSPIDER
Dimensions	2"D x 3"W x 5"H
Item Weight	3 Ounces
Connectivity Technology	Bluetooth 5.0, USB
Wireless Range	30 Feet
Battery Life	Over 4 Hours (on a single charge)
Power Source	Battery Powered (1 Lithium Polymer battery required)
Speaker Type	Tweeter
Speaker Maximum Output Power	5 Watts
Water Resistance Level	Water Resistant

What's in the Box

- Bitty Boomers Marvel Spider-Man Mini Bluetooth Speaker
- Micro USB Cable
- Lanyard



The product packaging displays the speaker, charging cable, and lanyard.

Warranty and Support

This product comes with a limited warranty provided by the manufacturer, Fabrique Innovations. For detailed warranty information, technical support, or service inquiries, please refer to the documentation included with your product or visit the official Bitty Boomers website.