

## **Bitty Boomers BITTYANNA**

# **Bitty Boomers Disney: Frozen - Anna - Mini Bluetooth Speaker User Manual**

Model: BITTYANNA | Brand: Bitty Boomers

## **INTRODUCTION**

The Bitty Boomers Disney: Frozen - Anna Mini Bluetooth Speaker combines iconic character design with powerful, portable sound. This compact speaker allows you to wirelessly connect to any Bluetooth-enabled device, offering over 4 hours of music playback on a single charge. It also features the ability to sync two Bitty Boomers together for a true wireless stereo experience and can even function as a selfie remote for your phone. A backpack clip/strap is included for easy portability.

## **What's in the Box:**

- Bitty Boomers Disney: Frozen - Anna Mini Bluetooth Speaker
- Micro USB Cable (for charging)
- Lanyard / Backpack Clip



Front view of the Bitty Boomers Anna speaker. This compact device features Anna's character design, making it a fun and portable audio accessory.



Bluetooth®

WIRELESS  
BLUETOOTH

PAIR 2  
CONNECT 1 FOR  
WIRELESS LISTENING  
SOUND

SELFIE  
REMOTE

Disney  
**FROZEN II**  
Bitty Boomers  
Wireless Bluetooth Speaker

Disney  
**FROZEN II**  
Bitty Boomers  
Wireless Bluetooth Speaker



The Bitty Boomers Anna speaker as it appears in its retail packaging.

## SETUP

### Charging Your Bitty Boomer:

Before first use, fully charge your Bitty Boomer. Connect the included Micro USB cable to the charging port on the speaker and the other end to a USB power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status and turn off when fully charged.

### Bluetooth Pairing:

- Power On:** Press and hold the power button on your Bitty Boomer until you hear a power-on sound. The LED indicator will begin to flash, indicating it's in pairing mode.
- Enable Bluetooth:** On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings.
- Select Device:** Look for "BITTY BOOMER" in the list of available devices and select it.
- Confirm Connection:** Once successfully paired, you will hear a confirmation sound from the speaker, and the LED indicator will stop flashing and remain solid.



The compact size of the Bitty Boomers speaker makes it easy to hold and carry.

### Instructional Video:

Your browser does not support the video tag.

This video provides a visual guide on how to connect your Bitty Boomer to a Bluetooth-enabled device, sync two speakers for stereo sound, and use the selfie remote function.

## OPERATING INSTRUCTIONS

### Basic Functions:

- **Power On/Off:** Press and hold the power button.
- **Play/Pause:** Short press the power button.
- **Answer/End Call:** Short press the power button during an incoming call.
- **Reject Call:** Press and hold the power button during an incoming call.

### **True Wireless Stereo (TWS) Pairing (Syncing 2 Bitty Boomers):**

To achieve a true wireless stereo sound experience, you can pair two Bitty Boomers together. Refer to the instructional video in the Setup section for a visual demonstration.

1. Ensure both Bitty Boomers are powered on and not connected to any other Bluetooth device.
2. Double-click the power button on one of the Bitty Boomers. You will hear a distinct sound indicating that the two speakers are attempting to sync.
3. Once successfully synced, you will hear a confirmation sound. The LED indicators on both speakers will change to a solid state.
4. Now, connect your device to one of the synced Bitty Boomers via Bluetooth as described in the "Bluetooth Pairing" section. Both speakers will play audio simultaneously.

### **Selfie Remote Function:**

Your Bitty Boomer can also act as a remote shutter for your smartphone camera. Refer to the instructional video in the Setup section for a visual demonstration.

1. Ensure your Bitty Boomer is powered on and successfully paired with your smartphone via Bluetooth.
2. Open your smartphone's camera application.
3. Position your phone for the desired shot.
4. Press the power button on your Bitty Boomer to remotely capture a photo.



© DISNEY

A collection of Bitty Boomers speakers, showcasing their compact size and diverse character designs.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use harsh chemicals or abrasive materials.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Water Resistance:** This product is not waterproof. Avoid exposure to water or excessive moisture.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is drained.	Charge the speaker using the provided Micro USB cable.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode or already connected to another device.	Ensure the speaker is powered on and the LED is flashing. Disconnect from any other device. Ensure Bluetooth is enabled on your device. Move speaker closer to your device.
No sound or low volume.	Volume on speaker or connected device is too low.	Increase volume on both the Bitty Boomer and your connected device.
Cannot sync two Bitty Boomers for TWS.	One or both speakers are already connected to a device.	Ensure both speakers are disconnected from any Bluetooth device before attempting TWS pairing.

## SPECIFICATIONS

**Model Name:** Bitty Boomers

**Product Dimensions:** 2"D x 3"W x 5"H

**Item Weight:** 3 Ounces

**Material:** Plastic

**Connectivity Technology:** Bluetooth, USB

**Wireless Communication Technology:** Bluetooth

**Bluetooth Version:** 5.0

**Wireless Range:** 30 ft (approx. 9 meters)

**Battery Life:** Over 4 Hours (on a single charge)

**Power Source:** Battery Powered

**Speaker Maximum Output Power:** 3 Watts

**Audio Output Mode:** Mono

**Special Feature:** Portable, Selfie Remote Function, True Wireless Stereo (TWS) compatible

**Included Components:** Speaker, Micro USB Cable, Lanyard

**Water Resistance Level:** Not Waterproof (Water Resistant - implies some splash resistance, but not immersion)

## WARRANTY AND SUPPORT

Bitty Boomers products come with a Full Warranty. For specific warranty details, claims, or technical support, please refer to the official Bitty Boomers website or contact their customer service directly. Keep your proof of purchase for warranty validation.

For further assistance, please visit the [Bitty Boomers Store on Amazon](#) or the manufacturer's official channels.

