

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [HCDZ](#) /

> [HCDZ Replacement Remote Control User Manual for Kenwood DVR-6100, DVR-6100K, DVT-6100, DVT-6100K DVD AV Receivers](#)

HCDZ DVR-6100, DVR-6100K, DVT-6100, DVT-6100K

HCDZ Replacement Remote Control User Manual

FOR KENWOOD DVR-6100, DVR-6100K, DVT-6100, DVT-6100K DVD AV RECEIVERS

Introduction

This manual provides instructions for the HCDZ Replacement Remote Control, designed for use with various Kenwood DVD AV Receiver models including DVR-6100, DVR-6100K, DVT-6100, and DVT-6100K. This remote control is an infrared (IR) replacement and requires no programming. Simply insert batteries to begin operation.

Setup: Battery Installation

The HCDZ Replacement Remote Control requires two (2) AA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to remove it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery cover removed, illustrating the battery compartment.



Image: Back of the remote control with the battery cover installed.

Once batteries are installed, the remote control is ready for immediate use with your compatible Kenwood DVD AV Receiver. No additional programming is required.

Operating Instructions

This remote control functions identically to your original Kenwood remote. Point the remote directly at your Kenwood DVD AV Receiver and press the desired function button.



Image: Front view of the HCDZ Replacement Remote Control.

Key Functions:

- **POWER:** Turns the receiver on or off.

- **SOURCE / INPUT MODE:** Selects the input source (e.g., DVD/CD, TV, VCR, SAT, CABLE, AUX).
- **VOLUME +/-:** Adjusts the master volume level.
- **MUTE:** Silences the audio output.
- **CH +/-:** Changes channels (for TV/Tuner modes) or navigates menus.
- **Number Buttons (0-9, +10, +100):** Direct input for channels or menu selections.
- **DISPLAY:** Toggles display information on the receiver or connected display.
- **MENU / TOP MENU/P.B.C.:** Accesses the main menu or disc playback control menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Navigates through menus and confirms selections.
- **Playback Controls (PLAY, PAUSE, STOP, REC, FAST FORWARD, REWIND, SKIP):** Controls media playback.

Refer to your Kenwood DVD AV Receiver's original manual for specific functions and advanced operations.

Maintenance

Battery Replacement:

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

Cleaning:

To clean the remote control, wipe it with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

- **Remote Control Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AA batteries.
 - Ensure there are no obstructions between the remote control and the Kenwood DVD AV Receiver's infrared sensor.
 - Make sure you are within the effective operating range and pointing the remote directly at the receiver.
- **Specific Buttons Not Working:**
 - This remote is a direct replacement and should function for all original remote features. If a specific button does not work, ensure it is a function supported by your Kenwood receiver model.
 - Clean the remote control, especially around the unresponsive button, to remove any dirt or debris that might be interfering with its operation.

Specifications

Brand	HCDZ
Compatible Devices	Kenwood DVR-6100, DVR-6100K, DVT-6100, DVT-6100K DVD AV Receivers
Connectivity Technology	Infrared (IR)
Batteries Required	2 x AA batteries (not included)
Special Feature	No programming needed, works out of the package
Max Number of Supported Devices	1

Warranty and Support

Specific warranty information for this HCDZ replacement remote control is not provided in the product details. Please refer to the retailer or the HCDZ manufacturer's official website for any applicable warranty terms and conditions.

For technical support or inquiries regarding this product, please contact the manufacturer, HCDZ, through their official support channels or the retailer from whom the product was purchased.