

[Manuals.plus](#) /

› [Skullcandy](#) /

› Skullcandy Push True Wireless Earbuds User Manual

Skullcandy RM

Skullcandy Push True Wireless Earbuds

USER MANUAL

Introduction

This manual provides comprehensive instructions for the Skullcandy Push True Wireless In-Ear Earbuds. Please read this guide carefully to ensure proper use, optimal performance, and longevity of your device. These earbuds offer a seamless audio experience with Bluetooth wireless technology, designed for comfort and convenience.

What's in the Box

Verify that all items are present in your package:

- Skullcandy Push True Wireless Earbuds
- Charging Case
- USB Charging Cable
- Multiple Sizes of Ear Gels (Secure FitFin)



***INCLUDED CONTENTS (PSYCHOTROPICAL TEAL COLORWAY SHOWN)**

Image: Included contents of the Skullcandy Push True Wireless Earbuds package, showing the earbuds, charging case, USB charging cable, and various sizes of ear gels.

Setup

1. Charging Your Earbuds

Before first use, fully charge your Skullcandy Push earbuds and their charging case. Place the earbuds into the charging case, ensuring they are properly seated. Connect the USB charging cable to the case and a power source. The indicator lights on the case will show the charging status.



Image: Skullcandy Push earbuds securely placed within their charging case, with the case lid open, showing the charging contacts and indicator lights.

2. Bluetooth Pairing

1. Ensure the earbuds are charged and in the charging case.
2. Remove both earbuds from the charging case. They will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings and turn Bluetooth on.
4. Select "Skullcandy Push" from the list of available devices.
5. Once connected, you will hear an audio prompt confirming successful pairing.

3. Achieving a Secure Fit

Proper fit is crucial for sound quality and comfort. Experiment with the included Secure FitFin ear gels to find the size that best seals your ear canal and provides stability.



Image: A close-up view of a person's ear with a Skullcandy Push earbud inserted, illustrating how the earbud sits securely in the ear for optimal fit.



Image: A collage of four different individuals wearing Skullcandy Push earbuds, demonstrating the versatile fit across various ear shapes and sizes.

Operating Your Earbuds

Controls

The Skullcandy Push earbuds feature intuitive controls for managing your audio and calls:

- **Volume Control:** Double tap the right earbud to increase volume. Double tap the left earbud to decrease volume.
- **Track Control:** Triple press the right earbud to skip to the next track. Triple press the left earbud to go to the previous track.
- **Call Management:** Tap either earbud once to answer or end a call. Press and hold the left earbud for two seconds to reject a call or put one on hold.
- **Activate Assistant:** Triple press either earbud to activate your device's voice assistant (e.g., Siri, Google Assistant).

Push



TURN IT UP

Stay in control of your audio with a double tap. The right button turns up the volume. The left button turns it down.



TAKE A CALL

Tap either button to answer and end a call. Press the left earbud for two seconds to reject a call or put one on hold.



ACTIVATE ASSISTANT

Triple press either button to have your assistant help with sending a message, setting a reminder, and much more.



Image: A visual guide detailing the button press combinations on the Skullcandy Push earbud for functions such as volume adjustment, call handling, and activating the voice assistant.

Battery Life

The Skullcandy Push earbuds provide up to 6 hours of playback on a single charge, with an additional 6 hours available from the charging case, totaling 12 hours of battery life.

Water Resistance

These earbuds are water resistant, offering protection against sweat and light splashes. They are not designed for submersion in water.

Maintenance

Cleaning

Regularly clean your earbuds and charging case to maintain optimal performance. Use a soft, dry, lint-free cloth. For

ear gels, remove them and gently wipe with a damp cloth, then ensure they are completely dry before reattaching.

Storage

When not in use, store your earbuds in their charging case to protect them from dust and damage, and to keep them charged.

Troubleshooting

- **Earbuds not pairing:** Ensure both earbuds are removed from the case and are charged. Turn off and on your device's Bluetooth, then try pairing again.
- **Only one earbud playing audio:** Place both earbuds back in the case, close the lid, wait a few seconds, then remove them. This often re-syncs them.
- **Charging issues:** Ensure the charging contacts on both the earbuds and inside the case are clean and free of debris. Verify the USB cable and power source are functioning correctly.
- **Low volume or poor sound quality:** Check the earbud fit and try different sized ear gels. Ensure your device's volume is turned up and the earbuds are clean.

Specifications

Feature	Detail
Model Name	Push
Connectivity Technology	Bluetooth 5.0
Battery Life	Up to 12 Hours (6 hours earbuds + 6 hours case)
Water Resistance Level	Water Resistant
Frequency Range	20 Hz - 20,000 Hz
Bluetooth Range	10 Meters
Control Type	Volume Control, Track Control, Call Control, Voice Assistant
Microphone	Included
Ear Placement	In Ear
Noise Control	Sound Isolation

Warranty and Support

Skullcandy products are designed for durability and performance. For detailed warranty information and customer support, please refer to the official Skullcandy website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question