

PHILIPS HC7650/14

Philips Hair Clipper Series 7000 HC7650/14 User Manual

Model: HC7650/14 | Brand: PHILIPS

INTRODUCTION

This manual provides essential information for the safe and effective use of your Philips Hair Clipper Series 7000, model HC7650/14. Please read these instructions carefully before using the appliance and retain them for future reference. This hair clipper is designed for cutting human hair and features DualCut Technology for efficient performance and a washable design for easy cleaning.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, injury, or fire, always follow basic safety precautions.

- Use this appliance only for its intended household use as described in this manual.
- Do not use the appliance if it is damaged in any way.
- Keep the appliance dry. Do not immerse it in water or use it near water while charging.
- Always check the blades before use. Do not use if blades are damaged or broken, as this may cause injury.
- Keep the appliance out of reach of children.
- Unplug the appliance before cleaning or maintenance.
- Only use the charger supplied with the appliance.
- Do not use abrasive cleaning agents or harsh chemicals on the appliance.

For more detailed safety instructions, please refer to the full safety information provided with your product packaging.

PACKAGE CONTENTS

Your Philips Hair Clipper Series 7000 HC7650/14 package includes the following items:

- Philips Hair Clipper Unit
- Three Adjustable Guide Combs (various lengths)
- Cleaning Brush
- Scissors
- Travel Pouch
- Power Adapter



Image: Philips Hair Clipper Series 7000 with all included accessories: the clipper unit, three guide combs, a cleaning brush, scissors, and a travel pouch.

PRODUCT OVERVIEW

The Philips Hair Clipper Series 7000 is engineered for precision and ease of use. Key features include:

- **DualCut Technology:** Self-sharpening stainless steel blades designed to cut hair twice as fast.
- **Trim-n-Flow Pro Technology:** An innovative comb design that prevents hair from getting stuck, ensuring an uninterrupted trimming experience.
- **28 Length Settings:** Easily select and lock in your desired length from 0.5mm to 28mm using the

integrated zoom wheel.

- **Cordless Operation:** Powered by a Li-ion battery, offering up to 90 minutes of cordless use after a 1-hour charge.
- **100% Washable:** The entire clipper can be rinsed under running water for quick and hygienic cleaning.
- **Ergonomic Design:** Provides a comfortable grip and easy maneuverability.





Image: Front view of the Philips Hair Clipper Series 7000, highlighting the power button, turbo mode button, and the digital length setting display.

SETUP

Charging the Clipper

1. Ensure the clipper is switched off.
2. Connect the power adapter to the charging port at the bottom of the clipper.
3. Plug the adapter into a wall outlet. The battery indicator light will illuminate to show charging is in progress.
4. A full charge takes approximately 1 hour and provides up to 90 minutes of cordless use.

Attaching and Adjusting Guide Combs

1. Select the desired guide comb. The combs are marked with their length ranges.
2. Align the comb with the clipper head and push it firmly until it clicks into place.
3. To adjust the cutting length, rotate the zoom wheel located on the body of the clipper. The selected length will be displayed on the clipper.
4. To remove a comb, gently pull it away from the clipper head.



Image: A hand adjusting the integrated zoom wheel on the Philips Hair Clipper, which allows for precise selection of hair cutting lengths.

OPERATING INSTRUCTIONS

Turning On/Off

Press the power button once to turn the clipper on. Press it again to turn it off.

Selecting Length Settings

With a guide comb attached, rotate the zoom wheel to select your desired hair length. The available settings range from 0.5mm (without a comb) up to 28mm.

Hair Cutting Techniques

1. Ensure hair is clean and dry before cutting.
2. Start with a longer length setting than desired to familiarize yourself with the clipper.
3. Hold the clipper with the teeth of the comb pointing upwards and flat against the scalp.
4. Move the clipper slowly against the direction of hair growth.
5. For an even cut, pass the clipper over the same area multiple times.
6. Use the clipper without a comb for precise edging and detailing (0.5mm).



Image: A person using the Philips Hair Clipper Series 7000 to trim their hair, showcasing its ease of use for self-grooming.



Image: The Philips Hair Clipper in action, demonstrating the Trim-n-Flow Pro technology which guides cut hair away from the blades for an uninterrupted trim.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your clipper.

Cleaning the Blades and Combs

1. After each use, switch off the clipper and remove the guide comb.
2. Use the supplied cleaning brush to remove any loose hairs from the cutting element and the comb.
3. The cutting element can be detached by pushing it upwards from the front of the clipper.

Washing the Clipper

The Philips Hair Clipper Series 7000 is 100% washable.

1. Ensure the clipper is switched off and disconnected from the power adapter.
2. Rinse the entire clipper, including the cutting element and guide combs, under lukewarm running water.
3. Do not use hot water or harsh detergents.
4. Allow all parts to air dry completely before reassembling or storing.

Storage

Store the clipper and its accessories in the provided travel pouch in a dry, safe place, away from extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Philips Hair Clipper, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper for at least 1 hour.
Clipper does not cut hair effectively.	Blades are clogged with hair or damaged.	Clean the blades thoroughly. Ensure hair is dry. If blades are damaged, contact support.
Clipper makes unusual noise.	Hair caught in the motor or blades.	Clean the clipper thoroughly. If noise persists, discontinue use and contact support.
Battery life is shorter than expected.	Battery not fully charged or aging.	Ensure a full 1-hour charge. Battery performance may decrease over time.

SPECIFICATIONS

Feature	Detail
Model Number	HC7650/14
Power Source	Battery Powered (Cordless, rechargeable)
Battery Type	Li-ion
Blade Material	Stainless Steel
Product Dimensions	2.72 x 5.51 x 8.82 inches
Item Weight	12.3 ounces
Color	Grey
Manufacturer	Philips

WARRANTY AND SUPPORT

Your Philips Hair Clipper Series 7000 HC7650/14 comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For product support, frequently asked questions, or to register your product, please visit the official Philips support website:

[Visit Philips Support](#)

You may also find additional information and support on the Philips brand store on Amazon: [Philips Store](#)