

[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips Shaver Series 1000 Instruction Manual

## PHILIPS S1232/41

# Philips Shaver Series 1000 Instruction Manual

MODEL: S1232/41

## Product Overview

The Philips Shaver Series 1000 (Model S1232/41) is designed to provide an easy and convenient shaving experience. It features self-sharpening PowerCut blades for an effortless shave and is fully washable for easy cleaning. The shaver is cordless, powered by a lithium-ion battery, offering up to 45 minutes of cordless shaving after an 8-hour charge.





Front view of the Philips Shaver Series 1000, showcasing its three rotary shaving heads and power button.

## Important Safety Information

---

- Always keep the shaver away from water to prevent electrical hazards.
- Be cautious while using the shaver to avoid cuts and skin irritation.
- Follow the cleaning instructions to prevent bacterial growth.
- Always unplug the charger before using the shaver.

## Setup and First Use

---

1. **Initial Charge:** Before first use, fully charge the shaver for 8 hours. This provides up to 45 minutes of cordless shaving time.
2. **Connecting the Charger:** Insert the small plug of the charging cord into the shaver's charging port, typically located at the bottom. Plug the other end into a standard electrical outlet.
3. **Power On/Off:** Press the power button located on the front of the shaver to turn it on or off.

## Operating Instructions

---

---

## Shaving with Rotary Blades

The Philips Shaver Series 1000 features three rotary shaving heads that flex in 4 directions to easily follow the contours of your face. For best results:

- Ensure your skin is clean and dry.
- Hold the shaver at a right angle to your skin.
- Move the shaver in small, circular motions over your face and neck.
- Apply gentle pressure; do not press too hard.

## Using the Pop-Up Trimmer

The shaver includes a convenient pop-up trimmer for precise grooming of sideburns, mustaches, and beard lines.

1. Locate the trimmer release button, usually on the back or side of the shaver head.
2. Slide or press the button to activate the pop-up trimmer.
3. Use the trimmer to define edges or trim longer hairs before shaving.
4. Once finished, push the trimmer back into its closed position.

## Cleaning and Maintenance

Regular cleaning ensures optimal performance and hygiene for your shaver. The Philips Shaver Series 1000 is fully washable.

1. **Daily Cleaning:** After each shave, turn off the shaver and open the shaving head unit. Rinse the shaving heads thoroughly under warm running water to remove hair clippings and debris.
2. **Deep Cleaning:** Periodically, you may wish to detach the shaving heads completely for a more thorough cleaning. Refer to the detailed instructions in the full user manual for specific steps on disassembling and reassembling the head unit.
3. **Drying:** After cleaning, shake off excess water and allow the shaver to air dry completely before closing the shaving head unit or storing it.
4. **Blade Replacement:** For continued optimal performance, it is recommended to replace the shaving heads approximately every 12 months. Replacement heads can be purchased from authorized Philips retailers.

## Troubleshooting

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for at least 8 hours.
Shaver does not provide a close shave.	Shaving heads are dirty or worn.	Clean the shaving heads thoroughly. If performance does not improve, consider replacing the shaving heads.
Shaver pulls hair or causes irritation.	Shaving heads are worn or technique is incorrect.	Replace shaving heads if they are old. Ensure you are using small, circular motions with gentle pressure.

## Product Specifications

---

**Model Number:** S1232/41

**Power Source:** Battery Powered (1 Lithium Ion battery included)

**Battery Life:** Up to 45 minutes cordless shaving after 8-hour charge

**Special Feature:** Cordless, Pop-Up Trimmer

**Recommended Uses:** Beard, Mustache, Sideburns, Head

**Product Dimensions:** 2.83 x 5.43 x 7.48 inches

**Item Weight:** 9.91 ounces

## Official Product Videos

---

No official product videos from the seller are available for embedding at this time.

## Warranty and Support

---

This Philips product comes with a manufacturer's warranty. For detailed warranty information, product registration, and customer support, please visit the official Philips website or contact their customer service. Keep your proof of purchase for warranty claims.

For further assistance or to purchase replacement parts, please visit the [PHILIPS Store on Amazon](#) or the official Philips support page.