

## Cozzia SV200

# Cozzia Svago SV200 Power Zero Gravity Recliner User Manual

## 1. SAFETY INFORMATION

Please read all instructions carefully before using the Cozzia Svago SV200 recliner. Retain this manual for future reference.

- **Weight Capacity:** Do not exceed the maximum weight capacity of **300 lbs (136 kg)**. Exceeding this limit may cause damage to the recliner or injury to the user.
- **Assembly:** Ensure the chair is assembled correctly and all components are securely fastened before use. Refer to the 'Setup and Assembly' section for detailed instructions.
- **Children and Pets:** Keep children and pets away from the recliner's moving parts, especially during operation.
- **Power Cord:** Do not place the power cord under the recliner or in a position where it could be pinched or damaged. Avoid placing heavy objects on the cord.
- **Liquid Exposure:** Keep liquids away from the recliner and its electrical components to prevent electric shock or damage.
- **Maintenance:** Perform regular maintenance as described in this manual. Do not attempt to repair the recliner yourself; contact qualified service personnel.
- **Intended Use:** This recliner is designed for indoor use only.

## 2. PRODUCT OVERVIEW

The Cozzia Svago SV200 is a power zero-gravity recliner designed for comfort and relaxation. It features synthetic leather upholstery, a solid birch wood base, power recline functionality, lumbar heat, and seat vibration massage. The recliner can transition from an upright seating position to a full zero-gravity recline.



Image of the Cozzia Svago SV200 Power Zero Gravity Recliner in its upright position, showcasing its chocolate synthetic leather upholstery and wooden base.

### 3. PACKAGE CONTENTS

Upon unpacking, verify that all the following components are present:

- Recliner Base
- Backrest Assembly
- Seat Cushion Assembly
- Armrests (Left and Right)
- Adjustable Head Pillow

- Wired Remote Control
- Power Adapter and Cord
- Assembly Hardware (screws, washers, Allen wrench)
- User Manual (this document)

If any parts are missing or damaged, do not proceed with assembly. Contact customer support immediately.

## 4. SETUP AND ASSEMBLY

Follow these steps to assemble your Cozzia Svago SV200 recliner. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all components from the packaging and place them on a soft, clean surface to prevent scratches.
2. **Attach Backrest:** Align the metal brackets on the backrest with the corresponding slots on the recliner base. Slide the backrest down firmly until it clicks into place. Ensure it is securely locked.
3. **Attach Armrests:** Connect the left and right armrests to the sides of the recliner base using the provided hardware. Tighten screws securely but do not overtighten.
4. **Connect Power:** Locate the power input port on the back or underside of the recliner. Connect the power adapter to the recliner and then plug the power cord into a standard electrical outlet.
5. **Position Head Pillow:** Attach the adjustable head pillow to the top of the backrest using its integrated straps or attachment mechanism. Adjust to your preferred height.
6. **Remote Control Placement:** The wired remote control can be stored in the side pocket or hung from the armrest using its attached loop.



Diagram illustrating the dimensions of the Cozzia Svago SV200 recliner: 47 inches height, 30.5 inches width, and 44.3 inches depth when closed.

## 5. OPERATING INSTRUCTIONS

The Cozzia Svago SV200 recliner is operated using the wired remote control. Familiarize yourself with the remote's functions before use.



Close-up view of the wired remote control for the Cozzia Svago SV200 recliner, showing buttons for power, zero gravity, heat, massage, and recline adjustments.



Image showing the remote control for the Cozzia Svago SV200 recliner conveniently attached to the side armrest.

## 5.1. Remote Control Functions

- **Power Button (Red):** Turns the recliner's power on or off.
- **Recline Up/Down Arrows:** Adjust the backrest and leg rest position. Press and hold to continuously adjust.
- **ZGR (Zero Gravity Recline) Button:** Activates the pre-programmed zero-gravity position. Press again to return to the upright position.
- **Heat Button (Wavy Lines):** Toggles the lumbar heat function on or off.
- **Vibration Massage Button (Wavy Dots):** Toggles the seat vibration massage function on or off.
- **M1 / M2 Buttons:** These are typically for saving and recalling custom recline positions. Refer to the full manual for programming instructions if available.

## 5.2. Zero Gravity Position

The zero-gravity position elevates your legs above your heart, which can help reduce pressure on the spine and improve circulation. To activate:

1. Ensure the recliner is powered on.
2. Press the **ZGR** button on the remote control. The recliner will automatically adjust to the zero-gravity position.
3. To exit the zero-gravity position, press the **ZGR** button again or use the recline up/down arrows to adjust to a different position.



Side view of the Cozzia Svago SV200 recliner fully extended into the zero-gravity position, demonstrating the elevated leg rest and reclined backrest.

## 6. MAINTENANCE AND CARE

Proper care will extend the life and appearance of your recliner.

- **Cleaning Upholstery:** For synthetic leather, wipe with a soft, damp cloth. For stubborn stains, use a mild soap solution and wipe dry immediately. Avoid harsh chemicals or abrasive cleaners.

- **Wood Base:** Wipe the wooden base with a dry or slightly damp cloth. Avoid excessive moisture.
- **Moving Parts:** Periodically check all moving parts and connections for tightness. Do not lubricate internal mechanisms unless specifically instructed by the manufacturer.
- **Power Cord:** Inspect the power cord regularly for any signs of damage. If damaged, discontinue use and contact customer support.
- **Storage:** If storing the recliner for an extended period, ensure it is clean, dry, and stored in a climate-controlled environment.

## 7. TROUBLESHOOTING

If you encounter issues with your recliner, refer to the following common problems and solutions:

| Problem                            | Possible Cause                                                  | Solution                                                                                                                                         |
|------------------------------------|-----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| Recliner does not power on.        | Power cord not connected; outlet not working; power button off. | Ensure power cord is securely plugged into recliner and outlet. Test outlet with another device. Press the red power button on the remote.       |
| Recliner does not recline/incline. | Power issue; remote control malfunction; obstruction.           | Check power connection. Ensure no objects are obstructing the recliner's movement. If power is confirmed, remote may be faulty; contact support. |
| Heat or massage not working.       | Function not activated; power issue.                            | Press the respective heat or massage button on the remote. Verify the recliner has power.                                                        |
| Unusual noises during operation.   | Loose components; foreign object.                               | Check for loose screws or objects caught in the mechanism. If noise persists, discontinue use and contact support.                               |

If the problem persists after attempting these solutions, please contact Cozzia customer support.

## 8. SPECIFICATIONS

| Feature              | Detail                                                                                            |
|----------------------|---------------------------------------------------------------------------------------------------|
| Model                | SV200                                                                                             |
| Brand                | Cozzia                                                                                            |
| Dimensions (Upright) | 44.3"D x 30.5"W x 47"H                                                                            |
| Weight Capacity      | 300 lbs (136 kg)                                                                                  |
| Item Weight          | 100 lbs (45.3 kg)                                                                                 |
| Upholstery Material  | Synthetic Polyurethane Leather                                                                    |
| Base Material        | Solid Birch Wood                                                                                  |
| Features             | Power Recline, Zero Gravity Position, Lumbar Heat, Seat Vibration Massage, Adjustable Head Pillow |

| Feature             | Detail               |
|---------------------|----------------------|
| Included Components | Wired Remote Control |
| UPC                 | 651814947359         |
| ASIN                | B081TBWNHR           |

## 9. WARRANTY AND SUPPORT

Specific warranty details for the Cozzia Svago SV200 recliner are not provided in this document. For warranty information, product support, or to purchase replacement parts, please contact Cozzia customer service directly. You can typically find contact information on the manufacturer's official website or through your original point of purchase.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

#### Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

#### Details

Submit question