

Gorenje GV61124

Gorenje GV61124 Integrated Dishwasher User Manual

Model: GV61124

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Gorenje GV61124 Integrated Dishwasher. This manual provides essential information for the correct installation, safe operation, and effective maintenance of your appliance. Please read these instructions thoroughly before using the dishwasher to ensure optimal performance and to prevent damage or injury.

The Gorenje GV61124 is a 60 cm integrated dishwasher designed to seamlessly blend into your kitchen cabinetry, offering efficient dishwashing with 5 programs and a capacity for 12 place settings.

2. SAFETY INSTRUCTIONS

Important: Always read and follow all safety instructions before operating the appliance. Keep this manual for future reference.

- Ensure the dishwasher is properly earthed and connected to a suitable power supply.
- Do not allow children to play with or operate the dishwasher.
- Sharp items (knives, forks) should be loaded with their handles up to prevent injury.
- Only use detergents and rinse aids specifically designed for automatic dishwashers.
- Do not open the door during operation, especially during the hot wash or drying cycle, as hot water or steam may escape.
- In case of malfunction, switch off the appliance and disconnect it from the power supply before attempting any troubleshooting.
- The appliance is equipped with a Partial AquaStop system to prevent water leaks.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Gorenje GV61124 dishwasher:

- **Upper Basket:** For delicate items, glasses, and smaller plates. Features 50 mm height adjustment.
- **Lower Basket:** For larger plates, pots, and pans.
- **Cutlery Basket:** For knives, forks, and spoons.
- **Spray Arms:** Located above and below the baskets, ensuring thorough water distribution.
- **Detergent Dispenser:** For powder, gel, or tablet detergent.
- **Rinse Aid Dispenser:** For rinse aid to improve drying and prevent spots.
- **Salt Container:** For dishwasher salt to soften water and prevent limescale.
- **Control Panel:** Includes program selector, start/pause button, and various indicators (water fill, wash, salt, rinse aid, error).
- **Hidden Heating Element:** Ensures efficient water heating.



Figure 1: Front view of the Gorenje GV61124 Integrated Dishwasher. This image shows the appliance's exterior, designed for integration into kitchen cabinetry.

4. INSTALLATION AND SETUP

Professional installation is recommended for integrated appliances. Ensure all connections are secure and leak-free.

4.1. Positioning the Appliance

- The dishwasher is designed for integration into a standard 60 cm wide cabinet opening.
- Ensure there is sufficient space for water inlet, drain hose, and electrical connections.
- Level the appliance using the adjustable feet to ensure stability and proper door alignment.

4.2. Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.

- Connect the drain hose to a suitable drain pipe or sink trap, ensuring it is securely fastened and allows for proper drainage.

4.3. Electrical Connection

- Connect the dishwasher to a grounded electrical outlet. Refer to the rating label for voltage and frequency requirements.
- Do not use extension cords or multiple adapters.

4.4. Initial Use

- **Filling the Salt Container:** Unscrew the cap of the salt container (usually located at the bottom of the tub) and fill it with dishwasher salt using the provided funnel. Add water until it overflows, then replace the cap. The salt indicator will turn off after a few cycles.
- **Filling the Rinse Aid Dispenser:** Open the rinse aid dispenser cover and fill with rinse aid until the indicator shows full. Close the cover securely. Adjust the rinse aid dosage if necessary (refer to the control panel section for details).

5. OPERATING INSTRUCTIONS

5.1. Loading the Dishwasher

- Scrape off large food particles from dishes before loading.
- Place dishes securely in the baskets, ensuring they do not block the spray arms.
- Load glasses and delicate items in the upper basket. The upper basket height can be adjusted by 50 mm to accommodate taller items.
- Place larger items, pots, and pans in the lower basket.
- Arrange cutlery in the cutlery basket with handles down for safety and better cleaning.

5.2. Adding Detergent and Rinse Aid

- Add the appropriate amount of dishwasher detergent to the dispenser. Follow the detergent manufacturer's instructions.
- Ensure the rinse aid dispenser is filled. The rinse aid indicator will illuminate when it needs refilling.

5.3. Selecting and Starting a Program

1. Close the dishwasher door.
2. Use the program selector on the control panel to choose one of the 5 available wash programs.
3. The programs offer wash temperatures of 45°C, 55°C, 65°C, and 70°C.
4. Press the Start/Pause button to begin the cycle.
5. The normal wash cycle duration is approximately 150 minutes.
6. Monitor the indicators for water fill, wash status (sound and light), salt, rinse aid, and any error messages.

5.4. Interrupting a Program

To interrupt a program, press the Start/Pause button. To resume, press it again. If you need to open the door, wait a few moments for the cycle to pause and for any hot steam to dissipate.

6. MAINTENANCE AND CLEANING

6.1. Cleaning the Filters

- Regularly check and clean the filter system located at the bottom of the tub.
- Twist and remove the coarse filter, then separate the fine filter.
- Rinse all filter components under running water to remove food particles.
- Reassemble the filters and place them back into the dishwasher, ensuring they are securely locked.

6.2. Cleaning the Spray Arms

- Periodically remove the spray arms and clean their nozzles to ensure unobstructed water flow.
- Use a thin wire or toothpick to clear any blockages.

6.3. Exterior and Interior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- Clean the interior of the dishwasher periodically with a dishwasher cleaner or a mixture of vinegar and baking soda to remove grease and odors.

6.4. Refilling Salt and Rinse Aid

- Refill dishwasher salt when the salt indicator light illuminates on the control panel.
- Refill rinse aid when the rinse aid indicator light illuminates.

7. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	No power; door not closed properly; program not selected.	Check power supply; ensure door is latched; select a program and press Start.
Dishes are not clean	Incorrect loading; spray arms blocked; insufficient detergent; clogged filters.	Reload dishes correctly; clean spray arms; add more detergent; clean filters.
Water not draining	Drain hose kinked or blocked; clogged filter.	Check and clear drain hose; clean filters.
Salt/Rinse Aid indicator remains on	Container empty; sensor malfunction.	Refill salt/rinse aid; if issue persists after a few cycles, contact service.
Error indicator illuminates	Specific fault detected.	Refer to the full manual for specific error codes or contact customer service.

If the problem persists after attempting these solutions, please contact Gorenje customer service or a qualified technician.

8. SPECIFICATIONS

Feature	Detail
Model Number	GV61124
Brand	Gorenje
Type	Integrated Dishwasher
Color	Grey (Tub)
Material	Stainless Steel
Number of Programs	5
Wash Temperatures	45, 55, 65, 70 °C
Place Settings	12
Normal Cycle Duration	150 minutes
Adjustable Upper Basket	50 mm height adjustment
Indicators	Water fill, Wash (sound & light), Salt, Rinse aid, Error
Special Features	Hidden heating element, Partial AquaStop
Washing Performance Class	A
Drying Performance Class	A
Energy Class	A
Water Consumption	12 liters per cycle
Dimensions (WxHxD)	59.8 x 81.8 x 54.5 cm

9. WARRANTY AND SUPPORT

For information regarding the warranty period and terms, please refer to the warranty card included with your appliance or visit the official Gorenje website for your region. Keep your purchase receipt as proof of purchase.

For technical assistance, spare parts, or to schedule a service appointment, please contact Gorenje customer support. Contact details can typically be found on the manufacturer's website or in the documentation provided with your dishwasher.