

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [OZARK](#) /
- › [OZARK Survival Kit SET5108 Instruction Manual](#)

OZARK SET5108

OZARK 16-Piece Survival Kit

INSTRUCTION MANUAL FOR MODEL SET5108

1. PRODUCT OVERVIEW

The OZARK 16-Piece Survival Kit, Model SET5108, is a compact and essential collection of tools designed for various outdoor activities and emergency situations. This kit is suitable for car camping, hiking, and general emergency preparedness, providing key items to assist in survival and convenience.



Image 1: The OZARK 16-Piece Survival Kit packaging, illustrating the complete set of items and important safety warnings.

2. KIT CONTENTS

Your OZARK Survival Kit includes the following 16 essential items:

- **Notebook:** A small notebook for jotting down notes, plans, or observations.
- **8-Piece Compressed Towels:** Compact towels that expand when wet, useful for hygiene or first aid.
- **Fire Starter:** A reliable tool for igniting fires in various conditions.
- **Commando Saw:** A flexible wire saw for cutting small branches or wood.
- **Keychain Light:** A compact LED light for illumination in low-light conditions.
- **8-in-1 Multitool:** A versatile tool combining multiple functions such as pliers, knife, and screwdrivers.
- **Cutlery Multitool:** A compact utensil set including a spoon, fork, and knife.
- **Paracord Bracelet with Whistle:** A bracelet made from durable paracord, which can be unraveled for various uses, and includes an integrated whistle for signaling.
- **Durable Watertight Case:** A protective case designed to keep the kit contents dry and secure.

3. SETUP AND PREPARATION

Before using your survival kit, familiarize yourself with each component and ensure all items are present and in good condition.

1. **Inspect Contents:** Open the watertight case and verify that all 16 items listed in Section 2 are included.
2. **Familiarize Yourself:** Take time to understand the basic function and operation of each tool.
3. **Battery Check (if applicable):** For the Keychain Light, ensure any required batteries are correctly installed and functional. Refer to the safety warnings regarding battery types.
4. **Repack Securely:** After inspection, repack all items neatly into the watertight case, ensuring the seal is properly closed to maintain water resistance.

4. OPERATING INSTRUCTIONS

4.1 Fire Starter

To use the fire starter, scrape the rod firmly with the striker to create sparks. Direct these sparks onto tinder (dry leaves, cotton, paper) to ignite a fire. Practice in a safe environment before relying on it in an emergency.

4.2 Commando Saw

Hold the rings of the commando saw firmly in each hand. Place the saw blade around the material to be cut (e.g., a small branch). Use a back-and-forth motion, applying steady pressure, to saw through the material. Be cautious of sharp edges.

4.3 Keychain Light

Activate the keychain light by pressing the designated button. Some models may require twisting the head. Ensure batteries are fresh for optimal performance.

4.4 8-in-1 Multitool and Cutlery Multitool

Carefully unfold the desired tool (pliers, knife, screwdriver, spoon, fork, etc.) from the multitool body. Ensure the tool is fully locked into place before use to prevent accidental closure. Always exercise caution when handling sharp edges or pointed tools.

4.5 Paracord Bracelet with Whistle

The paracord bracelet can be worn on the wrist. To use the whistle, simply blow into the opening to produce a loud signaling sound. In an emergency, the paracord can be unraveled to provide several feet of strong cordage for various survival needs.

4.6 Compressed Towels

To expand a compressed towel, simply add a small amount of water. The towel will quickly absorb the water and expand to its full size, ready for use.

4.7 Durable Watertight Case

Ensure the case is securely latched after each use to maintain its watertight seal. Avoid submerging the case for extended periods or at extreme depths, as its water resistance may have limits.

5. MAINTENANCE

Proper maintenance ensures the longevity and reliability of your survival kit components.

- **Cleaning:** After use, clean any tools that have come into contact with dirt or moisture. Dry them thoroughly before storing to prevent rust or corrosion.
- **Storage:** Store the kit in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the watertight case is properly sealed.
- **Battery Replacement:** Replace batteries in the keychain light as needed. Always follow the battery safety warnings provided in Section 7.
- **Inspection:** Periodically inspect all items for wear and tear. Replace any damaged components to ensure the kit remains fully functional.

6. TROUBLESHOOTING

If you encounter issues with your survival kit, consider the following:

- **Keychain Light Not Working:** Check if batteries are correctly inserted, are fresh, and are of the correct type. Ensure the contact points are clean.
- **Fire Starter Not Sparking:** Ensure you are scraping the rod firmly and at the correct angle with the striker. The rod may have a protective coating that needs to be scraped off first.
- **Multitool Stiff:** Apply a small amount of lubricant to the pivot points of the multitools if they become stiff or difficult to open.
- **Watertight Case Leaking:** Check the rubber seal around the case for any damage or debris. Ensure the latches are fully engaged.

7. SAFETY WARNINGS

Please read and adhere to the following safety warnings to prevent injury or damage:

- **Sharp Objects:** Many tools in this kit (knives, saws, multitools) have sharp edges or points. Handle with extreme care to avoid cuts or punctures. Keep out of reach of children.
- **Fire Starter:** Use the fire starter responsibly and only in designated areas or where safe to do so. Ensure proper fire extinguishing methods are available.
- **Battery Safety:** **WARNING: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cad, ni-mh, etc.) batteries.** Incorrect battery usage can lead to leakage, overheating, or explosion.
- **Watertight Case:** While designed to be watertight, it is not intended for prolonged submersion or use as a diving case. Always check the seal before exposing to water.

8. SPECIFICATIONS

Model Number	SET5108 (5108)
Brand	OZARK
Number of Pieces	16
Material	Plastic, Metal, Fabric

Item Weight	0.45 Kilograms
GTIN (UPC)	820909151173

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to inquire about replacement parts, please refer to the official OZARK website or contact their customer service directly. Keep your purchase receipt as proof of purchase.