

Beko WTL11019W

Beko WTL11019W Washing Machine User Manual

Model: WTL11019W

INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your new Beko WTL11019W Washing Machine. Please read this manual thoroughly before using the appliance to ensure proper function and to prevent potential damage or injury. Keep this manual in a safe place for future reference.

SAFETY INFORMATION

Always adhere to the following safety precautions to reduce the risk of fire, electric shock, injury to persons, or damage to the appliance.

- **Electrical Safety:** Ensure the washing machine is connected to a grounded outlet with the correct voltage. Do not use extension cords or adapters. Unplug the machine before cleaning or performing any maintenance.
- **Water Safety:** Ensure water inlet hoses are securely connected to prevent leaks. Do not operate the machine if there is a water leak.
- **Child Safety:** Keep children and pets away from the appliance during operation. Do not allow children to play on or in the washing machine.
- **Installation:** The appliance must be installed on a firm, level surface. Ensure proper ventilation around the machine.
- **Flammable Materials:** Do not wash items that have been cleaned, washed, soaked, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, dry-cleaning solvents, kerosene, etc.).
- **General Use:** Do not reach into the washing machine while the tub is moving. Do not force the lid open during operation.

PRODUCT OVERVIEW

The Beko WTL11019W is a top-load washing machine designed for efficient and convenient laundry care. It features an 8 kg capacity, suitable for medium to large households, and offers 8 distinct wash programs to cater to various fabric types and soil levels. Its white finish and stainless steel material ensure durability and a clean aesthetic.



Image: Front view of the Beko WTL11019W Top Load Washing Machine. The appliance is white with a black top panel that includes the control interface and the lid for loading laundry. The base is a darker grey.

Key Features:

- **Capacity:** 8 kg
- **Loading Type:** Top Load
- **Wash Programs:** 8
- **Color:** White
- **Material:** Stainless Steel (drum/internal components)

SETUP & INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended to have the appliance installed by a qualified technician.

1. **Unpacking:** Carefully remove all packaging materials. Check for any transport damage. Remove all transit bolts from the rear of the machine before use. Refer to the diagram in your physical manual for bolt locations.
2. **Location:** Place the washing machine on a firm, level floor. Avoid placing it on carpets or soft surfaces that could obstruct ventilation. Ensure there is sufficient space around the machine for air circulation and maintenance.

3. **Water Connection:** Connect the cold water inlet hose to a cold water tap with a 3/4-inch thread. Ensure connections are tight to prevent leaks. Place the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent dislodging during operation.
4. **Electrical Connection:** Plug the power cord into a dedicated, grounded 220-240V, 50Hz electrical outlet. Do not use extension cords or multi-plugs.
5. **Leveling:** Adjust the leveling feet at the bottom of the machine until the appliance is perfectly level. Use a spirit level to verify. A level machine reduces vibration and noise during operation.

OPERATING INSTRUCTIONS

Follow these steps for a typical wash cycle:

1. **Prepare Laundry:** Sort laundry by fabric type, color, and soil level. Empty pockets and close zippers.
2. **Load Laundry:** Open the top lid and load the sorted laundry into the drum. Do not overload the machine; leave enough space for clothes to tumble freely. For an 8 kg machine, this typically means not filling the drum more than 3/4 full.
3. **Add Detergent and Softener:** Pour the appropriate amount of detergent into the main wash compartment of the dispenser drawer. Add fabric softener to its designated compartment, if desired. Refer to detergent packaging for dosage recommendations.
4. **Select Program:** Close the lid. Turn the program selection knob or press the program buttons on the control panel to choose one of the 8 available wash programs (e.g., Cotton, Synthetics, Delicates, Quick Wash, etc.) that best suits your laundry.
5. **Adjust Options (if available):** Depending on the model, you may be able to adjust temperature, spin speed, or add extra rinse options.
6. **Start Cycle:** Press the "Start/Pause" button to begin the wash cycle. The machine will automatically fill with water and start the selected program.
7. **End of Cycle:** Once the program is complete, the machine will signal with an audible alert (if equipped) and the lid will unlock. Remove laundry promptly to prevent wrinkles.

MAINTENANCE & CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Detergent Dispenser:** Periodically remove and clean the detergent dispenser drawer under running water to prevent residue buildup.
- **Drum Cleaning:** Run a maintenance wash cycle (e.g., a hot wash with no laundry and a washing machine cleaner or a cup of white vinegar) once a month to remove detergent residue and odors from the drum.
- **Inlet Filters:** Check the water inlet filters at the end of the inlet hoses for blockages every few months. Clean them if necessary by unscrewing the hoses and rinsing the filters.

- **Drain Filter (if applicable):** Some models have a drain pump filter. Consult your physical manual for its location and cleaning instructions. Clean it regularly to prevent drainage issues.
- **After Each Wash:** Leave the lid slightly ajar after each wash to allow the drum to air dry and prevent mildew.

TROUBLESHOOTING

Before contacting service, try these common troubleshooting steps:

Problem	Possible Cause	Solution
Machine does not start	No power; Lid not closed; Program not selected; Start button not pressed.	Check power supply; Ensure lid is fully closed; Select a program; Press the Start/Pause button.
No water filling	Water tap closed; Water inlet hose kinked; Water inlet filter clogged.	Open water tap; Straighten hose; Clean inlet filter.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged (if applicable).	Straighten or clear drain hose; Clean drain pump filter.
Excessive vibration/noise	Machine not level; Transit bolts not removed; Uneven load.	Adjust leveling feet; Remove transit bolts; Redistribute laundry evenly in the drum.
Poor wash results	Overloading; Incorrect detergent dosage; Wrong program selected.	Reduce load size; Use correct detergent amount; Select appropriate wash program.

If the problem persists after trying these solutions, please contact Beko customer service or a qualified technician.

SPECIFICATIONS

Feature	Detail
Brand	Beko
Model Number	WTL11019W
Capacity	8 Kilograms
Loading Type	Top Load
Color	White
Material	Stainless Steel (internal components)
Number of Wash Programs	8
Dryer Function	No
Manufacturer	Beko

Feature	Detail
First Available Date	22 November 2019

WARRANTY & SUPPORT

For detailed warranty information, please refer to the warranty card included with your appliance or visit the official Beko website for your region. Keep your purchase receipt as proof of purchase for warranty claims.

For technical support, spare parts, or service requests, please contact Beko customer service. You can usually find contact details on the Beko website or in the documentation provided with your washing machine.

When contacting support, please have your model number (WTL11019W) and serial number ready. The serial number is typically located on a label inside the door frame or on the back of the appliance.