

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Walker Edison](#) /
- › [Walker Edison Saxon Mid Century Modern TV Stand Instruction Manual](#)

Walker Edison W70NORBH

Walker Edison Saxon Mid Century Modern TV Stand

Model: W70NORBH

PRODUCT OVERVIEW

The Walker Edison Saxon Mid Century Modern TV Stand is a stylish and functional entertainment center designed to enhance your living space. Crafted with high-grade MDF and featuring metal tapered legs and sleek metal handles, this 70-inch stand offers a contemporary mid-century aesthetic. It provides ample storage with two side cabinets and a central open shelving area, including a glass shelf. This unit is suitable for TVs up to 80 inches and can also serve as a storage cabinet or buffet.



The Walker Edison Saxon TV Stand, shown here in a living room setting, accommodates a large television and provides integrated storage.

IMPORTANT SAFETY INFORMATION


WARNING: To prevent tip-over and injury, always assemble and use this product as instructed. Keep children and pets away from the product during assembly and while in use. Do not place heavy objects on the top surface that could cause the product to tip over. Always follow the assembly instructions provided in the manual.

ASSEMBLY INSTRUCTIONS

This TV stand ships ready-to-assemble. For detailed, step-by-step instructions, please refer to the official Installation Manual PDF provided by Walker Edison. It is highly recommended to have assistance during assembly, especially for handling larger components and ensuring proper alignment.

- Unpack all components and verify against the parts list in the manual.
- Ensure you have all necessary tools as specified in the manual.
- Follow the numerical sequence of steps for proper construction.
- Securely fasten all screws and connectors, but avoid over-tightening.
- Attach the metal tapered legs firmly to the base.
- Install the adjustable shelves and glass shelf as per your preference.
- Mount the doors and adjust hinges for proper alignment.

Download the official Installation Manual (PDF): [Click Here](#)

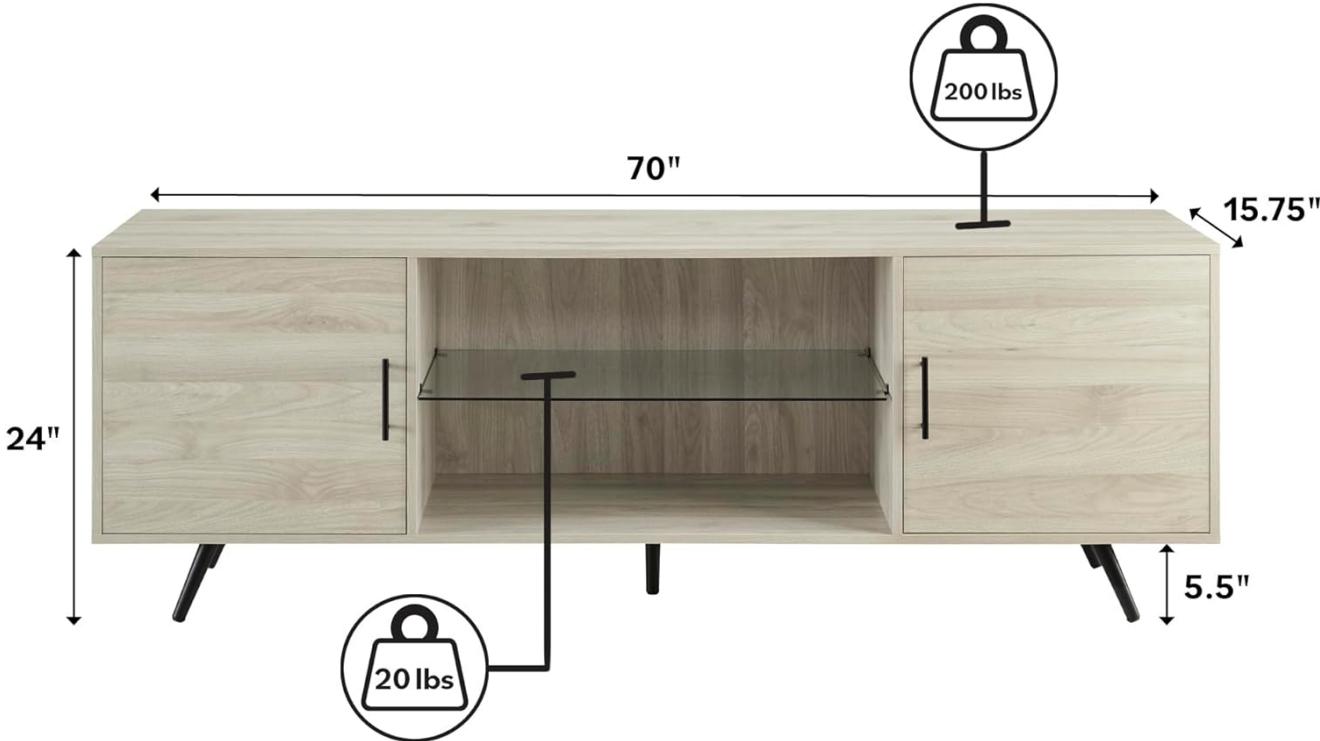

This diagram illustrates the overall dimensions of the TV stand (70" W x 15.75" D x 24" H) and its weight capacities: 200 lbs on the top surface and 20 lbs on the glass shelf.

OPERATING GUIDELINES

This TV stand is designed for optimal use with televisions up to 80 inches. The top surface can support up to 150 lbs, provided the weight is evenly distributed. The central open cubby and two side cabinets offer versatile storage solutions.

- **TV Placement:** Carefully place your television on the top surface, ensuring its base is centered and the weight is evenly distributed across the stand.
- **Storage:** Utilize the two side cabinets for concealed storage of media, accessories, or other items. The central open shelving, including the tempered glass shelf, is ideal for media devices, decorative items, or books.
- **Cable Management:** The stand features cord management ports at the back to help organize and conceal cables from your electronic devices, maintaining a tidy appearance.

Simple Cord Management:

Easily organize messy wires with cut-outs for overall cord management.



Detail of the simple cord management system, featuring cut-outs at the back for organizing wires.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your Walker Edison TV stand, follow these simple care instructions:

- **Cleaning:** Wipe the surfaces with a dry cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the wood grain finish.
- **Spills:** Immediately wipe up any spills to prevent moisture damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration over time.
- **Heat:** Do not place hot items directly on the surface without protective padding.



A close-up view of the birch wood grain finish, highlighting the texture and quality of the material.

TROUBLESHOOTING

- **Sagging in the Middle:** If you observe sagging when placing a heavy TV, especially one with a single central stand, ensure the TV's weight is distributed evenly. This TV stand is designed to support up to 150 lbs on the top surface when weight is spread across the entire length. If your TV's stand concentrates weight in the center, consider using a wall mount or a TV base that distributes weight more broadly.
- **Doors Not Aligning:** If the cabinet doors do not align properly after assembly, check the hinge adjustments. Most hinges allow for minor adjustments to ensure the doors hang straight and close flush. Refer to the assembly manual for specific hinge adjustment instructions.
- **Missing or Damaged Parts:** If any parts are missing or damaged upon arrival, do not proceed with assembly. Contact customer support immediately for replacement parts.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Walker Edison
Model Name	Englewood (W70NORBH)
Color	Birch
Product Dimensions (D x W x H)	15.75"D x 70"W x 24.02"H
Item Weight	81 Pounds
Top Surface Weight Limit	150 Pounds
Glass Shelf Weight Limit	20 Pounds
Material	Engineered Wood (MDF Wood)
Number of Shelves	3 (2 wood, 1 glass)
Assembly Required	Yes
Care Instructions	Wipe with Dry Cloth

WARRANTY INFORMATION

The Walker Edison Saxon Mid Century Modern TV Stand comes with a **30-day limited manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for any warranty claims. For specific details regarding coverage and limitations, refer to the documentation included with your product or contact Walker Edison customer support.

CUSTOMER SUPPORT

For any questions, assistance with assembly, or to request replacement parts, please contact Walker Edison customer support:

Phone: 1-801-433-3008

Email: service@walkeredison.com

Replacement parts are available. Please contact Walker Edison within 30 days of delivery for any part-related inquiries.



1-801-433-3008



service@walkeredison.com