

[Manuals.plus](#) /

› [Kisonli](#) /

› Kisonli USB Speaker User Manual

Kisonli i-510

Kisonli USB Speaker User Manual

Model: i-510

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Kisonli USB Speaker, model i-510. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Figure 1: Kisonli USB Speaker retail packaging, showing the speaker and "USB 2.0 High quality single speaker" text.

PRODUCT FEATURES

- **Model Number:** i-510
- **Connectivity:** Wired (USB and Audio Jack)
- **Speaker Type:** Computer Speaker
- **Compatibility:** PC & Mac
- **Nominal Output:** Less than 5 Watt
- **Dimensions:** 6.8 x 8.6 x 31.8 cm
- **Weight:** 1 kg

SETUP

Follow these steps to set up your Kisonli USB Speaker:

1. **Unpack the Speaker:** Carefully remove the speaker from its packaging. Ensure all components are present.
2. **Identify Connections:** Locate the integrated USB-A cable and the 3.5mm audio jack extending from the speaker.



Figure 2: USB and 3.5mm audio jack connectors for the Kisonli USB Speaker.

3. Connect to Computer:

- Insert the USB-A connector into an available USB port on your computer (PC or Mac). This connection provides power to the speaker.
- Insert the 3.5mm audio jack into the audio output port (headphone jack) of your computer. This connection transmits the audio signal to the speaker.



Figure 3: Back view of the Kisonli USB Speaker, illustrating the integrated cable connection point.

4. **Placement:** Place the speaker on a stable, flat surface near your computer. For optimal sound, ensure the speaker grille faces towards the listening area.



Figure 4: Front view of the Kisonli USB Speaker, showing the speaker grille and indicator light.

OPERATING INSTRUCTIONS

Once connected, the Kisonli USB Speaker is ready for use. It is a plug-and-play device and typically does not require additional driver installation.

- **Power On/Off:** The speaker powers on automatically when connected to a powered USB port. There is no separate power button. A blue indicator light on the front grille will illuminate when the speaker is active.
- **Volume Control:** Adjust the volume directly from your computer's operating system or the application playing audio. The speaker itself does not have physical volume controls.
- **Audio Playback:** Play any audio from your computer, such as music, videos, or system sounds. The sound will be output through the Kisonli USB Speaker.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your speaker:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the speaker. Do not use liquid cleaners or abrasive materials, as they may damage the surface.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the speaker or subjecting it to strong impacts. Do not attempt to disassemble the speaker, as this will void the warranty and may cause damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from speaker	<ul style="list-style-type: none">◦ USB cable not properly connected.◦ Audio jack not properly connected.◦ Computer volume is muted or too low.◦ Incorrect audio output device selected on computer.	<ul style="list-style-type: none">◦ Ensure USB cable is securely plugged into a working USB port.◦ Ensure 3.5mm audio jack is fully inserted into the computer's audio output.◦ Increase volume on your computer. Check if audio is muted.◦ In your computer's sound settings, select "Kisonli USB Speaker" or "Speakers" as the default playback device.
Distorted or low-quality sound	<ul style="list-style-type: none">◦ Volume too high on computer.◦ Audio source quality is poor.◦ Loose cable connection.	<ul style="list-style-type: none">◦ Reduce volume on your computer.◦ Try playing a different audio file or source to check if the issue persists.◦ Ensure both USB and audio jack connections are firm.
Speaker not recognized by computer	<ul style="list-style-type: none">◦ Faulty USB port.◦ Driver issue (rare for plug-and-play).	<ul style="list-style-type: none">◦ Try connecting the USB cable to a different USB port on your computer.◦ Restart your computer.◦ Check your computer's Device Manager (Windows) or System Information (Mac) for any unrecognized devices.

SPECIFICATIONS

Model Number	i-510
Connectivity Technology	Wired (USB for power, 3.5mm Audio Jack for signal)
Speaker Type	Computer Speakers
Compatible with	PC & Mac
Nominal Output	Less than 5 Watt (Speaker maximum output power: 5 Watts)
Product Dimensions (L x W x H)	31.8 x 8.6 x 6.8 cm
Product Weight	1 kg
Frequency Response	20 KHz
Audio Output Mode	Stereo
Material	PC (Plastic)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Kisonli customer service. Specific warranty terms may vary by region and retailer.

For general inquiries or support, you may visit the Kisonli official website or contact their support channels.

© 2024 Kisonli. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question