

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Other](#) /
- › [WS-918 Radio Multimedia Stereo Speaker User Manual](#)

## Other WS-918

# WS-918 Radio Multimedia Stereo Speaker User Manual

## INTRODUCTION

The WS-918 Radio Multimedia Stereo Speaker is a compact and portable audio device designed for versatile music playback and FM radio reception. Crafted from high-quality aluminum, it offers an elegant and stylish appearance. This device supports various audio sources including Micro SD/TF cards, USB flash drives, and external devices via its Line-IN function. It features a built-in rechargeable battery for extended use.



**Image Description:** A blue WS-918 Radio Multimedia Stereo Speaker is displayed on a white surface next to its product packaging. The speaker features a digital display, a speaker grille, and various ports. A blue USB charging cable with a 3.5mm audio jack is connected to the speaker. The packaging shows the model number 'WS-918' and icons indicating support for USB, SD, and TF cards.

## SETUP

### 1. Charging the Battery

1. Connect the provided USB charging cable to the speaker's charging port.
2. Plug the other end of the USB cable into a standard USB power adapter (DC5V) or a computer's USB port.
3. The charging indicator light will illuminate during charging and turn off when the battery is fully charged.

### 2. Inserting Storage Devices

- **Micro SD/TF Card:** Gently insert a Micro SD or TF card into the designated card slot until it clicks into place. Ensure the card is inserted in the correct orientation.
- **USB Flash Drive:** Insert a USB flash drive into the USB port.

### 3. Connecting via Line-IN

To use the speaker with an external audio source (e.g., MP3 player, PC, laptop, smartphone):

1. Connect one end of a 3.5mm audio cable (often included or purchased separately) to the speaker's Line-IN port.
2. Connect the other end of the 3.5mm audio cable to the headphone jack or audio output port of your external device.

## OPERATION

### 1. Power On/Off

- To power on the speaker, slide the power switch to the 'ON' position.
- To power off, slide the power switch to the 'OFF' position.

### 2. Mode Selection

Press the '**M**' (**Mode**) button to cycle through available modes:

- **FM Radio Mode:** For listening to FM radio stations.
- **TF/USB Playback Mode:** Automatically activates when a Micro SD/TF card or USB flash drive with audio files is inserted.
- **Line-IN Mode:** For playing audio from an external device connected via the 3.5mm audio cable.

### 3. Volume Control

Use the '+' and '-' buttons to adjust the volume. Press and hold for continuous adjustment, or press briefly for incremental changes.

### 4. FM Radio Operation

1. Switch to FM Radio Mode using the 'M' button.
2. Press the '**Play/Pause**' button once to initiate an automatic scan for available FM stations. The speaker will save detected stations.
3. Use the '**Next**' and '**Previous**' buttons to navigate between saved stations.

### 5. Music Playback (TF/USB Mode)

1. Ensure a Micro SD/TF card or USB flash drive with MP3/WMA/WAV files is inserted. The speaker should automatically switch to playback mode.
2. Press the '**Play/Pause**' button to start or pause playback.
3. Use the '**Next**' button to skip to the next track.
4. Use the '**Previous**' button to go back to the beginning of the current track or to the previous track.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Water:** This device is not waterproof. Keep it away from water and other liquids.

## TROUBLESHOOTING

- **No Power:** Ensure the battery is charged. Connect the speaker to a power source and try again.
- **No Sound:** Check the volume level on both the speaker and the connected external device (if using Line-IN). Ensure the correct mode is selected.
- **Cannot Play from TF Card/USB Drive:** Verify that the storage device is inserted correctly and contains supported audio formats (MP3, WMA, WAV). Try another storage device to rule out a faulty card/drive.
- **Poor FM Radio Reception:** Extend the antenna fully. Try repositioning the speaker to improve signal reception.
- **Distorted Sound:** Reduce the volume. Ensure the audio source is not overdriven. Check for proper connection in Line-IN mode.

## SPECIFICATIONS

Feature	Specification
Model	WS-918
Material	Aluminium
Power Source	Li-ion battery / DC5V
Speaker Output Power	5 Watts
Speaker Unit	2 inch, 4 ohm, 5W
Frequency Response	180 Hz - 18 KHz
Signal-to-Noise Ratio (SNR)	85 dB
Music Format Support	MP3, WMA, WAV
Connectivity Technology	USB
Tuner Technology	FM

Feature	Specification
Radio Bands Supported	FM
Special Features	Portable, Rechargeable
Included Components	Battery
USB Power	3.75 V
Compatible Devices	PC, Notebook, DVD, MP3, MP4
Package Size	12 x 7 x 7 cm
Package Weight	300 g

## WARRANTY AND SUPPORT

Information regarding warranty coverage and customer support for the WS-918 Radio Multimedia Stereo Speaker was not provided in the product details. Please refer to your purchase documentation or contact the retailer for specific warranty terms and support options.