

Ghostbusters E9563

Ghostbusters Ecto-1 Playset (Model E9563) Instruction Manual

Brand: Ghostbusters | Model: E9563

[Instructions](#) [Introduction](#) [Package Contents](#) [Setup & Assembly](#) [Operating](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Safety Information](#) [Support](#)

1. INTRODUCTION

Welcome to the world of Ghostbusters! This manual provides essential information for the assembly, operation, and care of your Ghostbusters Ecto-1 Playset, Model E9563. Designed for children aged 4 and up, this playset allows for imaginative play, recreating scenes from the Ghostbusters: Afterlife movie.

The Ecto-1 is a highly detailed replica featuring moving wheels, opening doors, and a unique blaster seat that swings out for dynamic ghost-busting action. It is compatible with Ghostbusters figures (sold separately) to enhance your play experience.

2. PACKAGE CONTENTS

Please ensure all the following items are present in your package:

- 1 x Ecto-1 Vehicle Playset
- 1 x Blaster Accessory
- 1 x Projectile
- 1 x Mobile Ghost Trap Accessory



Image 1: The Ghostbusters Ecto-1 Playset with its included accessories, including the blaster and mobile ghost trap.

3. SETUP & ASSEMBLY

The Ecto-1 Playset requires minor assembly and sticker application before play. Adult supervision is recommended during this process.

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Apply Stickers:** Refer to the included sticker sheet and placement guide (if provided) to apply decorative stickers to the Ecto-1 vehicle. Ensure surfaces are clean and dry for best adhesion.
3. **Attach Blaster Accessory:** The blaster accessory attaches to the designated slot on the roof of the Ecto-1. Ensure it clicks securely into place.
4. **Prepare Mobile Ghost Trap:** The mobile ghost trap accessory is ready for use out of the box.
5. **Install Projectile:** Insert the projectile into the front of the blaster accessory until it is seated firmly.



Image 2: The blaster accessory attached to the Ecto-1, with the mobile ghost trap accessory shown separately.

4. OPERATING INSTRUCTIONS

Engage in exciting Ghostbusters adventures with your Ecto-1 Playset:

- **Moving Wheels:** The Ecto-1 features free-rolling wheels, allowing it to be pushed across surfaces for dynamic play.
- **Opening Doors:** The side doors of the Ecto-1 can be opened to place Ghostbusters figures (sold separately) inside the vehicle.



Image 3: The Ecto-1 with its side doors open, ready for figures to be placed inside.

- **Blaster Seat Action:** The blaster seat located at the rear of the vehicle can be swung out for an action pose. Position a Ghostbusters figure (sold separately) in the seat for ghost-busting scenarios.
- **Projectile Launch:** To launch the projectile, ensure it is properly loaded into the blaster. Press the trigger mechanism on the blaster to fire the projectile. *Always aim away from faces and eyes.*



Image 4: Demonstrating the projectile launch feature from the Ecto-1's blaster.

- **Mobile Ghost Trap:** Use the mobile ghost trap accessory to capture imaginary ghosts. It can be stored within the Ecto-1 or carried by figures.

5. MAINTENANCE

Proper care will ensure the longevity of your Ecto-1 Playset:

- **Cleaning:** Wipe the playset with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the playset in a cool, dry place away from direct sunlight to prevent material degradation.
- **Part Reattachment:** In case small parts like doors or accessories detach during play, they are designed to be reattached. Carefully align the part with its connection point and gently press until it snaps back into place. Avoid excessive force.

6. TROUBLESHOOTING

Issue	Possible Cause	Solution
-------	----------------	----------

Issue	Possible Cause	Solution
Doors or accessories detach easily.	Normal wear and tear during active play; parts are designed to be removable for safety and reattachment.	Gently reattach the detached part by aligning it with its hinge or connection point and pressing firmly until it clicks into place.
Projectile does not launch.	Projectile not fully inserted into the blaster; trigger mechanism not fully engaged.	Ensure the projectile is pushed all the way into the blaster. Press the trigger firmly.

7. SPECIFICATIONS

Feature	Detail
Model Number	E9563
Product Dimensions	3.54 x 15.51 x 10 inches
Item Weight	1.34 pounds
Manufacturer Recommended Age	4 years and up
Batteries Required	None (The product description and features do not indicate any electronic components requiring batteries.)
Manufacturer	Hasbro
Release Date	January 1, 2021

8. SAFETY INFORMATION

Please observe the following safety guidelines:

- **Choking Hazard:** Small parts may be generated. Not for children under 3 years. Recommended for ages 4 and up.
- **Projectile Safety:** Do not aim projectile at eyes or face. Use only projectiles supplied with this toy. Do not modify projectiles or projectile launcher.
- **Adult Supervision:** Adult supervision is recommended during play, especially during initial assembly and projectile use.
- **Product Integrity:** Do not attempt to disassemble the product beyond the intended removable parts.

9. WARRANTY AND SUPPORT

This product is manufactured by Hasbro. For customer support, inquiries regarding parts, or warranty information, please contact Hasbro customer service directly. Visit the official Hasbro website or refer to the contact information provided on the product packaging for assistance.

Please retain this instruction manual for future reference.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question