

[Manuals.plus](#) /

› [Ghostbusters](#) /

› Ghostbusters Proton Blaster E9543 Instruction Manual

Ghostbusters E9543

Ghostbusters Proton Blaster E9543 Instruction Manual

Model: E9543

1. INTRODUCTION

This manual provides instructions for the safe and proper use of the Ghostbusters Proton Blaster, Model E9543. This role-play toy allows children to imagine themselves as part of the Ghostbusters team, engaging in ghost-busting adventures.



Image 1.1: The Ghostbusters Proton Blaster E9543. This image displays the complete toy, highlighting its blue body, yellow and black striped handle, and the translucent yellow 'proton stream' element extending from the front.

1.1 Safety Information

WARNING: CHOKING HAZARD – Small parts may be generated. Not for children under 3 years.

Recommended for ages 5 and up. Adult supervision is advised during play.

2. PACKAGE CONTENTS

The Ghostbusters Proton Blaster E9543 package includes:

- 1 x Ghostbusters Proton Blaster Toy (Model E9543)



Image 2.1: The Ghostbusters Proton Blaster E9543 in its original packaging. The packaging features Ghostbusters branding and indicates the recommended age of 5+.

3. SETUP

The Ghostbusters Proton Blaster E9543 is designed for immediate play with minimal setup.

1. **Unboxing:** Carefully remove the Proton Blaster from its packaging. Ensure all packaging materials are discarded safely, especially plastic bags, to prevent choking hazards.
2. **No Assembly Required:** This product comes pre-assembled and does not require any additional assembly.
3. **No Batteries Required:** The Proton Blaster operates without batteries.
4. **Optional Connection to Proton Pack:** For an enhanced role-play experience, the Proton Blaster can be

connected to a separately sold Ghostbusters Proton Pack toy. Refer to the Proton Pack's instruction manual for connection details.



Image 3.1: A child demonstrating the Proton Blaster in conjunction with a Proton Pack (sold separately). This illustrates the potential for integrated play with other Ghostbusters role-play gear.

4. OPERATING INSTRUCTIONS

The Ghostbusters Proton Blaster is designed for imaginative play. Follow these steps to operate the toy:

1. **Hold the Blaster:** Grip the Proton Blaster firmly with both hands, one on the main body and the other on the handle.
2. **Activate Proton Stream:** To simulate a proton blast, twist the front section of the blaster. This action extends

and retracts the flexible 'proton stream' element, creating a dynamic visual effect.

3. **Aim and Play:** Point the blaster towards imaginary ghosts and engage in role-play scenarios.

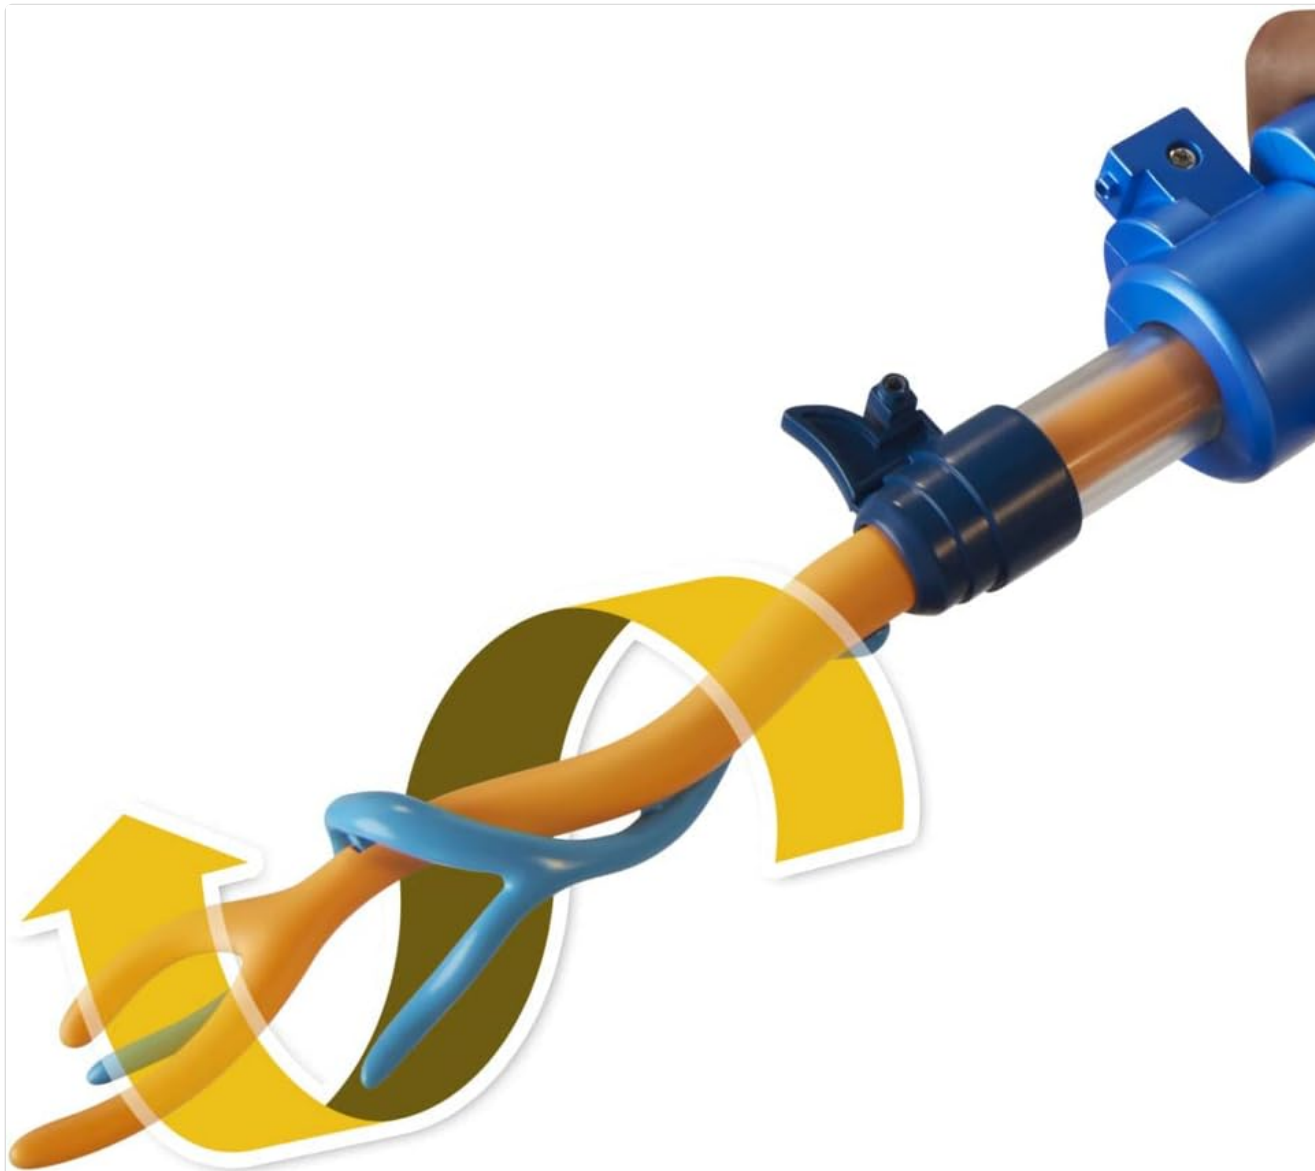


Image 4.1: Detail of the Proton Blaster's front mechanism. The image highlights the twisting action required to extend and retract the 'proton stream' element, indicated by circular arrows.

5. CARE AND MAINTENANCE

To ensure the longevity of your Ghostbusters Proton Blaster, follow these simple care instructions:

- **Cleaning:** Wipe the toy with a soft, damp cloth as needed. Do not use harsh chemicals or abrasive cleaners, as these may damage the plastic.
- **Storage:** Store the Proton Blaster in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Excessive Force:** While durable, avoid bending or twisting parts with excessive force to prevent damage.

6. TROUBLESHOOTING

The Ghostbusters Proton Blaster is a mechanical toy with few moving parts. Most issues can be resolved with simple checks.

- **Proton Stream Not Extending/Retracting Smoothly:**
 - Check for any visible obstructions in the mechanism.
 - Ensure the twisting motion is applied correctly and gently.
- **General Damage:** If the toy appears damaged, discontinue use to prevent further injury or breakage.

7. SPECIFICATIONS

Feature	Detail
Model Number	E9543
Brand	Ghostbusters (Hasbro)
Dimensions (L x W x H)	55.19 cm x 14 cm x 6.71 cm (approx. 21.73 in x 5.51 in x 2.64 in)
Weight	249.48 grams (approx. 8.8 ounces)
Material	Plastic
Recommended Age	5 years and up
Batteries Required	No
Assembly Required	No

8. WARRANTY AND SUPPORT

Specific warranty information for the Ghostbusters Proton Blaster E9543 was not provided in the product details. For warranty inquiries or customer support, please contact the manufacturer, Hasbro, directly through their official website or customer service channels.

Information regarding the availability of spare parts for this product is not provided.

© 2025 Ghostbusters / Hasbro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question