

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Walker Edison](#) /

› [Walker Edison Industrial Farmhouse 70-Inch TV Stand with Sliding Barn Doors \(Model W70ARSMDGW\) Instruction Manual](#)

## Walker Edison W70ARSMDGW

# Walker Edison Industrial Farmhouse 70-Inch TV Stand with Sliding Barn Doors (Model W70ARSMDGW)

Instruction Manual

## INTRODUCTION

This manual provides essential information for the assembly, operation, and maintenance of your Walker Edison Industrial Farmhouse 70-Inch TV Stand. Please read these instructions carefully before beginning assembly or use to ensure proper setup and safe operation. Retain this manual for future reference.

## SAFETY INFORMATION

**Always assemble according to the provided instructions. To prevent tip-over, secure the TV and the stand to the wall using appropriate safety hardware. Keep the sliding doors closed when not in use and keep the area around the stand clear of objects that could pose a hazard if the doors were to open suddenly. Do not place heavy objects on the doors when they are closed.**

## SETUP AND ASSEMBLY

The Walker Edison Industrial Farmhouse TV Stand requires assembly. Please follow the detailed, step-by-step instructions included in the product packaging. Ensure all parts are present before beginning assembly. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

- **Tools Required:** Typically, a Phillips head screwdriver is sufficient. Some steps may benefit from a rubber mallet.
- **Assembly Area:** Choose a spacious, clear area for assembly.
- **Component Identification:** Carefully identify each component using the provided parts list and diagrams.
- **Secure Fasteners:** Ensure all screws, bolts, and cam locks are tightened securely, but do not overtighten to avoid damaging the material.
- **Wall Anchoring:** For safety, it is highly recommended to anchor the TV stand to a wall using the provided anti-tip hardware. This prevents accidental tip-overs, especially in households with children or

pets.



Image 1: Fully assembled Walker Edison Industrial Farmhouse 70-Inch TV Stand in a living room setting, showcasing its grey finish and sliding barn doors. The stand is positioned beneath a wall-mounted television.



Image 2: Rear view of the TV stand, highlighting the integrated cable management features. Circular and semi-circular cutouts are visible on the back panels, designed to facilitate organized routing of power cords and media cables.

## OPERATING INSTRUCTIONS

---

### Sliding Barn Doors

The TV stand features two mesh metal sliding barn doors. These doors operate on a track system, allowing them to move horizontally to cover or reveal different sections of the stand. To open or close a door, gently grasp the handle and slide it along the track. Ensure the path is clear of obstructions.



Image 3: The TV stand with both sliding mesh metal barn doors positioned to reveal the central open shelves and the side storage compartments. This configuration allows access to media devices or decorative items.



Image 4: A direct front view of the TV stand with both sliding doors open, providing a clear look into the interior storage areas and adjustable shelves.

## Adjustable Shelves

The interior shelves are adjustable, allowing you to customize the storage space to fit various media devices, books, or decorative items. To adjust a shelf, remove any items, lift the shelf, and reposition the shelf pins into the desired holes. Ensure all four pins are securely seated before placing items on the shelf.

## Cable Management

The stand includes cable management features on the back panel. Utilize these cutouts to route and organize power cords and media cables, maintaining a tidy appearance and preventing tangles.

## MAINTENANCE

---

### Cleaning

To clean the TV stand, use a soft, damp cloth. Avoid harsh chemicals, abrasive cleaners, or polishes that may damage the finish. For best results, wipe spills immediately.

### General Care

- Periodically check all fasteners to ensure they remain tight.
- Avoid exposing the stand to direct sunlight or extreme temperature changes, which can cause warping or fading.
- Do not place hot items directly on the surface; use coasters or protective pads.

## TROUBLESHOOTING

---

### Wobbly Stand

If the stand feels wobbly after assembly, recheck all connections and ensure all fasteners are securely tightened. Verify that the stand is placed on a level surface. Adjust the adjustable center foot if present and necessary for additional support.

### Sliding Doors Not Moving Smoothly

Check the sliding tracks for any debris or obstructions. Ensure the doors are properly seated on their rollers. A small amount of silicone-based lubricant can be applied to the tracks if needed, but avoid oil-based lubricants that can attract dust.

## SPECIFICATIONS

- **Model Number:** W70ARSMDGW
- **Dimensions (Overall):** 26" H x 70" L x 16" W
- **Cabinet Dimensions:** 19.25" H x 22" L x 15.5" W
- **Open Shelf Dimensions:** 9.5" H x 21.5" L x 15.75" W
- **Accommodates TVs:** Up to 80 inches
- **Weight Capacity:** Up to 250 lbs.
- **Material:** Warp-resistant MDF wood
- **Item Weight:** 81 pounds
- **Color:** Grey
- **UPC:** 840035350646

## WARRANTY AND SUPPORT

### Warranty Information

This product comes with a 30-day limited manufacturer warranty. Please refer to the warranty documentation included with your purchase for specific terms and conditions.

### Customer Support

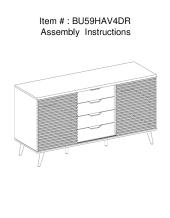
For assistance with assembly, missing parts, or any product-related inquiries, please contact Walker Edison customer support. Refer to the contact information provided in your product packaging or visit the official Walker Edison website.

You may also find helpful resources and support through the retailer where the product was purchased. For Amazon customers, visit the [Walker Edison Store on Amazon](#).

© 2024 Walker Edison. All rights reserved.

### Related Documents - W70ARSMDGW

	<p><a href="#">Walker Edison W58BDSD Assembly Instructions for Modern Farmhouse TV Stand</a></p> <p>Step-by-step assembly instructions for the Walker Edison W58BDSD TV Stand, featuring a modern farmhouse design with double barn doors. Includes detailed parts list, hardware list, and assembly guidance for a smooth setup.</p>
---	---

 <p>Item # : W70SBD Assembly Instructions</p> <p>Walker Edison Please read and retain for the most current instructions, assembly tips, repair &amp; safety information. Or visit our website at <a href="http://www.walkeredison.com">www.walkeredison.com</a> for the latest information. Rev. 02/26/2018 Copyright © 2018 Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p><b><u>Walker Edison W70SBD TV Stand Assembly Instructions</u></b></p> <p>Detailed assembly instructions for the Walker Edison W70SBD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.</p>
 <p>Item # : W584DHDHB Assembly Instructions</p> <p>Walker Edison Please read and retain for the most current instructions, assembly tips, repair &amp; safety information. Or visit our website at <a href="http://www.walkeredison.com">www.walkeredison.com</a> for the latest information. Rev. 02/26/2018 Copyright © 2018 Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p><b><u>Walker Edison W584DHDHB Assembly Instructions   Furniture Setup Guide</u></b></p> <p>Detailed assembly instructions for the Walker Edison W584DHDHB furniture item. Learn how to assemble your new cabinet with clear steps, parts list, and hardware guide. Includes general assembly tips for this Dark Walnut Classic Glass Door Universal TV Stand.</p>
 <p>Item # : AF32ALXD Assembly Instructions</p> <p>Walker Edison Please read and retain for the most current instructions, assembly tips, repair &amp; safety information. Or visit our website at <a href="http://www.walkeredison.com">www.walkeredison.com</a> for the latest information. Rev. 02/26/2018 Copyright © 2018 Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p><b><u>Walker Edison AF32ALXD Modern Farmhouse Sliding Barn Door Accent Console Assembly Instructions</u></b></p> <p>Comprehensive assembly guide for the Walker Edison AF32ALXD Modern Farmhouse Sliding Barn Door Accent Console. Includes parts list, hardware list, step-by-step instructions, and detailed textual descriptions of diagrams.</p>
 <p>Item # : W70CSGD Assembly Instructions</p> <p>Walker Edison Please read and retain for the most current instructions, assembly tips, repair &amp; safety information. Or visit our website at <a href="http://www.walkeredison.com">www.walkeredison.com</a> for the latest information. Rev. 02/26/2018 Copyright © 2018 Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p><b><u>Walker Edison W70CSGD TV Stand Assembly Instructions</u></b></p> <p>Detailed assembly instructions for the Walker Edison W70CSGD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.</p>
 <p>Item # : BU59HAV4DR Assembly Instructions</p> <p>Walker Edison Please read and retain for the most current instructions, assembly tips, repair &amp; safety information. Or visit our website at <a href="http://www.walkeredison.com">www.walkeredison.com</a> for the latest information. Rev. 02/26/2018 Copyright © 2018 Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p><b><u>Walker Edison BU59HAV4DR Assembly Instructions for Sideboard</u></b></p> <p>Comprehensive assembly guide for the Walker Edison BU59HAV4DR sideboard, detailing parts, hardware, and step-by-step instructions for a safe and correct build.</p>

