

NOVETE VC0010US

NOVETE VC0010US Cordless Stick Vacuum Charging Adapter User Manual

Model: VC0010US

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your NOVETE Charging Adapter, specifically designed for the NOVETE VC0010US Cordless Stick Vacuum. Please read this manual thoroughly before using the product and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- **Read all instructions:** Before using the charging adapter, read all safety and operating instructions.
- **Indoor use only:** This adapter is designed for indoor use in dry locations. Do not expose to rain or moisture.
- **Proper voltage:** Ensure the power outlet voltage matches the adapter's specifications.
- **Avoid damage:** Do not use the adapter if the cord or plug is damaged. Do not pull the cord to disconnect from the outlet.
- **Supervision:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Unplug when not in use:** Always unplug the adapter from the power outlet when not in use or before cleaning.
- **Use only with specified device:** This adapter is specifically designed for the NOVETE VC0010US Cordless Stick Vacuum. Using it with other devices may cause damage or injury.

3. PRODUCT OVERVIEW

The NOVETE Charging Adapter is a compact power supply unit designed to recharge the battery of your VC0010US Cordless Stick Vacuum. It features a standard wall plug and a DC output connector.



Figure 1: NOVETE VC0010US Cordless Stick Vacuum Charging Adapter. This image shows the black charging adapter with a standard US-style two-prong plug on one end and a coiled black DC power cord terminating in a barrel connector on the other end.

Components:

- **A. AC Plug:** Connects to a standard wall power outlet.
- **B. Adapter Body:** Houses the power conversion circuitry.
- **C. DC Output Cable:** Connects to the charging port of the vacuum cleaner.
- **D. DC Barrel Connector:** The tip that plugs into the vacuum.

4. SETUP AND CHARGING

1. **Prepare the Vacuum:** Ensure your NOVETE VC0010US Cordless Stick Vacuum is turned off before connecting the charger.
2. **Connect the Adapter to Vacuum:** Insert the DC barrel connector (D) firmly into the charging port on your NOVETE VC0010US Cordless Stick Vacuum.
3. **Connect to Power Outlet:** Plug the AC plug (A) of the adapter into a standard, functional wall power outlet.
4. **Charging Indicator:** The vacuum cleaner (not the adapter) typically has an indicator light that will illuminate or change color to show that charging is in progress. Refer to your vacuum's manual for specific charging indicator behavior.
5. **Full Charge:** Allow the vacuum to charge until the indicator light signals a full charge. Charging times may vary.
6. **Disconnect:** Once fully charged, first unplug the adapter from the wall outlet, then disconnect the DC connector from the vacuum.

Note: Do not leave the adapter plugged in indefinitely after the vacuum is fully charged to prolong battery life and adapter longevity.

5. MAINTENANCE AND STORAGE

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Wipe the adapter body with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Cord Care:** Avoid bending or crimping the power cord excessively. Do not wrap the cord tightly around the adapter body.

- **Storage:** Store the adapter in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it out of reach of children and pets.

6. TROUBLESHOOTING

Problem: Vacuum is not charging.

- **Check Power Outlet:** Ensure the wall outlet is functional by plugging in another device.
- **Check Connections:** Verify that both the AC plug and the DC barrel connector are securely plugged into the wall outlet and the vacuum's charging port, respectively.
- **Inspect Adapter and Cord:** Check for any visible damage to the adapter body or the power cord. If damaged, discontinue use and replace the adapter.
- **Vacuum Battery:** The issue might be with the vacuum's battery or charging circuit. Refer to your NOVETE VC0010US vacuum cleaner's manual for troubleshooting battery-related issues.

Problem: Adapter feels unusually hot.

- It is normal for charging adapters to become slightly warm during operation. However, if the adapter feels excessively hot to the touch, immediately unplug it from the wall and the vacuum.
- Ensure adequate ventilation around the adapter. Do not cover it while charging.
- If the problem persists, discontinue use and contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	NOVETE
Model	VC0010US Charging Adapter
Wattage	10 watts
Material	Plastic
AC Plug Type	US Standard 2-prong (as pictured)
DC Output Connector	Barrel connector
Package Dimensions	8.13 x 6.86 x 4.32 cm
Weight	18 g
Compliance	CE, RoHS

Specifications are subject to change without notice.

8. WARRANTY AND SUPPORT

Warranty: This product is covered by a limited manufacturer's warranty. For specific warranty terms, duration, and conditions, please refer to the warranty card included with your original product packaging or visit the official NOVETE website. Proof of purchase may be required for warranty claims.

Customer Support: If you encounter any issues or have questions regarding your NOVETE Charging

Adapter, please contact NOVETE customer support. Contact information can typically be found on the product packaging, the official NOVETE website, or through your retailer.

For the most up-to-date support information, please visit: www.novete.com (*Note: This is a placeholder URL as no specific support link was provided.*)