



Manuals.plus /

› Topiky /

› Topiky KX-T888CID FSK/DTMF Corded Telephone User Manual

Topiky KX-T888CID

Topiky KX-T888CID FSK/DTMF Corded Telephone User Manual

Model: KX-T888CID

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Topiky KX-T888CID corded telephone. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage.

SAFETY INFORMATION

Observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Do not use this product near water, such as a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- Avoid using the telephone during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and telephone line cord provided with the unit.
- Do not disassemble the unit. Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Verify that your package contains the following items:

- Topiky KX-T888CID Corded Telephone Unit
- Coiled Handset Cord
- Telephone Line Cord (RJ11)



Image: The Topiky KX-T888CID corded telephone unit is shown alongside two telephone line cords, indicating the components included in the package for connection.

PRODUCT FEATURES

- **LCD Screen:** Equipped with an LCD screen to display month, day, hour, and minute.
- **Caller ID Support:** Supports FSK and DTMF dual system for incoming call number display.
- **Call Memory:** Features 38 memory slots for searching, recalling, and deleting previous numbers.
- **Reliable Performance:** Designed for good performance, reliability, and stability, ensuring a long service life.



**Equipped with LCD screen
for month, day, hour, and minute
display.**

**38 sets of memory
Previous call number search,
call back and deleting.**

Image: A close-up of the Topiky KX-T888CID telephone highlights its LCD screen and the text describing its 38-set memory for call search, recall, and deletion, along with time display capabilities.

Support FSK and DTMF dual system and incoming call number display.



Image: The Topiky KX-T888CID telephone is displayed, emphasizing its support for FSK and DTMF dual systems and the incoming call number display feature on its screen.

SETUP

1. **Connect the Handset:** Plug one end of the coiled handset cord into the handset and the other end into the jack labeled with a handset icon on the side of the telephone base.
2. **Connect the Telephone Line:** Plug one end of the telephone line cord into the jack labeled with a telephone line icon on the back of the telephone base. Plug the other end into your wall telephone jack.
3. **Placement:** Place the telephone on a flat, stable surface or mount it on a wall using the integrated wall-mount slots (if applicable).

OPERATING INSTRUCTIONS

Making a Call

1. Lift the handset.
2. Dial the desired telephone number using the keypad.
3. Wait for the call to connect.
4. To end the call, place the handset back on the cradle.

Receiving a Call

1. When the telephone rings, lift the handset.

2. To end the call, place the handset back on the cradle.

Using Caller ID

When an incoming call is received, the caller's number (and name, if available and subscribed to service) will be displayed on the LCD screen. This feature requires subscription to Caller ID service from your telephone service provider.

Accessing Call Memory (38 Slots)

1. Press the "UP" or "DOWN" buttons (usually located near the LCD screen) to scroll through the stored incoming call numbers.
2. To redial a number from the memory, select the desired number and lift the handset, then press "REDIAL" or wait for the phone to automatically dial.
3. To delete a number from memory, select the number and press the "DEL" button.

Redial Function

To redial the last number called, lift the handset and press the "REDIAL" button.

Mute Function

During a call, press the "MUTE" button to temporarily silence your microphone. The other party will not hear you. Press "MUTE" again to resume speaking.

**Good performance,
reliable and stable,
bringing you great using experience.**



Image: The Topiky KX-T888CID telephone is shown in an upright position, highlighting its keypad and LCD display, which are central to its operational functions.

MAINTENANCE

- **Cleaning:** Wipe the telephone with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the telephone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cord Care:** Avoid tangling or stretching the telephone and handset cords excessively to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line cord is disconnected or faulty.	Check all connections. Try a different telephone line cord.
Cannot hear caller / Caller cannot hear me	Handset cord is disconnected or faulty; Mute function is active.	Ensure handset cord is securely connected. Press the MUTE button to deactivate.
Caller ID not displaying	Not subscribed to Caller ID service; Service issue.	Contact your telephone service provider to ensure Caller ID service is active.
LCD screen is blank	No power (if applicable, though this model is line-powered); Unit malfunction.	Ensure telephone line is active. If problem persists, contact support.

SPECIFICATIONS

- **Brand:** Topiky
- **Model:** KX-T888CID
- **Color:** Black
- **Caller ID System:** FSK/DTMF Dual System
- **Display:** LCD (Month, Day, Hour, Minute)
- **Call Memory:** 38 Incoming Call Slots
- **Manufacturer Reference:** Topikyg03f8sc7e2-11
- **ASIN:** B081YZ7VT1
- **Country of Origin:** China
- **Spare Parts Availability:** Information unavailable
- **Software Updates Guaranteed Until:** Information not available

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase.