

Milly Mally 5901761125047

Milly Mally Grande 2-in-1 Tricycle Instruction Manual

Model: 5901761125047

1. INTRODUCTION

The Milly Mally Grande 2-in-1 Tricycle is designed to adapt to your child's developmental stages, functioning as both a balance bike and a tricycle with pedals. Its robust construction and thoughtful design ensure stability, safety, and comfort for children learning to ride.

2. SAFETY INFORMATION

- **Age Range:** Suitable for children aged 12 months and older.
- **Maximum Load:** Do not exceed a maximum weight of 25 kg.
- **Adult Supervision:** Always ensure children are supervised by an adult while using the tricycle.
- **Protective Gear:** Encourage your child to wear appropriate protective gear, such as a helmet, knee pads, and elbow pads.
- **Handlebar Limiter:** The handlebar features a turning limiter to prevent excessive steering, enhancing stability and preventing falls.
- **Surface Use:** Use on flat, even surfaces. Avoid steep inclines, uneven terrain, or public roads.
- **European Safety Standards:** This product complies with European safety standards.

3. PRODUCT FEATURES

- **2-in-1 Functionality:** Easily converts from a three-wheeled balance bike to a tricycle with pedals.
- **Removable Pedals:** Pedals on the front wheel can be easily attached and detached. A pedal holder is integrated into the steering column for storage.
- **Foldable Steel Frame:** The robust steel frame is foldable, allowing for quick and convenient transport and storage.
- **Non-Slip Handles:** Soft, non-slip rubber grips with covers protect children's hands.
- **Foam Wheels:** Bearing-equipped foam wheels provide a smooth and comfortable ride, suitable for both indoor and outdoor use. Wide wheel spacing ensures exceptional stability and safety.

4. ASSEMBLY AND CONVERSION

The Milly Mally Grande tricycle requires some assembly. Follow these steps for initial setup and conversion between modes.

4.1. Initial Assembly

1. Unpack all components from the box.
2. Attach the handlebars to the main frame. Ensure they are securely fastened.
3. Attach the seat to the frame. Adjust the seat height if necessary (though this model may have a fixed seat height).
4. Ensure all connections are tight and secure before use.

4.2. Converting to Tricycle Mode (with pedals)

1. Locate the pedals.
2. Insert the pedals into the designated slots on the front wheel. Ensure they click into place or are securely tightened.
3. Verify that the pedals rotate freely.

4.3. Converting to Balance Bike Mode (without pedals)

1. To remove the pedals, press the release buttons (if present) or unscrew them from the front wheel.
2. Store the removed pedals in the pedal holder located in the steering column to prevent loss.

4.4. Folding for Transport/Storage

The tricycle features a foldable frame and legs with wheels for quick folding.

1. Identify the folding mechanisms on the frame and wheel legs.
2. Follow the instructions to release the locking mechanisms and fold the tricycle into a compact form.



Figure 1: Exploded view of components for assembly.



Figure 2: Conversion steps between balance bike, tricycle, and folded modes.

5. OPERATING INSTRUCTIONS

5.1. Balance Bike Mode

- Ensure pedals are removed and stored.
- Instruct the child to sit on the seat with both feet flat on the ground.
- The child propels the bike by pushing off the ground with their feet, learning balance and coordination.



Figure 3: Tricycle in Balance Bike Mode.

5.2. Tricycle Mode

- Ensure pedals are securely attached.
- Instruct the child to sit on the seat and place their feet on the pedals.
- The child propels the tricycle by pedaling, developing leg strength and motor skills.
- The handlebar limiter helps maintain control and prevents sharp turns.



Figure 4: Tricycle in Tricycle Mode.

6. MAINTENANCE

- **Cleaning:** Wipe the tricycle with a damp cloth and mild soap. Do not use abrasive cleaners.
- **Inspection:** Regularly check all screws, bolts, and connections to ensure they are tight and secure.
- **Wheel Condition:** Inspect the foam wheels for any damage or excessive wear.
- **Storage:** Store the tricycle in a dry place, away from direct sunlight and extreme temperatures, to prolong its lifespan.

7. SPECIFICATIONS

Feature	Detail
Model Number	5901761125047
Product Dimensions (L x W x H)	63 x 29 x 50 cm
Weight	3.5 kg
Main Material	Alloy Steel

Feature	Detail
Color	Pink
Recommended Age	12 months and older
Maximum Load	25 kg
Assembly Required	Yes



Figure 5: Product dimensions (Height and Seat Height).



Figure 6: Product dimensions (Length and Handlebar Width).