

## Conair CR400

# Conair Unbound CR400 Cordless Titanium Multi-Styler User Manual

Model: CR400

## 1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **DANGER:** Keep away from water. Do not use while bathing or in a shower.
- **WARNING:** To reduce the risk of burns, electrocution, fire, or injury to persons:
- Do not leave the appliance unattended when plugged in or turned on.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water.
- Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.
- Never use while sleeping.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- The appliance is hot when in use. Do not let heated surfaces touch eyes or bare skin.
- Do not place the appliance directly on any surface while it is operating or cooling down.
- Never use on hair extensions.
- Do not operate with a voltage converter.
- This appliance is not a toy. Keep away from children.

### Battery Safety:

- This product contains lithium-ion batteries. Do not expose to extreme heat or fire.
- Do not short-circuit, disassemble, or damage the battery.
- Dispose of batteries properly according to local regulations.
- Individual airline restrictions may apply to devices with lithium-ion batteries. Check with your carrier before traveling.

## 2. PRODUCT OVERVIEW

The Conair Unbound CR400 is a cordless, rechargeable 2-in-1 multi-styler featuring titanium plates for versatile hair styling. It allows you to create sleek straight styles or bouncy curls and waves without the restriction of a cord.

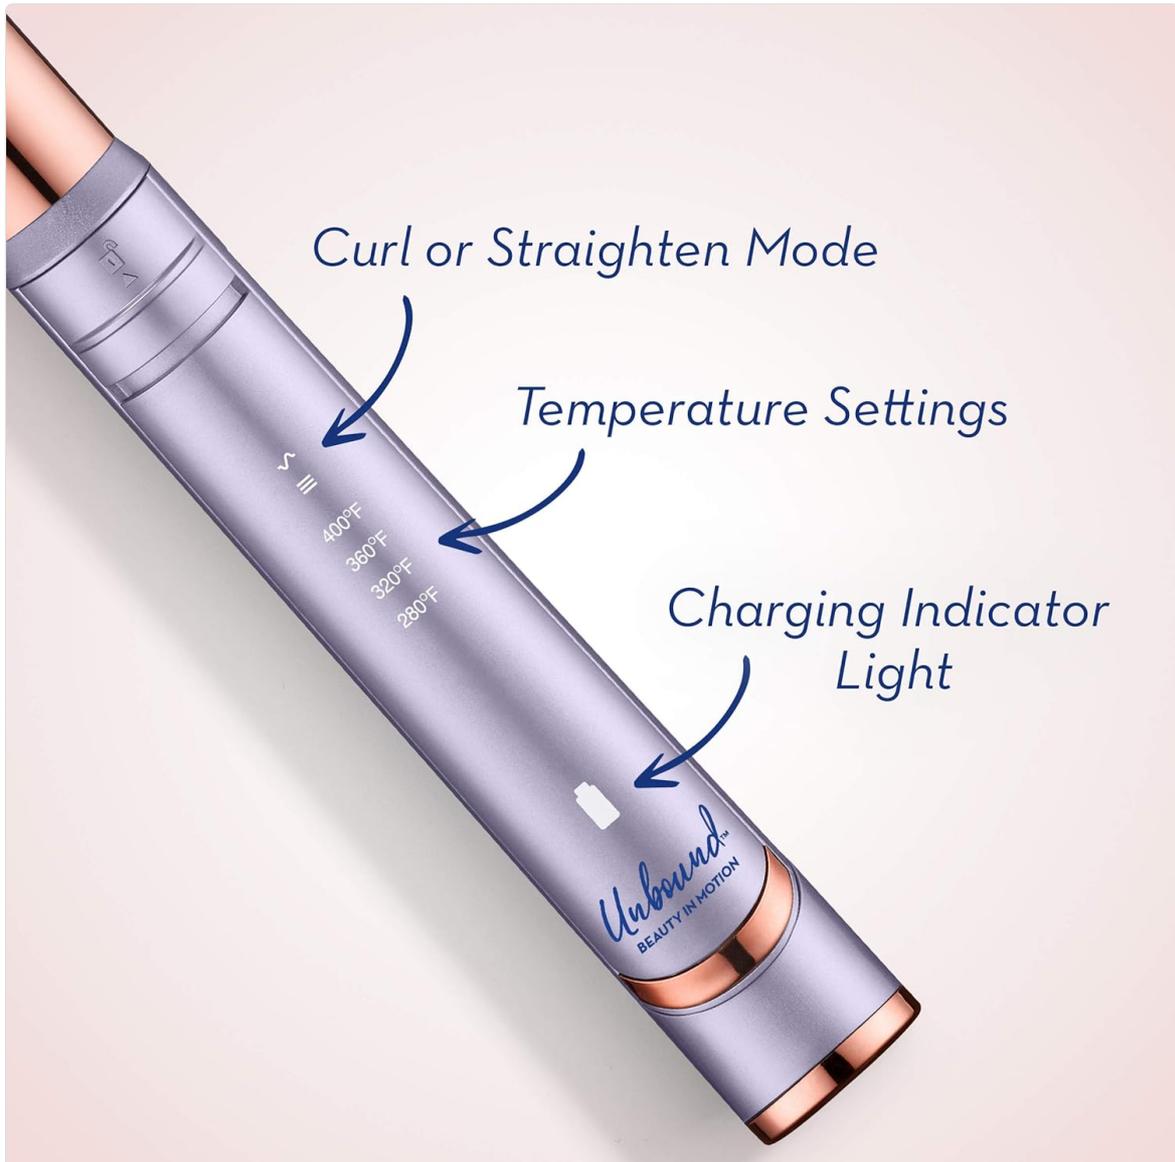


Image: The Conair Unbound Multi-Styler highlighting its key features: a switch for curl or straighten mode, LED indicators for temperature settings (280°F, 320°F, 360°F, 400°F), and a charging indicator light.

## 3. SETUP AND CHARGING

### Initial Charge

Before first use, fully charge the multi-styler overnight. This ensures optimal battery performance.



Image: The multi-styler connected to a USB charging cable via its Micro USB input (5V 2.4A MAX). The text indicates up to 25 minutes of cord-free runtime and the need for overnight charging before first use.

### Charging Process

1. Connect the removable USB charging cable to the multi-styler's charging port.
2. Plug the other end of the USB cable into a compatible USB power source (e.g., wall adapter, computer USB port). A 2.4 amp adapter is recommended for faster charging.
3. The charging indicator light will flash during charging.
4. The unit is fully charged when the battery light stops flashing and remains solid.

**Note:** Charge time may vary depending on the adapter and power source used. The multi-styler provides up to 25 minutes of cord-free runtime, which can vary based on heat setting and hair type.

### Handle Adjustment

- **For Straight Styles:** Unlock the handle to allow the plates to open and close freely.
- **For Wavy/Curly Looks:** Lock the handle to keep the plates closed, transforming the tool into a curling wand.


## 4. OPERATING INSTRUCTIONS

### Powering On and Setting Temperature

1. Press and hold the power button to turn on the multi-styler.
2. Press the power button again to cycle through the styling modes (straightening or curling).
3. Use the +/- buttons to select your desired temperature from the 4 available heat settings (up to 400°F).
4. Allow approximately 60 seconds for the tool to heat up to the selected temperature.

## Styling Hair

The titanium plates and outer barrel are designed to glide smoothly through hair for polished results.

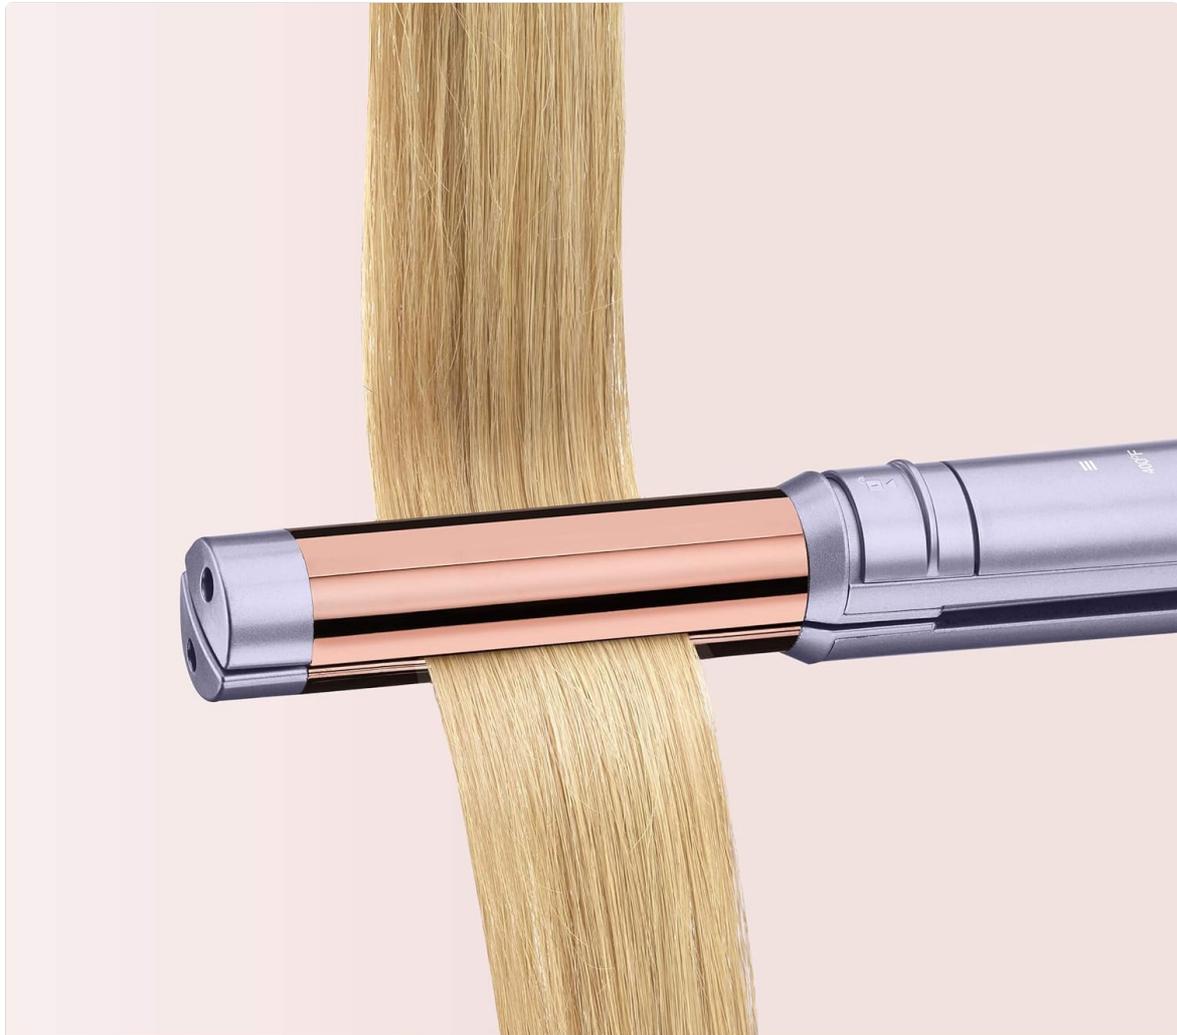

**TITANIUM PLATES** GLIDE THROUGH YOUR HAIR FOR POLISHED RESULTS

Image: A close-up view of the multi-styler's titanium plates actively straightening a section of blonde hair, demonstrating its function for sleek styles.



**CURL OR STRAIGHTEN**

**TITANIUM PLATES AND OUTER BARREL HEAT UP TO CREATE YOUR DESIRED LOOK**

Image: The multi-styler shown in two states: first, with hair wrapped around the closed barrel for curling, and second, with hair between the open plates for straightening. This illustrates its dual functionality.

- **For Straightening:** Ensure the handle is unlocked. Take a small section of dry hair, place it between the plates, and gently glide the styler from roots to ends.
- **For Curling/Waving:** Ensure the handle is locked. Take a small section of dry hair, wrap it around the heated barrel, hold for a few seconds, then release.

**Expert Tip:** On a low heat setting, use the outer barrel to smooth flyaways for a polished finish.



**EXPERT TIP:** ON A LOW SETTING, USE THE OUTER BARREL TO SMOOTH FLYAWAYS

Image: A close-up of the multi-styler's outer barrel being used to smooth a section of blonde hair, demonstrating the expert tip for flyaways.

### Automatic Shut-off

The multi-styler features an auto-off function. It will automatically shut off after 15 minutes of inactivity to preserve battery life and for safety.

## 5. MAINTENANCE

---

### Cleaning

Ensure the multi-styler is turned off, unplugged (if charging), and completely cool before cleaning. Wipe the plates and outer barrel with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.

### Storage

Store the multi-styler in a cool, dry place. Do not wrap the cord around the appliance, as this can damage the cord. The compact design allows it to fit easily in a handbag or gym bag for travel.



Image: The multi-styler positioned on a desk next to a backpack, emphasizing its compact size and suitability for on-the-go styling and travel.

## 6. TROUBLESHOOTING

- **Appliance not heating up or barely warm:** Ensure the unit is fully charged. Verify the correct temperature setting has been selected. Allow sufficient time (approx. 60 seconds) for the styler to reach the desired temperature.
- **Short battery life:** Battery runtime is up to 25 minutes and can vary based on the selected heat setting and hair type. Ensure the unit is fully charged before use. If battery life significantly degrades over time, the internal batteries may be nearing the end of their lifespan.
- **Hair getting caught or pulled:** Ensure hair is detangled before styling. Use small, manageable sections of hair. Check for any debris or damage on the styling plates or barrel that might snag hair.
- **Styler turns off unexpectedly:** The unit has an automatic shut-off feature after 15 minutes of inactivity to conserve battery. If it turns off during active use, ensure it is fully charged.

## 7. SPECIFICATIONS

Feature	Detail
---------	--------

Model Number	CR400
Brand	Conair
Product Dimensions	3 x 4.5 x 12.25 inches
Item Weight	1 Pound
Power Source	Battery Powered (2 Lithium Ion batteries included)
Max Temperature Setting	400°F (204.4°C)
Heat Settings	4
Heater Surface Material	Titanium
Hair Type Compatibility	All
Product Benefits	Curling, Straightening
UPC / GTIN	074108414595

## 8. PRODUCT VIDEO GUIDE

Watch this official video for a visual guide on how to get started with your Conair Unbound Multi-Styler, including charging and basic operation.

Your browser does not support the video tag.

Video: An instructional video titled "CR400 How To Video" by Conair LLC, demonstrating the initial setup and usage of the Conair Unbound Cordless Titanium Multi-Styler.

## 9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Conair customer service directly. Keep your purchase receipt as proof of purchase.